#### **NOTICE**

This manual was written by the Yamaha Motor Company primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to put an entire mechanic's education into one manual, so it is assumed that persons using this book to perform maintenance and repairs on Yamaha motorcycle has a basic understanding of the mechanical concepts and procedures inherent in motorcycle repair technology. Without such knowledge, attempted repairs or service to this model may render it unfit to use and/or unsafe.

Yamaha Motor Cmpany, Ltd. is continually striving to improve all models manufactured by Yamaha. Modifications and significant changes in specifications or procedures will be forwarded to all Authorized yamaha dealers and will, where applicable, appear in future editions of this manual.

NOTE: -

PARTICURARLY IMPORTANT INFORMATION

This materials distinguished by the following notation.

The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

Failure to follow WARNING instructions could result in severe injury or death to the motorcycle operator, a bystander or a person checking or repairing the mo-

torcycle.

**CAUTION:** A CAUTION indicates special precautions that must be taken to avoid damage

to the motorcycle.

**NOTE:** A NOTE provides key information to make procedures easier or clearer.


#### **HOW TO USE THIS MANUAL**


This manual is intended as a handy, easy-to-read reference book for the mechanic. Comprehensive explanations of all installation, removal, disassembly, assembly, repair and check procedures are laid out with the individual steps in sequential order.

1 The manual is divided into chapters. An abbreviation and symbol in the upper right corner of each page indicate the current chapter.

Refer to "SYMBOLS".

- ② Each chapter is divided into sections. The current section title is shown at the top of each page, except in Chapter 3 ("PERIODIC CHECKS AND ADJUSTMENTS"), where the sub-section title(-s) appears.
- 3 Sub-section titles appear in smaller print than the section title.
- ④ To help identify parts and clarify procedure steps, there are exploded diagrams at the start of each removal and disassembly section.
- ⑤ Numbers are given in the order of the jobs in the exploded diagram. A circled number indicates a disassembly step.
- ⑥ Symbols indicate parts to be lubricated or replaced. Refer to "SYMBOLS".
- A job instruction chart accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc.
- (8) Jobs requiring more information (such as special tools and technical data) are described sequentially.

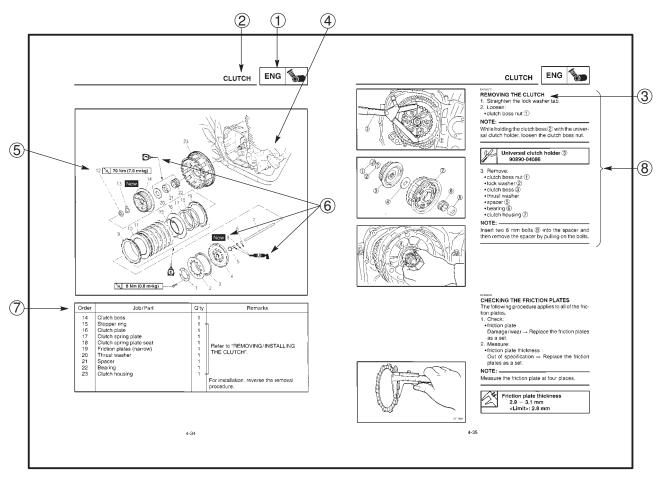

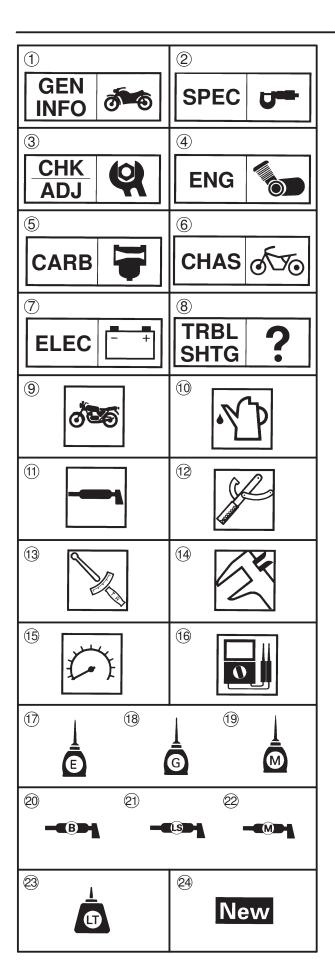

#### **SYMBOLS**

The following symbols are not relevant to every vehicle.

Symbols ① to ⑧ indicate the subject of each chapter.

- (1) General information
- (2) Specifications
- 3 Periodic checks and adjustments
- 4 Engine
- (5) Carburetor(-s)
- (6) Chassis
- (7) Electrical system
- 8 Troubleshooting

Symbols 9 to 16 indicate the following.

- (9) Serviceable with engine mounted
- 10 Filling fluid
- (11) Lubricant
- (12) Special tool
- (13) Tightening torque
- (14) Wear limit, clearance
- (15) Engine speed
- 16 Electrical data

Symbols 17 to 22 in the exploded diagrams indicate the types of lubricants and lubrication points.


- (17) Engine oil
- (18) Gear oil
- (19) Molybdenum disulfide oil
- 20 Wheel bearing grease
- 21) Lithium soap base grease
- 22 Molybdenum disulfide grease

Symbols 23 to 24 in the exploded diagrams indicate the following:

- 23 Apply locking agent (LOCTITE®)
- 24) Replace the part

# **INDEX**

GENERAL INFORMATION	GEN INFO
SPECIFICATIONS	SPEC 2
PERIODIC INSPECTION AND ADJUSTMENTS	CHK ADJ 3
ENGINE OVERHAUL	ENG 4
CARBURETORS	CARB 5
CHASSIS	chas 6
ELECTRICAL	ELEC 7
TROUBLESHOOTING	? TRBL SHTG

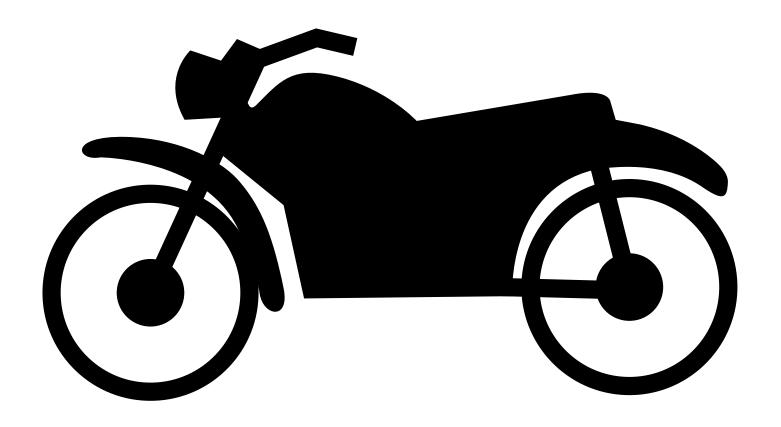

# GENINEO






# CHAPTER 1. GENERAL INFORMATION

MOTORCYCLE IDENTIFICATION 1-1
VEHICLE IDENTIFICATION NUMBER
MODEL CODE 1-1
IMPORTANT INFORMATION 1-2
PREPARATION FOR REMOVAL AND DISASSEMBLY 1-2
REPLACEMENT PARTS 1-2
GASKETS, OIL SEALS AND O-RINGS 1-2
LOCK WASHERS/PLATES AND COTTER PINS
BEARINGS AND OIL SEALS 1-3
CIRCLIPS
CHECKING OF THE CONNECTIONS
SPECIAL TOOLS 1-5

#### **MOTORCYCLE IDENTIFICATION**



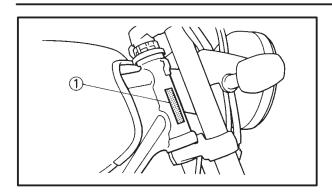


EAS00014

# GENERAL INFORMATION MOTORCYCLE IDENTIFICATION

EAS00017

#### **VEHICLE IDENTIFICATION NUMBER (For E)**

The vehicle identification number ① is stamped into the right side of the steering head.

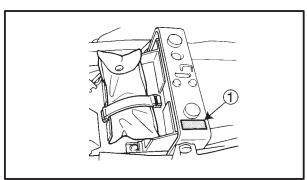


EAS00018

#### **MODEL CODE**

The model code label ① is affixed to the frame. This information will be needed to order spare parts.

#### IMPORTANT INFORMATION



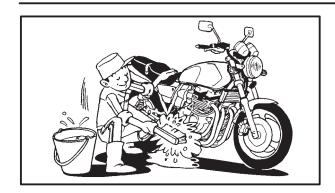

EAS00020

# IMPORTANT INFORMATION PREPARATION FOR REMOVAL AND DISASSEMBLY

1. Before removal and disassembly, remove all dirt, mud, dust, and foreign material.




- 2. Use only the proper tools and cleaning equipment.
  - Refer to "SPECIAL TOOLS".
- When disassembling, always keep mated parts together. This includes gears, cylinders, pistons and other parts that have been "mated" through normal wear. Mated parts must always be reused or replaced as an assembly.
- 4. During disassembly, clean all of the parts and place them in trays in the order of disassembly. This will speed up assembly and allow for the correct installation of all parts.
- 5. Keep all parts away from any source of fire.

EAS00021

#### REPLACEMENT PARTS

Use only genuine Yamaha parts for all replacements. Use oil and grease recommended by Yamaha for all lubrication jobs. Other brands may be similar in function and appearance, but inferior in quality.

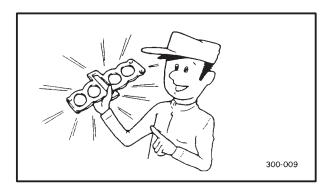


EAS00022

#### GASKETS, OIL SEALS AND O-RINGS

- When overhauling the engine, replace all gaskets, seals and O-rings. All gasket surfaces, oil seal lips and O-rings must be cleaned.
- 2. During reassembly, properly oil all mating parts and bearings and lubricate the oil seal lips with grease.

#### IMPORTANT INFORMATION




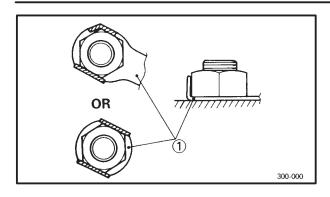

EAS00023

# LOCK WASHERS/PLATES AND COTTER PINS


After removal, replace all lock washers/plates ① and cotter pins. After the bolt or nut has been tightened to specification, bend the lock washer tabs and the cotter pin ends along a flat of the bolt or nut.

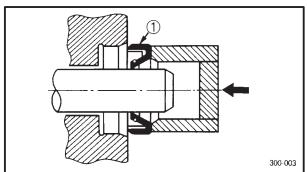

EAS0002

#### **BEARINGS AND OIL SEALS**


- Install bearings and oil seals so that the manufacturer's marks or numbers are visible. When installing oil seals, lubricate the oil seal lips with a light coat of lithium soap base grease. Oil bearings liberally when installing, if appropriate.
- (1) Oil seal

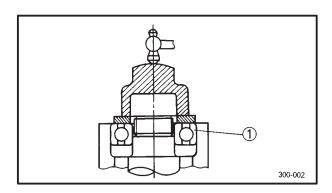

**CAUTION:** 

Do not spin the bearing with compressed air because this will damage the bearing surfaces.

(1) Bearing

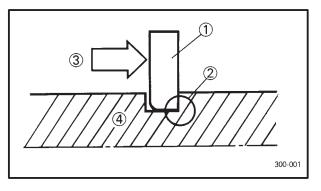

EAS00025

#### **CIRCLIPS**

Before reassembly, check all circlips carefully and replace damaged or distorted circlips. Always replace piston pin clips after one use. When installing a circlip ①, make sure that the sharp-edged corner ② is positioned opposite the thrust ③ that the circlip receives.

(4) Shaft

#### **CHECKING THE CONNECTIONS**




EAS00026

#### **CHECKING THE CONNECTIONS**

Check the leads, couplers, and connectors for stains, rust, moisture, etc.

- 1. Disconnect:
  - Clead
  - **C**oupler
  - Connector

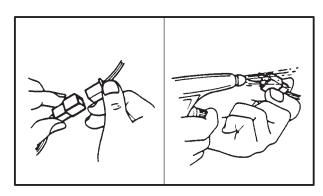


2. Check:

- Clead
- **C**oupler
- **C**onnector

Moisture → Dry with an air blower.

Rust/stains  $\rightarrow$  Connect and disconnect several times.

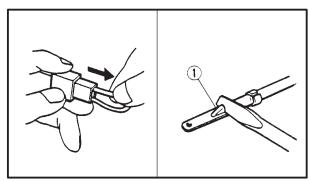


3. Check:

(all connections

Loose connection → Connect properly.

NOTF:

If the pin ① on the terminal is flattened, bend it up.

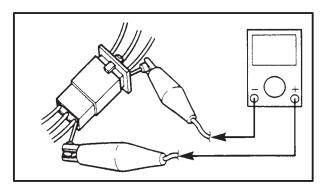

4. Connect:

- **Dead**
- **Coupler**
- connector


NOTE: -

Make sure that all connections are tight.

5. Check:

**c**ontinuity

(with a pocket tester)

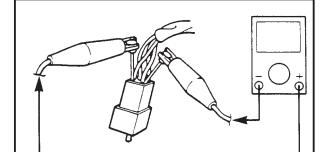

Pocket tester 90890-03112

NOTE: -

Of there is no continuity, clean the terminals.

When checking the wire harness, perform steps (1) to (3).

As a quick remedy, use a contact revitalizer available at most part stores.

#### **SPECIAL TOOLS**



EB104000

#### **SPECIAL TOOLS**

The following special tools are necessary for complete and accurate tune-up and assembly. Use only the appropriate special tools as this will help prevent damage caused by the use of inappropriate tools or improvised techniques.

When placing an order, refer to the list provided below to avoid any mistakes.

Tool No.	Tool name/Function	Illustration
90890-01268 90890-01403	Exhaust & steering nut wrench Ring nut wrench This tools are used to loosen and tighten the steering ring nut.	
90890-01304	Piston pin puller  This tool is used to remove the piston pins.	
90890-01312	Fuel level gauge  This tool is used to measure the fuel level in the float chamber.	Comment of the control of the contro
90890-01367 90890-01374	Fork seal driver weight Fork seal driver attachment (ø43) These tools are used when installing the fork seal.	
90890-01326 90890-01327	T-handle Damper rod holder These tools are used to hold the damper rod assembly when loosening or tightening the damper rod assembly bolt.	
90890-03081 90890-04082	Compression gauge Adapter  These tools are used to measure engine compression.	
90890-03094	Vacuum gauge  This guide is used to synchronize the carburetors.	
90890-03112	Pocket tester  This tool is used to check the electrical system.	

# **SPECIAL TOOLS**



Tool No.	Tool name/Function	Illustration
90890-03113	Engine tachometer  This tool is used to check engine speed.	
90890-03141	Timing light  This tool is used to check the ignition timing.	
90890-03158	Carburetor angle driver  This tool is used to turn the pilot screw when adjusting the engine idling speed.	
90890-04016	Valve guide reamer, remover and installer (5.5 mm)  These tools are used to rebore, remove and install the valve guide.	
90890-04019	Valve spring compressor  This tool is used to remove or install the valve assemblies.	
90890-03153 90890-03124	Oil pressure gauge Oil pressure adaptor B  These tools are used to measure the engine oil pressure.	M20 × 1.5
90890-04086	Clutch holding tool  This tool is used to hold the clutch boss when removing or installing the clutch boss nut.	
90890-04101	Valve lapper  This tool is used for removing and installing the valve lifter and for lapping the valve.	
90890-04110	Tappet adjusting tool  This tool is necessary to replace valve adjusting pads.	

# SPECIAL TOOLS



Tool No.	Tool name/Function	Illustration
90890-06754	Ignition checker	
	This tool is used to check the ignition system components.	
90890-85505	Yamaha bond No. 1215	
	This bond is used to seal two mating surfaces (e.g., crankcase mating surfaces).	

# SPEC



# CHAPTER 2. SPECIFICATIONS

GENERAL SPECIFICATIONS	2-1
MAINTENANCE SPECIFICATIONS  ENGINE CHASSIS ELECTRICAL	2-4 2-14
CONVERSION TABLE	2-20
GENERAL TIGHTENING TORQUES	2-20
LUBRICATION POINT AND GRADE OF LUBRICANT  ENGINE  CHASSIS	2-21
LUBRICATION DIAGRAMS	2-23
CABLE ROUTING	2-26

# **GENERAL SPECIFICATIONS**



# **SPECIFICATIONS**

#### **GENERAL SPECIFICATIONS**

Model	XJR1300(L)
Model code:	5EA2/5EA3/5EA4
Dimensions: Overall length	2175 mm (GB) (D) (NL) (B) (F) (E) (P) (I) (GR) (SF) (AUS) 2250 mm (N) (SF) (G) (A)
Overall width Overall height Seat height Wheelbase Minimum ground clearance Minimum turning radius	775 mm 1115 mm 775 mm 1500 mm 120 mm 2800 mm
Basic weight: With oil and full fuel tank	253 kg
Engine: Engine type Cylinder arrangement Displacement Bore × stroke Compression ratio Compression pressure (STD) Starting system Lubrication system:	Air-cooled 4-stroke, DOHC Forward-inclined parallel 4-cylinder 1250 cm <sup>3</sup> 79.0 × 63.8 mm 9.7: 1 1050 kPa (10.5 kg/cm <sup>2</sup> ,10.5 bar) at 400 r/min Electric starter Wet sump
Oil type or grade: Engine oil Temp20 -10 0 10 20 30 40  10W/30  10W/40  20W/50	SE or higher grade
Engine oil Periodic oil change With oil filter replacement Total amount Oil cooler capacity (including all routes)	3.0 L 3.35 L 4.2 L 0.2 L
Air filter:	Dry type element
Fuel: Type Fuel tank capacity Fuel reserve amount	Regular unleaded gasoline 21 L 4.5 L

# **GENERAL SPECIFICATIONS**



Model	XJR1300(L)
Carburetor: Type/quantity Manufacturer	BS36/4 MIKUNI
Spark plug: Type × quantity Manufacturer Spark plug gap	DPR8EA-9/X24EPR-U9 × 4 NGK/DENSO 0.8 ~ 0.9 mm
Clutch type:	Wet, multiple-disc
Transmission: Primary reduction system Primary reduction ratio Secondary reduction system Secondary reduction ratio Transmission type Operation Gear ratio 1st 2nd 3rd 4th 5th	Spur gear 98/56 (1.750) Chain drive 38/17 (2.235) Constant mesh 5-speed Left foot operation 40/14 (2.857) 36/18 (2.000) 33/21 (1.571) 31/24 (1.292) 29/26 (1.115)
Chassis: Frame type Caster angle Trail	Double cradle 25.5 \cap 100 mm
Tire: Type Size front rear Manufacturer front rear Type front rear	Tubeless 120/70ZR17 (58W) 180/55ZR17 (73W) MICHELIN/DUNLOP/BRIDGESTONE MICHELIN/DUNLOP/BRIDGESTONE MACADAM 90X/D207F/BT57F MACADAM 90X/D207/BT57R
Tire pressure (cold tire):  Maximum load-except motorcycle Loading condition A *  front rear Loading condition B *  front rear High-speed riding front	207 kg 0 ~ 90 kg 250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar) 250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar) 90 ~ 207 kg 250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar) 290 kPa (2.9 kg/cm <sup>2</sup> , 2.9 bar) 250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar)
rear	290 kPa (2.9 kg/cm <sup>2</sup> , 2.9 bar)

<sup>\*</sup>Load is the total weight of cargo, rider, passenger, and accessories.

# **GENERAL SPECIFICATIONS**



Model	XJR1300(L)
Brake: Front brake type operation Rear brake type operation	Dual disc brake Right hand operation Single disc brake Right foot operation
Suspension: Front suspension Rear suspension	Telescopic fork Swingarm
Shock absorber: Front shock absorber Rear shock absorber	Coil spring/Oil Damper Coil spring/Gas-oil damper
Wheel travel: Front wheel travel Rear wheel travel	130 mm 110 mm
Electrical: Ignition system Generator system Battery type Battery capacity	T.C.I. (Digital) A.C. generator GT14B-4 12 V 12AH
Headlight type:	Halogen bulb
Bulb wattage × quantity: Headlight Auxiliary light Tail/brake light Flasher light Meter light Neutral indicator light High beam indicator light Oil level indicator light Turn indicator light	12 V 60 W/55 W × 1 12 V 4 W × 1 12 V 5 W/21 W × 2 12 V 21 W × 4 12 V 1.7 W × 4 12 V 1.7 W × 1 12 V 3.4 W × 1 12 V 1.7 W × 1 12 V 1.7 W × 2

SPEC U

# MAINTENANCE SPECIFICATIONS ENGINE

Standard	Limit
	0.1 mm
79.00 × 79.01 mm	0.05 mm 0.05 mm 79.1 mm
Chain drive (Center) 25.000 × 25.021 mm 24.967 × 24.980 mm 0.020 × 0.054 mm	
35.95 × 36.05 mm 28.248 × 28.348 mm 7.95 × 8.05 mm 35.95 × 36.05 mm 28.248 × 28.348 mm 7.95 × 8.05 mm	35.85 mm 28.15 mm 35.85 mm 28.15 mm 0.03 mm
	79.00 × 79.01 mm  Chain drive (Center) 25.000 × 25.021 mm 24.967 × 24.980 mm 0.020 × 0.054 mm  35.95 × 36.05 mm 28.248 × 28.348 mm 7.95 × 8.05 mm 35.95 × 36.05 mm 28.248 × 28.348 mm 7.95 × 8.05 mm 28.248 × 28.348 mm 7.95 × 8.05 mm

SPEC U

Model		Standard	Limit
Cam chain: Cam chain type/No. of link Cam chain adjustment met		79RH2015/156 Automatic	(XX) (XX)
Valve, valve seat, valve guid Valve clearance (cold)	e: IN EX	0.11 × 0.15 mm 0.16 × 0.20 mm	(XX) (XX)
Valve dimensions:			
"A"	"В"	"c"	"D"
Head Dia.	Face Width	Seat Width Margin Th	ickness
"A" head diameter	IN FX	28.9 × 29.1 mm 24.9 × 25.1 mm	(XX)
"B" face width	IN EX	1.98 × 2.55 mm 1.98 × 2.55 mm	
"C" seat width	IN EX	0.9 × 1.1 mm 0.9 × 1.1 mm	
"D" margin thickness	IN EX	0.8 × 1.2 mm 0.8 × 1.2 mm	
Stem outside diameter	IN EX	5.475 × 5.490 mm 5.460 × 5.475 mm	5.445 mm 5.43 mm
Guide inside diameter	IN EX	5.500 × 5.512 mm 5.500 × 5.512 mm	5.552 mm 5.552 mm
Stem-to-guide clearance	IN EX	0.010 × 0.037 mm 0.025 × 0.052 mm	0.08 mm 0.1 mm
Stem runout limit		©	0.01 mm
Valve seat width	IN EX	0.9 × 1.1 mm 0.9 × 1.1 mm	1.6 mm 1.6 mm



Model	Standard	Limit
Valve spring: Inner spring Free length  Set length (valve closed)  Compressed pressure (installed)  IN  EX  Tilt limit  IN  EX  EX  EX  Tilt limit	32.8 mm 32.8 mm 61.7 × 72.5 N (6.29 × 7.39 kg) 61.7 × 72.5 N (6.29 × 7.39 kg)	37.5 mm 37.5 mm (XX) (XX) (XX) (XX) (XX) (XX) (XX) (X
Direction of winding (top view) IN EX	Clockwise Clockwise	(XX) (XX)
Outer spring Free length  Set length (valve closed)  Compressed pressure (installed)  IN  EX  Tilt limit  Direction of winding (top view)  IN  EX  EX	41.1 mm 41.1 mm 34.8 mm 34.8 mm 130.4 × 154.0 N (13.3 × 15.7 kg) 130.4 × 154.0 N (13.3 × 15.7 kg) Counterclockwise	39 mm 39 mm (3) (3) (3) (3) (2.5 /1.7 mm 2.5 /1.7 mm
Piston: Piston to cylinder clearance Piston size "D"	0.015 × 0.040 mm 78.970 × 78.985 mm	0.15 mm
Measuring point "H" Piston off-set Piston off-set direction Piston pin bore inside diameter Piston pin outside diameter	2 mm 1 mm IN side 18.004 × 18.015 mm 17.991 × 18.000 mm	



Model	Standard	Limit
Piston rings: Top ring:		
Type Dimensions (B × T) End gap (installed) Side clearance (installed) 2nd ring:	Barrel 1.00 × 3.05 mm 0.20 0.35 mm 0.045 0.080 mm	0.6 mm 0.1 mm
Type Dimensions (B × T) End gap (installed) Side clearance (installed) Oil ring:	Taper 1.2 × 3.0 mm 0.35	0.75 mm 0.1 mm
Dimensions (B × T) End gap (installed) Side clearance	2.5 × 2.9 mm 0.2 0.5 mm 0.050 0.155 mm	(XX) (XX) (XX)
Connecting rod: Oil clearance	0.017 0.040 mm	0.08 mm
Crankshaft:  Crank width "A" Assembly width "B" Runout limit "C" Big end side clearance "D" Journal oil clearance	62.25 63.85 mm 382.0 383.2 mm 0.02 mm 0.160 0.262 mm 0.030 0.064 mm	© 0.5 mm 0.09 mm



Standard	Limit
Stada.d	
2.9 × 3.1 mm 8 pcs 1.9 × 2.1 mm	2.8 mm  0.1 mm  Warp limit>
7 pcs 6 mm 1 pc 0 × 0.2 mm 0.004 × 0.048 mm Hydraulic inner push	0.3 mm
	0.06 mm 0.06 mm
Guide bar	0.1 mm
5EA1 10 #95 #45 5D96-2 Y-2 #127.5 0.85 #40 0.9 1.0 0.8 1-1/2 2.3 #32.5 0.6 #125 21.3 × 23.3 mm 3.5 × 4.5 mm	888888888888888888888888888888888888888
	8 pcs 1.9 × 2.1 mm  7 pcs 6 mm 1 pc 0 × 0.2 mm 0.004 × 0.048 mm Hydraulic inner push    Guide bar    5EA1 10  #95  #45 5D96-2  Y-2  #127.5 0.85  #40 0.9 1.0 0.8 1-1/2 2.3 #32.5 0.6 #125 21.3 × 23.3 mm



Model	Standard	Limit
Lubrication system:		
Oil filter type	Paper type	
Oil pump type	Trochoid type	
Tip clearance	$0.12 \times 0.17  \text{mm}$	0.2 mm
Housing and rotor clearance	0.03 × 0.08 mm	0.15 mm
Side clearance	$0.03 \times 0.08 \text{ mm}$	0.15 mm
Bypass valve setting pressure	180 × 220 kPa	
	$(1.8 \times 2.2 \text{ kg/cm}^2, 1.8 \times 2.2 \text{ bar})$	
Relief valve operating pressure	480 × 580 kPa	
	$(4.8 \times 5.8 \text{ kg/cm}^2, 4.8 \times 5.8 \text{ bar})$	
Oil pressure (hot)	80 kPa (0.8 kg/cm <sup>2</sup> , 0.8 bar)	
	at 1000 r/min	
Pressure check location	MAIN GALLERY	

SPEC U

#### **Tightening torques**


Part to be tightened	Part name	Thread	Q'ty	Tightening torque		Remarks
		size		Nm	m <b>(</b> kg	
Camshaft cap	Bolt	M6 × 1.0	18	12	1.2	
Oil gallery bolt	Screw	M6 × 1.0	1	7	0.7	
Spark plug	_	$M12 \times 1.25$	4	18	1.8	
Cylinder head	Cap nut	$M10 \times 1.25$	12	35	3.5	— <b>(</b>
Cylinder head cover	Bolt	M6 × 1.0	8	10	1.0	
Cylinder	Stud bolt	M8 × 1.25	1	8	0.8	<b> 6</b>
Cylinder	Nut	M8 × 1.25	3	20	2.0	
Cylinder	Nut	M6 × 1.0	6	10	1.0	
Connecting rod	Nut Bolt	$M8 \times 0.75$ $M7 \times 1.0$	8 4	36 20	3.6 2.0	
Cam sprocket Timing chain tensioner	Bolt	$M6 \times 1.0$	2	10	1.0	
Timing chain tensioner cap bolt	Bolt	$M11 \times 1.0$	1	20	2.0	
Chain guide (upper)	Bolt	$M6 \times 1.0$	4	10	1.0	
Chain guide (intake)	Plug	$M10 \times 1.25$	1	10	1.0	
Oil pump	Screw	M6 × 1.0	2	10	1.0	
Oil pump	Bolt	M6 × 1.0	3	10	1.0	
Oil strainer housing	Bolt	M6 × 1.0	2	10	1.0	
Oil filter case	Union bolt	M20 × 1.5	1	15	1.5	
Oil pan	Bolt	M6 × 1.0	17	10	1.0	
Drain bolt (engine oil)	Plug	$M14 \times 1.5$	1	43	4.3	
Oil gallery blind plug	Plug	M16 × 1.5	1	8	0.8	
Drain filter	Screw	$M5 \times 0.8$	1	7	0.7	
Oil delivery pipe (oil pan)	Bolt	$M6 \times 1.0$	4	10	1.0	
Oil delivery pipe (oil cooler)	Bolt	M6 × 1.0	4	10	1.0	
Oil cooler	Bolt	$M6 \times 1.0$	2	10	1.0	
Oil cooler cover	Bolt	$M6 \times 1.0$	4	8	0.8	
Oil delivery pipe (clamp)	Bolt	M6 × 1.0	1	10	1.0	
Intake manifold	Bolt	M6 × 1.0	8	10	1.0	
Air filter case cap	Bolt	$M5 \times 0.8$	4	5	0.5	
Air filter case	Bolt	M6 × 1.0	3	7	0.7	
Exhaust pipe	Nut	M8 × 1.25	8	25	2.5	
Muffler and stay Exhaust chamber	Bolt	M8 × 1.25	2 1	20	2.0	
	Bolt Screw	M10 × 1.25 M8 × 1.25	4	25 20	2.5 2.0	
Exhaust pipe and exhaust chamber Exhaust chamber and muffler	Bolt	$M8 \times 1.25$	2	20	2.0	
Exhaust pipe blind plug (CO test)	Bolt	$M6 \times 1.23$	4	10	1.0	
Bearing holder (main axle)	Screw	$M6 \times 1.0$	3	12	1.2	<b>⊣ 6</b>
Timing plate cover	Bolt	$M6 \times 1.0$	4	7	0.7	<b>□</b>
Crankcase cover (right)	Screw	$M5 \times 0.8$	2	4	0.7	7
Clutch cover	Bolt	$M6 \times 1.0$	11	10	1.0	
Drive sprocket cover	Bolt	M6 × 1.0	3	10	1.0	
Clutch release cylinder	Bolt	M6 × 1.0	3	10	1.0	
Crankcase	Bolt	M6 × 1.0	16	12	1.2	

SPEC U


		Thusad		Tight	ening	
Part to be tightened	Part name	Part name Thread	Q'ty	torque		Remarks
-		size		Nm	m <b></b> g	
Crankcase	Bolt	M8 × 1.25	17	24	2.4	Į Į
Crankcase	Bolt	$M10 \times 1.25$	5	35	3.5	
Main gallery	Plug	M20 × 1.5	3	12	1.2	_
Oil buffle plate	Bolt	$M5 \times 0.8$	3	4	0.4	<b>⊣ ©</b>
Stopper plate	Bolt	M6 × 1.0	1	10	1.0	<b>⊣ ©</b>
Bearing housing	Screw	M6 × 1.0	3	10	1.0	<b>⊣ ©</b>
HY-VO chain guide	Bolt	M6 × 1.0	2	10	1.0	
Clutch boss	Nut	M20 × 1.5	1	70	7.0	7
Clutch pressure plate	Bolt	M6 × 1.0	6	8	0.8	
Push lever comp.	Bolt	M6 × 1.0	2	10	1.0	
Drive sprocket	Nut	M22 × 1.5	1	85	8.5	
Shift shaft stopper	Screw	M8 × 1.25	1	22	2.2	<b>⊣ (</b>
Stopper plate	Screw	M6 × 1.0	2	7	0.7	<b>⊣</b> 0
(Starter clutch idle gear shaft)						
Stopper lever	Bolt	M6 × 1.0	1	10	1.0	<b>⊣ (</b>
Side plate	Screw	$M5 \times 0.8$	1	4	0.4	<b>⊣ (</b>
Shift arm	Bolt	M6 × 1.0	1	10	1.0	_
Shift lod	Nut	M6 × 1.0	2	8	0.8	
A.C. generator	Bolt	M8 × 1.25	2	25	2.5	<b>—(</b>
Oil level sensor	Bolt	M6 × 1.0	2	10	1.0	
Rotor	Bolt	M10 × 1.25	1	45	4.5	

SPEC U


Tightening sequence Cylinder head

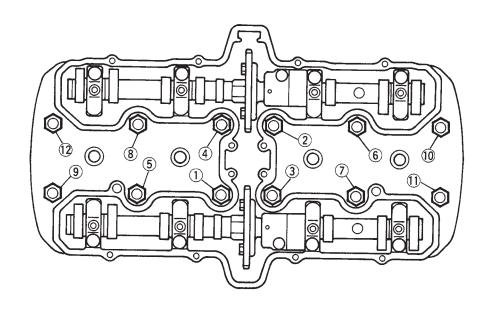

#### Crankcase

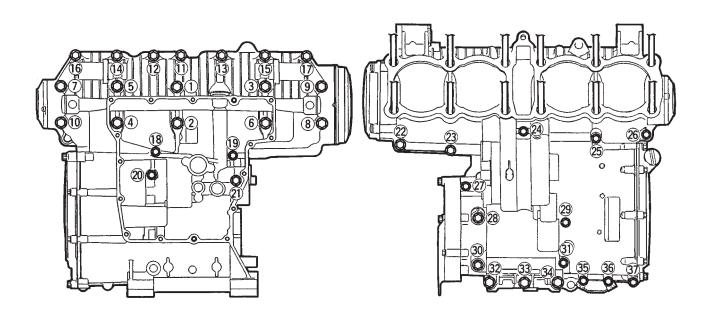



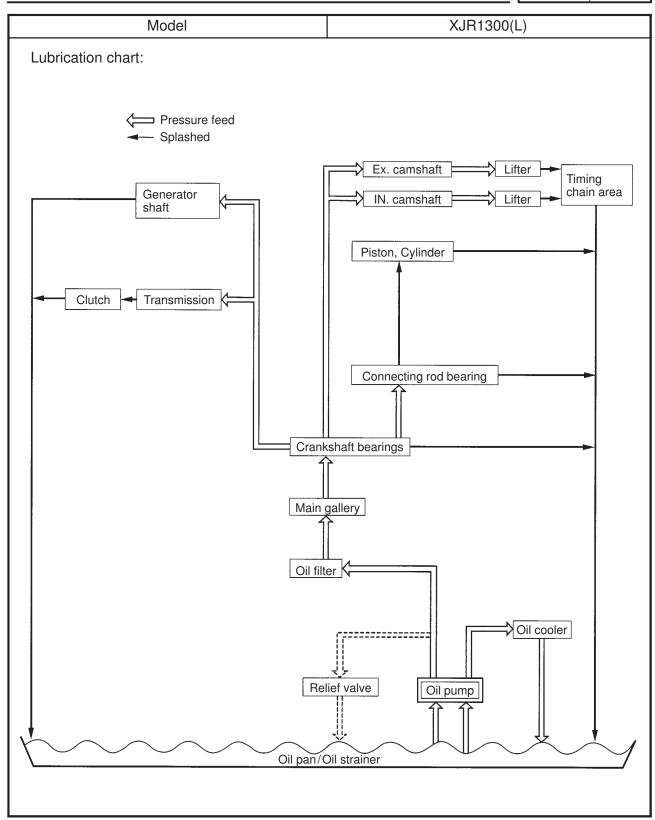



#### **CHASSIS**

Model	Standard	Limit
Steering system:		
Steering bearing type	Angular bearing	
Front suspension: Front fork travel Fork spring free length Fitting length Collar length Spring rate (K1) (K2) Stroke (K1) (K2) Optional spring Oil capacity Oil level Oil grade	130 mm 407.3 mm 363.3 mm 150 mm 4.9 N/mm (0.5 kg/mm) 8.8 N/mm (0.9 kg/mm) 0 83 mm 83 130 mm No 538 cm <sup>3</sup> 137 mm Fork oil 10W or equivalent	395 mm
Rear suspension: Shock absorber travel Spring free length Fitting length Spring rate (K1) (K2) Stroke (K1) (K2)	88 mm 210 mm 190 mm 20.6 N/mm (2.1 kg/mm) 31.4 N/mm (3.2 kg/mm) 0 50 mm 50 88 mm	© 206 mm © 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Front wheel: Type Rim size Rim material Rim runout limit radial lateral	Cast wheel 17 × MT3.50 Aluminum	(XX) (XX) (XX) 1 mm 0.5 mm
Rear wheel: Type Rim size Rim material Rim runout limit radial lateral	Cast wheel 17 × MT5.50 Aluminum	① ① ① ① ① 1 mm 0.5 mm
Drive chain: Type/manufacturer No. of links Chain free play	50ZVM/DAIDO 110 20 30 mm	(XX) (XX) (XX)



Model	Standard	Limit
Front disc brake: Type Disc outside diameter × thickness Disc deflection limit Pad thickness	Dual 298 × 5 mm ③ 5.5 mm	0.2 mm 0.5 mm
Master cylinder inside diameter Caliper cylinder inside diameter Brake fluid type	14 mm 30.2 mm and 27 mm DOT #4	(XX) (XX) (XX)
Rear disc brake: Type Disc outside diameter × thickness Disc deflection limit Pad thickness  *	Single 267 × 5 mm  Single 267 × 5 mm	① ② 0.15 mm 0.5 mm
Master cylinder inside diameter Caliper cylinder inside diameter Brake fluid type	12.7 mm 42.85 mm DOT #4	(XX) (XX) (XX)
Brake lever & brake pedal: Brake pedal position	45 mm	
Throttle grip free play	3 5 mm	

SPEC U

# Tightening torques

Part to be tightened	Part name	Thread size	Q'ty	Tight	ening que	Remarks
				Nm	m®g	
Handle crown and inner tube	Bolt	M8 × 1.25	2	30	3.0	
Handle crown and steering stem	Nut	$M22 \times 1.0$	1	110	11.0	
Handle crown and handlebar holder	Nut	$M10 \times 1.25$	2	40	4.0	
(lower)			_			
Upper handlebar holder	Bolt	M8 × 1.25	4	23	2.3	
Lower bracket and inner tube	Bolt	M8 × 1.25	4	23	2.3	
Steering stem and ring nut	Nut	$M25 \times 1.0$	1	18	1.8	See "NOTE"
Front master cylinder and holder	Bolt	M6 × 1.0	2	10	1.0	
Front brake hose union bolt	Bolt	$M10 \times 1.25$	1	30	3.0	
Meter	Nut	M6 × 1.0	2	7	0.7	
Headlight stay (lower)	Bolt	M6 × 1.0	2	10	1.0	
Grip end		$M16 \times 1.5$	2	26	2.6	
Front turn signal lights	Nut	$M12 \times 1.25$	2	7	0.7	
Front fender and front fork	Bolt	M6 × 1.0	4	7	0.7	
Headlight stay and upper cover	Cap nut	M6 × 1.0	4	7	0.7	
Engine stay (front) and frame	Bolt	M8 × 1.25	4	30	3.0	
Engine mount (front)	Nut	$M10 \times 1.25$	2	64	6.4	
(rear-upper)	Nut	$M10 \times 1.25$	1	55	5.5	
Engine stay (rear-upper) and frame	Bolt	$M10 \times 1.25$	2	48	4.8	
Engine stay (rear-upper) and frame	Bolt	$M12 \times 1.25$	2	88	8.8	
Engine stay (rear-lower)	Nut	$M10 \times 1.25$	2	64	6.4	
Frame and down tube	Nut and Bolt	M8 × 1.25	4	26	2.6	
Pivot shaft	Nut	$M18 \times 1.5$	1	125	12.5	
Rear shock absorber and frame	Bolt	$M8 \times 1.25$	1	23	2.3	
Rear shock absorber and swing arm	Bolt	$M10 \times 1.25$	1	30 7	3.0	
Drive chain guide and swing arm	Bolt	$M6 \times 1.0$	1 2	7	0.7	
Chain case and swing arm Fuel tank	Screw Bolt	$M6 \times 1.0$ $M8 \times 1.25$	1	19	0.7 1.9	
Fuel tank cap	Screw	$M5 \times 0.8$	4	6	0.6	
Fuel cock	Screw	$M6 \times 1.0$	2	7	0.0	
Seat lock	Nut	$M6 \times 1.0$	2	7	0.7	
Fuel sender	Bolt	$M5 \times 0.8$	4	4	0.7	
Side cover and frame	Screw	$M6 \times 1.0$	2	7	0.7	
Tail light	Nut	$M6 \times 1.0$	3	7	0.7	
Rear fender and frame	Bolt	$M6 \times 1.0$	4	7	0.7	
Rear fender cover and cover	Screw	$M5 \times 0.8$	2	4	0.4	
Rear fender cover and frame	Screw	$M6 \times 1.0$	2	7	0.7	
Grab bar	Bolt	M8 × 1.25	4	30	3.0	
Ignitor	Screw	$M6 \times 1.0$	2	7	0.7	
Rear turn signal light and rear fender	Nut	M12 × 1.25	2	4	0.4	



Part to be tightened	Part name	Thread size	Q'ty	Tightening torque		Remarks
				Nm	m@g	
Hook	Screw	M6 × 1.0	2	7	0.7	
Helmet holder	Bolt	M6 × 1.0	2	13	1.3	
Tail light bracket	Bolt	M8 × 1.25	4	30	3.0	
Side stand	Bolt	M10 × 1.25	1	40	4.0	
Side stand	Nut	M10 × 1.25	1	40	4.0	
Side stand switch	Screw	$M5 \times 0.8$	2	4	0.4	
Footrest bracket	Bolt	M8 × 1.25	4	28	2.8	
Rear footrest bracket	Bolt	M8 × 1.25	4	28	2.8	
Footrest and footrest bracket	Bolt	$M10 \times 1.25$	2	55	5.5	
Rear brake reservoir tank	Screw	M6 × 1.0	1	5	0.5	
Rear master cylinder and bracket	Bolt	M8 × 1.25	2	23	2.3	
Center stand	Nut and Bolt	$M10 \times 1.25$	2	41	4.1	
Front wheel axle	_	$M16 \times 1.5$	1	73	7.3	
Front wheel axle pinch bolt	Bolt	M8 × 1.0	1	19	1.9	
Front brake caliper and front fork	Bolt	$M10 \times 1.25$	4	40	4.0	
Front brake disk and hub	Bolt	M8 × 1.25	12	20	2.0	<b>-</b>   <b>(1</b> )
Front brake caliper and bleed screw	_	M8 × 1.25	2	6	0.6	
Front brake hose	Union bolt	$M10 \times 1.25$	2	30	3.0	
Tensionbar and swingarm	Nut and bolt	M8 × 1.25	2	23	2.3	
Driven sprocket and hub	Nut	M8 × 1.25	6	60	6.0	
Chain puller	Nut	M8 × 1.25	2	16	1.6	
Rear brake caliper and caliper bracket	Bolt	$M10 \times 1.25$	2	40	4.0	
Rear wheel axle	Nut	$M18 \times 1.5$	1	150	15.0	
Rear brake hose	Union bolt	$M10 \times 1.25$	2	30	3.0	
Rear brake caliper and bleed screw	_	M8 × 1.25	1	6	0.6	
Rear brake disc and hub	Bolt	M8 × 1.25	6	20	2.0	<b>-(0</b> )

#### NOTE: -

<sup>1.</sup> First, tighten the ring nut approximately 52 Nm (5.2 m\@g) by using the torque wrench, then loosen the ring nut one turn.

<sup>2.</sup> Retighten the ring nut to specification.

SPEC U

#### **ELECTRICAL**

Standard	Limit
12 V	(30)
5 /1050 r/min 50 /5000 r/min TPS & Electrical type	(XX) (XX) (XX)
$248 \times 372 \Omega/W/R-W/G$ 5EA20/YAMAHA	
$83R/YAMAHA$ 6 mm $1.9 \times 2.9 \Omega$ $9.5 \times 14.3 k\Omega$	(S) (S) (S)
Resin type 10 kΩ	
A.C. generator B3G-B/DENSO 13.5 V 28 A/3000 r/min 2.8 $\times$ 3.0 $\Omega$ 0.19 $\times$ 0.21 $\Omega$ 13.7 mm 5.10 $\times$ 5.69 N (0.52 $\times$ 0.58 kg)	(W) (W) (W) (W) (W) 4.7 mm
Semi-conductor, field control type B3G-B/DENSO 14.2 × 14.8 V	(XX) (XX) (XX)
Constant mesh type  SM-13/MITSUBA 0.65 kW 10 mm 7.65 × 10.01 N (0.780 × 1.021 kg)	© 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
	12 V  5 /1050 r/min 50 /5000 r/min TPS & Electrical type  248 × 372 $\Omega$ /W/R-W/G 5EA20/YAMAHA  83R/YAMAHA  6 mm 1.9 × 2.9 $\Omega$ 9.5 × 14.3 k $\Omega$ Resin type 10 k $\Omega$ A.C. generator B3G-B/DENSO 13.5 V 28 A/3000 r/min 2.8 × 3.0 $\Omega$ 0.19 × 0.21 $\Omega$ 13.7 mm 5.10 × 5.69 N (0.52 × 0.58 kg)  Semi-conductor, field control type B3G-B/DENSO 14.2 × 14.8 V  Constant mesh type  SM-13/MITSUBA 0.65 kW 10 mm



Model	Standard	Limit
Mica undercut Starter relay: Model/manufacturer Amperage rating Coil winding resistance	0.7 mm MS5E-491/JIDECO 100 A 4.2 4.6 Ω	(S) (S) (S) (S)
Horn: Type Quantity Model/manufacturer Maximum amperage	Plane type 2 pcs YF12/NIKKO 3 A	(XX) (XX) (XX) (XX) (XX)
Flasher relay: Type Model/manufacturer Self cancelling device Flasher frequency	Full transistor type FE246BH/DENSO No 75 95 cyl/min	8888
Oil level switch:  Model/manufacturer	5G2/DENSO	
Fuel gauge:  Model/manufacturer  Sender unit resistance full  empty	4 KG/NIPPON SEIKI 4 10 Ω 90 100 Ω	888
Starting circuit cut-off relay:  Model/manufacturer  Coil winding resistance  Diode	G8R-30Y-J/OMRON 162 198 Ω Yes	(XX) (XX) (XX)
Oil level switch relay: Model/manufacturer	G8D-117Y-2/OMRON	
Circuit breaker: Type Amperage for individual circuit × Q'ty	Fuse	(00)
MAIN HEAD LIGHT SIGNAL IGNITION Reserve	30 A × 1 15 A × 1 15 A × 1 7.5 A × 1 30 A × 1 15 A × 1 7.5 A × 1	88 88 88 88

#### CONVERSION TABLE/ GENERAL TORQUE SPECIFICATIONS



EAS00028

#### **CONVERSION TABLE**

All specification data in this manual are listed in SI and METRIC UNITS.

Use this table to convert METRIC unit data to IMPERIAL unit data.

#### Ex.

METRIC		MULTIPLIER		IMP
** mm	Χ	0.03937	=	** in
2 mm	Х	0.03937	=	0.08 in


#### **CONVERSION TABLE**

METRIC TO IMP					
	Known	Multiplier	Result		
Torque	m@g m@g cm@g cm@g	7.233 86.794 0.0723 0.8679	ft⊕b in⊕b ft⊕b in⊕b		
Weight	kg g	2.205 0.03527	lb oz		
Distance	km/hr km m m cm mm	0.6214 0.6214 3.281 1.094 0.3937 0.03937	mph mi ft yd in in		
Volume/ Capacity	cc (cm <sup>3</sup> ) cc (cm <sup>3</sup> ) It (liter) It (liter)	0.03527 0.06102 0.8799 0.2199	oz (IMP liq.) cuᠿ qt (IMP liq.) gal (IMP liq.)		
Miscella- neous	kg/mm kg/cm <sup>2</sup> Centigrade	55.997 14.2234 9/5 ( C) + 32	lb/in psi (lb/in²) Fahrenheit (F)		

EAS00029

#### **GENERAL TIGHTENING TORQUES**

This chart specifies tightening torques for standard fasteners with a standard ISO thread pitch. Tightening torque specifications for special components or assemblies are provided for each chapter of this manual. To avoid warpage, tighten multi-fastener assemblies in a crisscross pattern and progressive stages until the specified tightening torque is reached. Unless otherwise specified, tightening torque specifications require clean, dry threads. Components should be at room temperature.

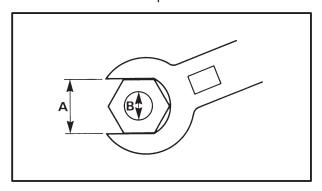

A: Distance across flats

B: Outside thread diameter

A (Nutt)	B (Bolt)	General specifications torques	
(Nut)		Nm	m∖kg
10 mm	6 mm	6	0.6
12 mm	8 mm	15	1.5
14 mm	10 mm	30	3.0
17 mm	12 mm	55	5.5
19 mm	14 mm	85	8.5
22 mm	16 mm	130	13.0

# **LUBRICATION POINT AND GRADE OF LUBRICANT**



# LUBRICATION POINT AND GRADE OF LUBRICANT ENGINE

Lubrication Point	Symbol
Oil seal lips	- <b>©</b>
O-ring	-@ <b>&gt;</b> 4
Bearing	<b>⊸</b> @
Piston surface	—( <u>@</u>
Piston pin	<b>⊸</b> @
Crankshaft pin	(w)
Crankshaft journal/big end	
Connecting rod bolt/nut	(W)-1
Camshaft cam lobe/journal	<b>⊸</b> ©
Valve stem (IN, EX)	<b>⊸</b> ⑤
Valve stem end (IN, EX)	<b>⊸</b> @
Valve lifter	<b>⊸</b> @
Oil pump rotor (inner/outer), housing	
Oil strainer assembly	<b>—</b> ••
Starter idle gear inner surface	<b>⊸</b> @
Starter wheel gear inner surface	<b>—</b> @
Starter clutch (outer/roller)	— <b>(</b>
Crankcase cover (push rod hole)	
Primary drive gear/damper	— <b>(</b>
Transmission gear (wheel/pinion)	<b>—</b> [3
Shift cam	<b>⊸</b> @
Shift fork/guide bar	<b>⊸</b> @
Shift shaft assembly	<b>(</b>
Crankcase mating surfaces	Yamaha bond No. 1215
Blind plug and oil seal (crankcase main gallery)	Yamaha bond No. 1215

# LUBRICATION POINT AND GRADE OF LUBRICANT



# CHASSIS


Lubrication Point	Symbol
Steering bearing (upper/lower) and bearing cover lip	<b>-</b> ©>
Front wheel oil seal (left/right)	
Rear wheel oil seal (left/right)	-(3)
Clutch hub fitting area	-(3)
Rear brake pedal shaft	
Shift pedal	
Centerstand sliding surface	
Sidestand sliding surface	
Tube guide (throttle grip) inner surface	
Brake lever bolt, sliding surface	
Clutch lever bolt, sliding surface	
Rear footrest pivot	-@ <b>&gt;</b>
Swingarm pivot bearing	
Swingarm pivot shaft outer surface	
Swingarm thrust cover lip	

# **LUBRICATION DIAGRAMS**



# **LUBRICATION DIAGRAMS**


- 1 Camshaft (intake)
  2 Camshaft (exhaust)
  3 Main gallery
  4 Oil strainer
  5 Oil pump
  6 Main axle
  7 Crankshaft

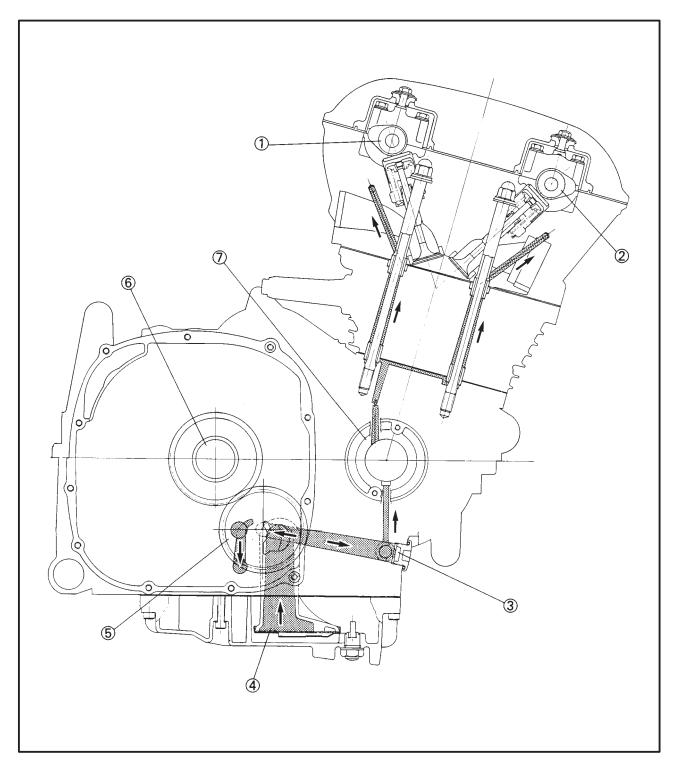


# **LUBRICATION DIAGRAMS**

- ① Oil cooler
- 2 Starter clutch
- 3 Main axle
  4 Drive axle
  5 Oil pump
  6 Oil pan

- 7 Relief valve 8 Main gallery

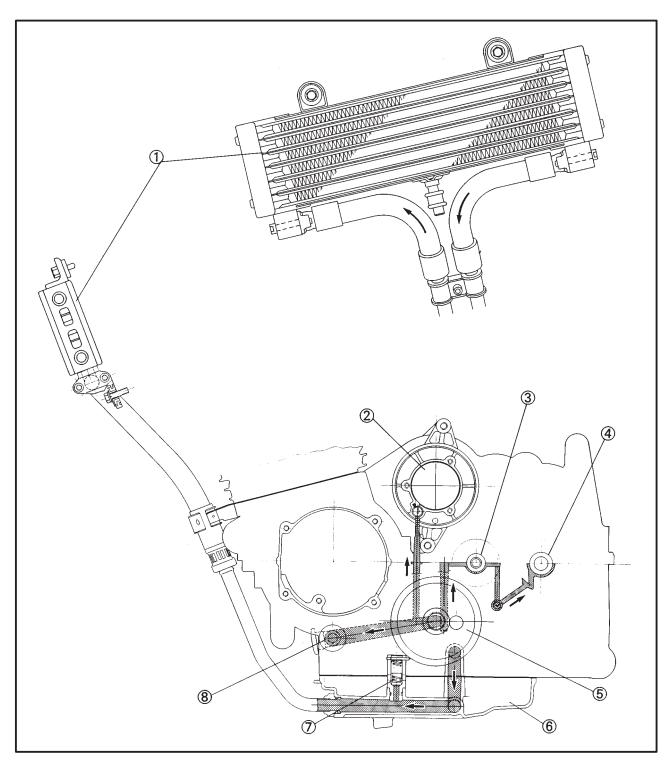


- 1 Camshaft
  2 Crankshaft
  3 Oil pump
  4 Oil filter

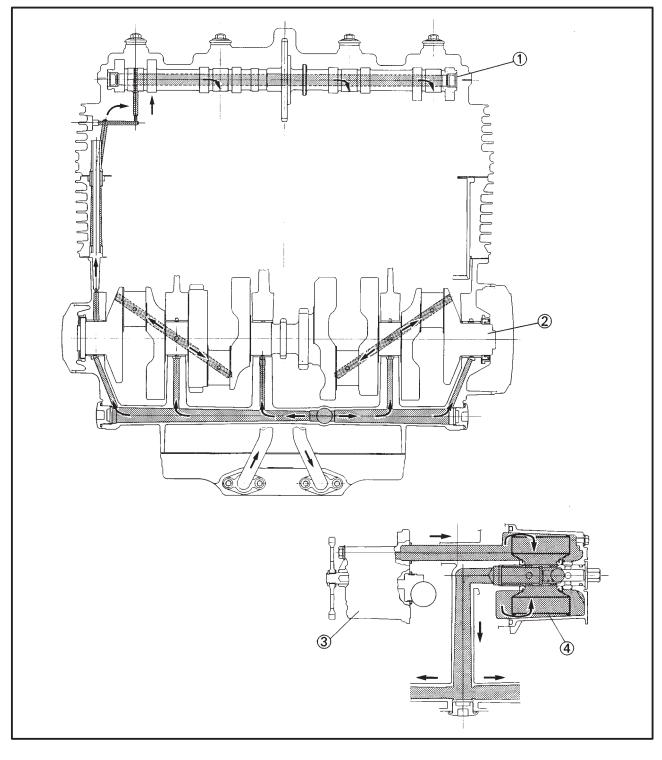




- 1 Starter motor cable
- 2 Battery negative (-) lead
- 3 Battery negative (-) lead connector
- 4 AC generator connector
- (5) Rear brake switch lead connector
- (6) Neutral lead
- 7 Pickup lead
- (8) Sidestand switch lead

- 9 Throttle position sensor
- 10 Ignition coil lead (#2, 3)
- (11) Throttle cable
- 12 Engine ground lead
- (13) Air ventilation hose
- 14 Rear brake switch
- 15 Starting circuit cutoff relay
- A Fasten the wireharness to the seat rail with a plastic band. Make sure that the end of band down ward.
- B Align the white tape on the wireharness with a plastic band and fasten them to the seat real. Make sure that the end of band down ward.
- C Fasten the wireharness with the steel clamp on the frame.

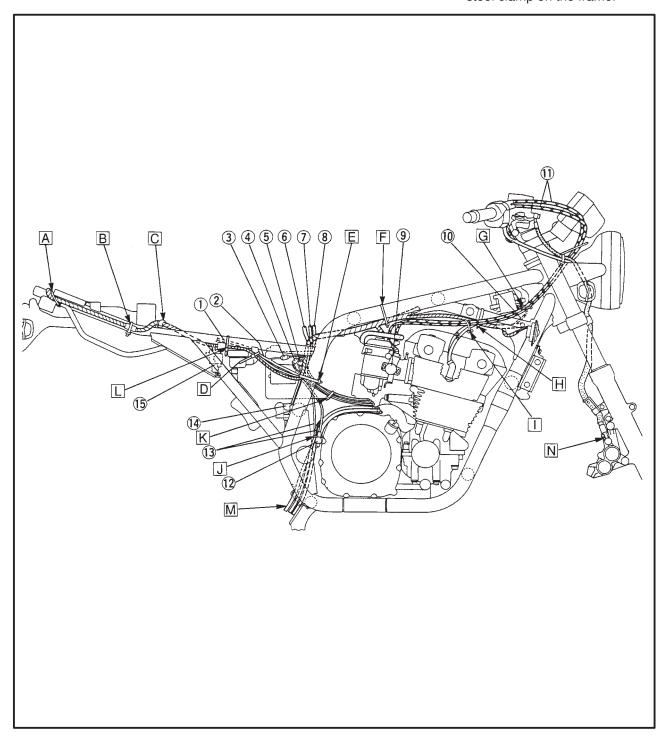




- er motor cable in front of the reservoir tank bracket and the battery negative (-) lead behind the reservoir tank bracket. And fasten them with a plastic band.
- E Fasten the wireharness, neutral lead, sidestand switch lead, pickup coil lead, AC generator lead frame with a plastic band. Make sure that the end of band forward of motorcycle.
- D Route the wireharness and start- F Fasten the wireharness to the T Fasten the high tension cables frame with a plastic band. Make sure that the end of band down ward.
  - G Insert the plastic band through the hole of plastic panel and then fasten the throttle cables with it. Make sure that the end of band inside of motorcycle.
  - and rear brake switch lead to the H Fasten the wireharness to the frame with a plastic band. Make sure that the end of band down ward.
- and throttle cables with a plastic clamp.
- J Route the air ventilation hoses, air filter case drain hose, fuel tank drain hose and fuel tank breather hose through the engine guide.
- K Fasten the AC generator lead, pick-up coil lead, sidestand switch lead and starter motor cable with a plastic band.

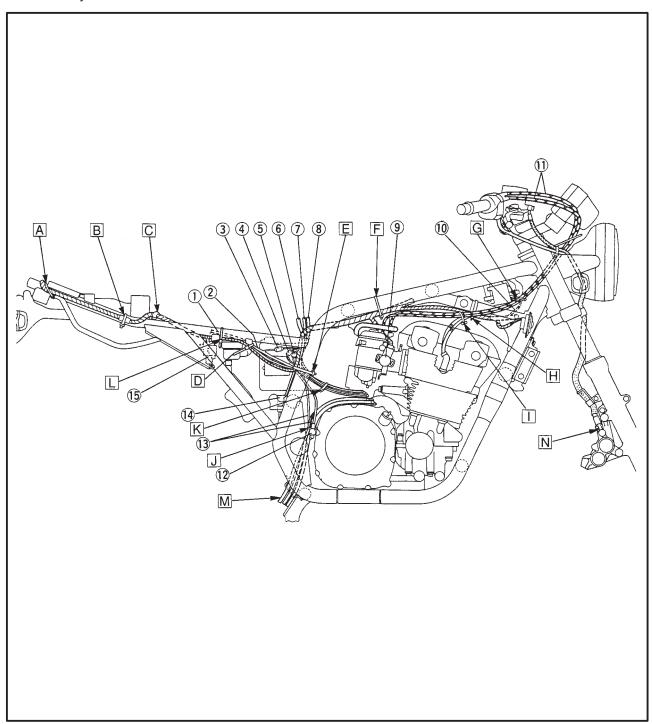




- □ Route the wireharness and starter motor cable behind the side cover bracket and fasten them with a plastic band at front of the bracket.
- M Align the white paint marks of the fuel tank drain hose, fuel tank breather hose and air filter case drain hose.
- N Touch the brake pipe to the brake caliper stopper.

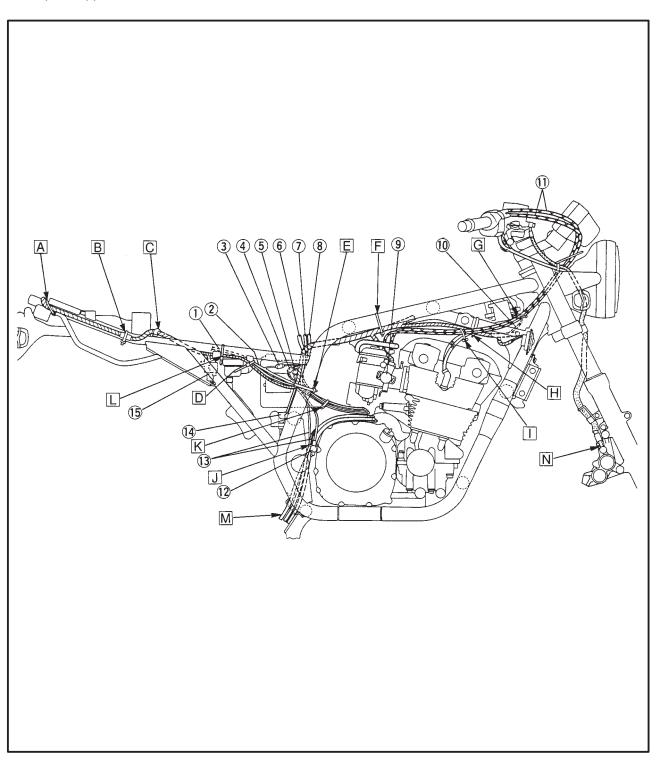




- (1) Clutch hose
- 2 Starter cable
- (3) Air filter case drain hose
- (4) Frame ground
- 5 Flasher relay connector
- 6 Oil light relay connector
- 7 Igniter unit connectors
- (8) Starter motor
- 9 AC generator
- 10 Sidestand switch
- (11) Sidestand switch lead
- (12) Ignition coil lead (#1, 4)

- A Insert the plastic band through E Fasten the high tension cables the hole of plastic panel and then fasten the clutch hose with it. Make sure that the end of band inside of motorcycle.
- B To headlight lower hole.
- C Route the wireharness and starter cable through the guide.
- D Connect the ignition lead with G Install the frame ground and igwhite marking tape to the ignition coil (#1, 4).
- (#1, 2) with a plastic clamp. Position the clamp at 50 - 80 mm above the high tension cable
- F Fasten the horn lead to the frame with a plastic band. Make sure that the end of band down ward.
- niter unit together with screw.

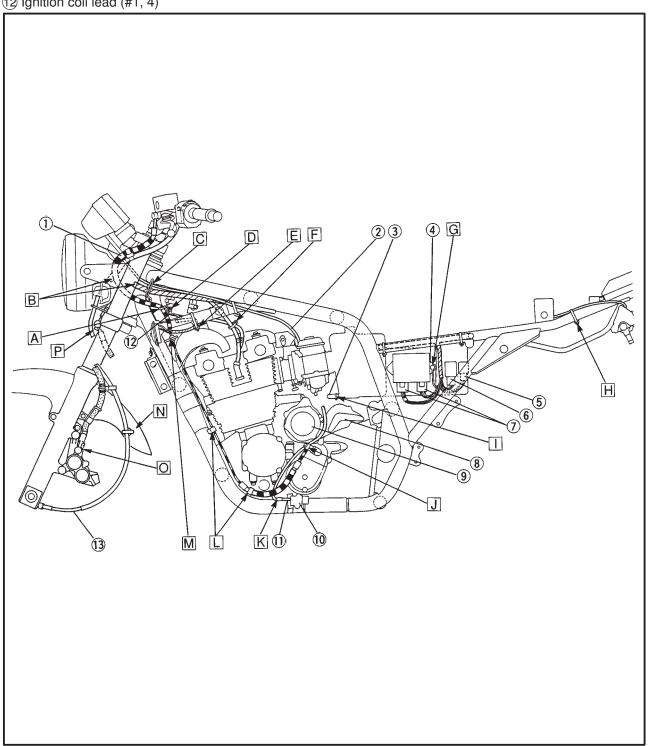



- seat real with a plastic band. Make sure that the end of band down ward.
- Route the air filter case drain hose over the starter motor to right side of motorcycle.
- J Position the clutch pipe parallel with the oil filter cover.
- H Fasten the seat lock cable to the K Fasten the sidestand switch lead N Route the speedometer cable with steel clamp on the frame pickup cover, oil filter cover, AC the right side of motorcycle.
  - L Fasten the clutch hose with steel clamp on the frame.
  - M Clamp the gromet on the clutch hose with wire holder on the frame.
- through the guide.
- and then route it between the O Touch the brake pipe to the brake caliper stopper.
- generator and starter motor to P Touch the brake pipe to the brake hose joint.

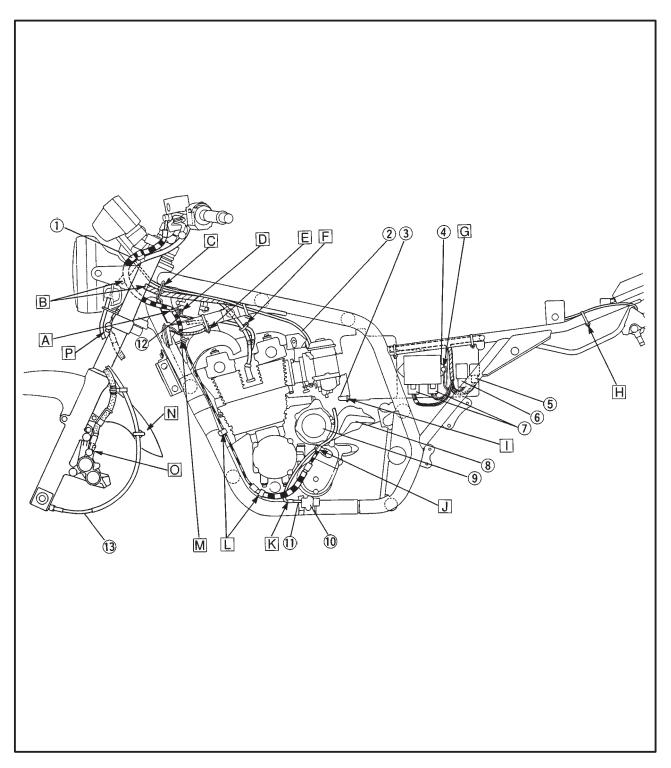




- 1 Throttle cables
- 2 Ignition coil (#2, 3)
- (3) Throttle position sensor
- (4) Neutral switch connector
- (5) Pickup coil connector
- 6 Sidestand switch connector
- (7) Battery
- 8 Reservoir tank
- 9 Battery negative (-) lead
- 10 Starting circuit cutoff relay
- (11) Battery positive (+) lead connec-


- 12 Starter relay
- 13 Seat lock cable
- 14) Seat lock
- 15 Battery positive (+) lead
- 16 Fuse box
- (17) Starter relay connector
- 18 Flasher relay
- 19 Oil light relay
- 20 Igniter unit
- 21) Fuel sender connector
- 22 Starter cable
- 23 Ignition coil (#1, 4)

- 24) Taillight lead
- 25 Starter cable
- A Position the horn (high) to right
- B Fasten the throttle cable (front side) to the frame with a plastic clamp.
- C Fasten the throttle position sensor with steel clamp on the carburetor (#4).
- D To fuel sender.

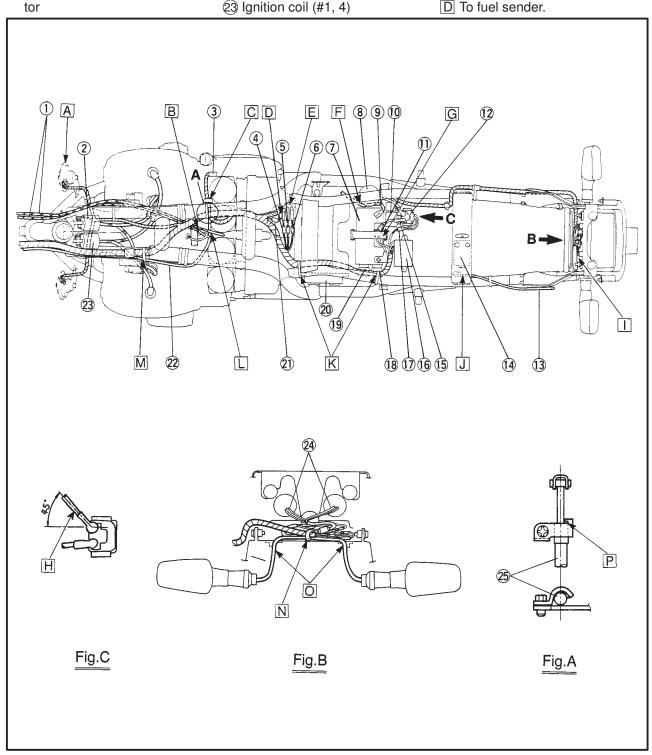




- tor, neutral switch connector, pickup coil connector and sidestand switch connector above the air filter case.
- F Route the battery negative (–) lead inside of the reservoir tank bracket and under the reservoir tank and then connect it.
- lead and battery positive (+) lead battery with the battery rubber
- H Position the starter motor cable at 45 degree out side of the motorcycle.
- Position the wireharness, taillight lead and rear turn signal light leads (left and right) between the taillight bracket and rear fender rib.
- E Connect the fuel sender connec- G Fasten the battery positive (+) J Position the seat lock cable inside under the seat lock bracket.
  - connector on the groove of the K Fasten the wireharness to the frame with a plastic band. Make sure that the end of band down ward.
    - L Route the starter cable between the throttle cables.
    - M Fasten the wireharness, starter cable to the frame with a plastic band. Make sure that end of band down ward.

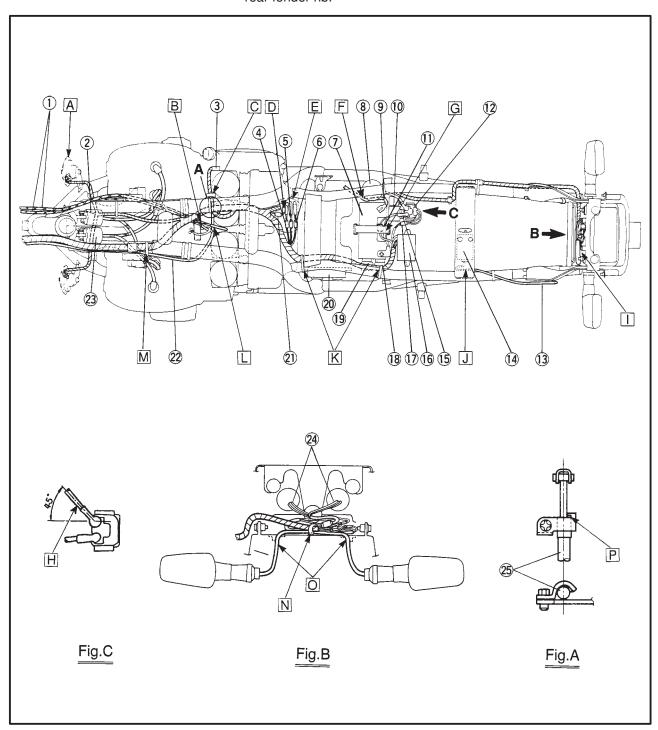




- N Fasten the wireharness, taillight lead and rear turn signal light leads (left and right) with steel clamp on the frame make sure that the end of clamp forward.
- O Route the rear turn signal light leads (left and right) through the each holes of the rear fender.
- P Touch the starter cable to the stopper and position it vertical of the motorcyle.

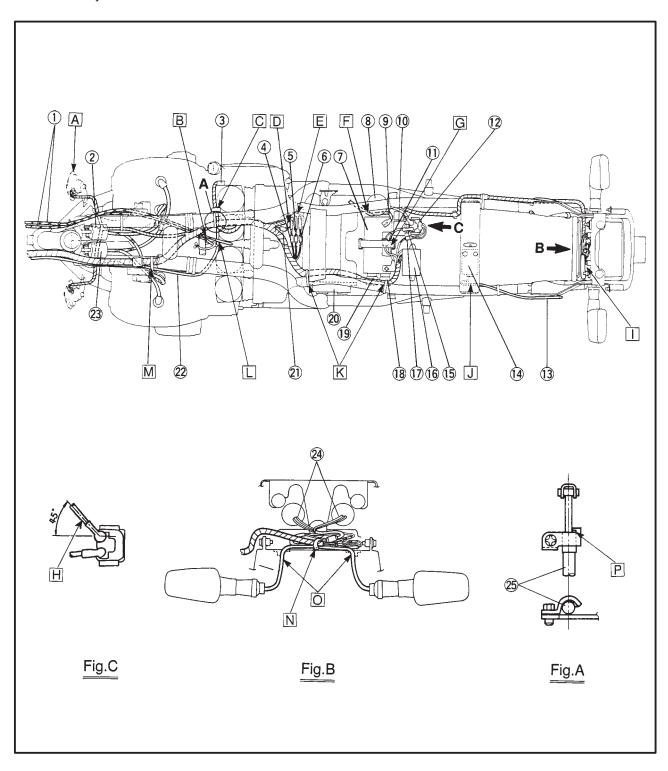




- 1 Meter leads
- (2) Main switch lead
- 3 Starter cable
- 4 Handlebar switch lead (left)
- (5) Clutch hose
- 6 Brake hose
- 7 Handlebar switch lead (right)
- A Route the throttle cables through D Route the handlebar switch lead the guide on the headlight stay.
- B Route the meter leads, main switch lead into the upper hole of the headlight body.
- C Route the handlebar switch lead (left) inside of the clutch hose. Fasten the handlebar switch F Route the speedometer cable lead (left), clutch hose and starter cable with a plastic band.
- (left) and front turn signal light lead (left) into the left under hole of the headlight body.
- E Route the front turn signal light leads (left and right) in front of the headlight stay.
  - through the guide on the headlight stay.
  - G To front brake master cylinder.

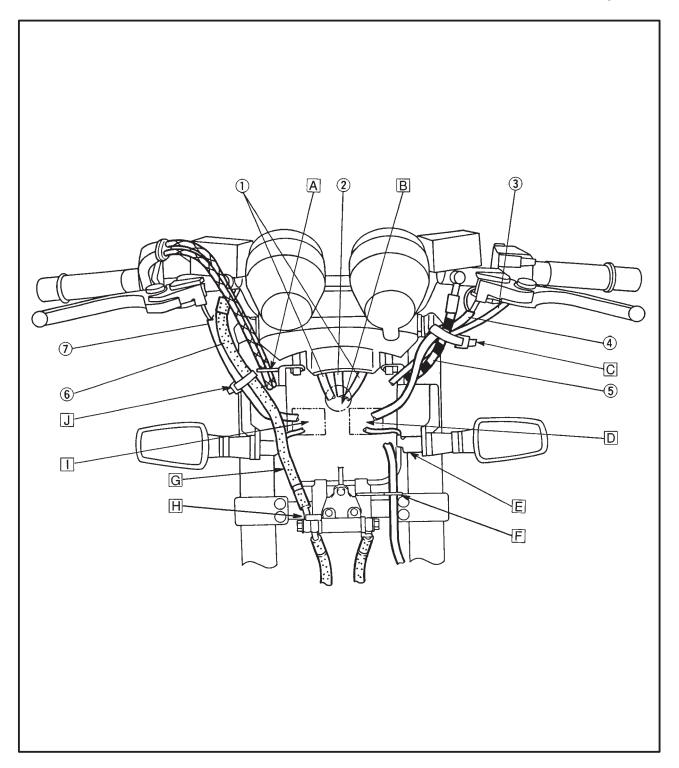



- H Touch the brake pipe to the stopper.
- Route the handlebar switch lead (right) and front turn signal light lead (right) into the right under hole of the headlight stay.
- J Fasten the handlebar switch lead (right) and front brake hose with a plastic band.

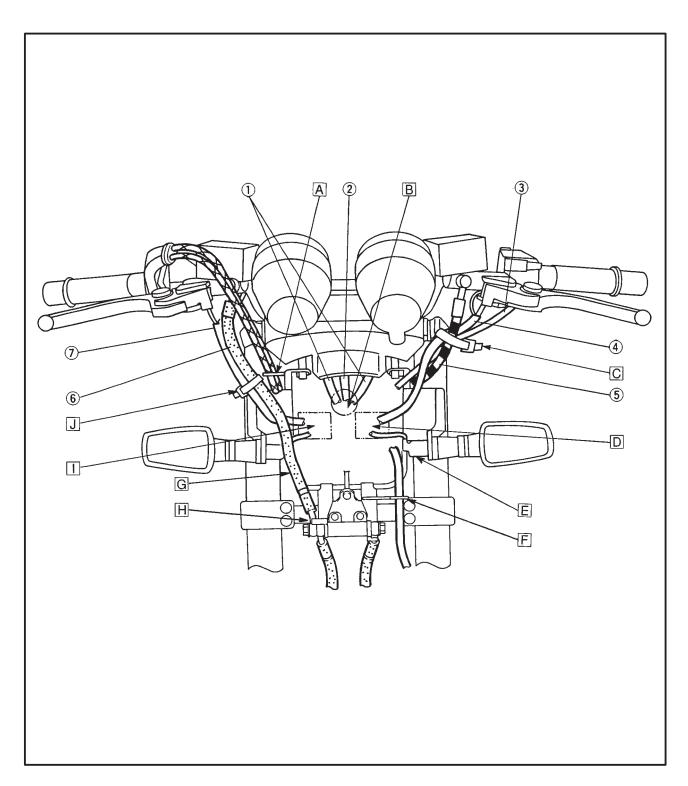



# 





# CHAPTER 3. PERIODIC INSPECTION AND ADJUSTMENT

INTRODUCTION	3-1
PERIODIC MAINTENANCE/LUBRICATION INTERVALS	3-1
SEAT SIDE COVER AND FUEL TANK	3-3
ENGINE	
ADJUSTING THE VALVE CLEARANCE	
SYNCHRONIZING THE CARBURETOR	
ADJUSTING THE IDLING SPEED	
ADJUSTING THE THROTTLE CABLE FREE PLAY	
CHECKING THE SPARK PLUGS	
CHECKING THE IGNITION TIMING	
MEASURING THE COMPRESSION PRESSURE	
CHECKING THE ENGINE OIL LEVEL	
CHECKING THE ENGINE OIL	
MEASURING THE ENGINE OIL PRESSURE	
ADJUSTING THE CLUTCH LEVER	
CHECKING THE CLUTCH FLUID LEVEL	
BLEEDING THE HYDRAULIC CLUTCH SYSTEM	
CLEANING THE AIR FILTER ELEMENT	3-22
CHECKING THE CARBURETOR JOINTS AND INTAKE	
MANIFOLDS	
CHECKING THE FUEL AND VACUUM HOSES	
CHECKING THE CRANKCASE BREATHER HOSE	
CHECKING THE EXHAUST SYSTEM	3-24
CHASSIS	3-25
ADJUSTING THE FRONT BRAKE	3-25
ADJUSTING THE REAR BRAKE	
CHECKING THE BRAKE FLUID LEVEL	
CHECKING THE BRAKE PADS	
ADJUSTING THE REAR BRAKE LIGHT SWITCH	
BLEEDING THE HYDRAULIC BRAKE SYSTEM	
ADJUSTING THE SHIFT PEDAL	
ADJUSTING THE DRIVE CHAIN SLACK	
LUBRICATING THE DRIVE CHAIN	
CHECKING AND ADJUSTING THE STEERING HEAD	
CHECKING THE FRONT FORK	
ADJUSTING THE FRONT FORK LEGS	
ADJUSTING THE REAR SHOCK ABSORBER ASSEMBLIES	
CHECKING THE TIRES	
CHECKING THE WHEELS	
CHECKING AND LUBRICATING THE CABLES	
LUBRICATING THE LEVERS AND PEDALS	3-40



LUBRICATING THE SIDE STAND	3-40
LUBRICATING THE CENTERSTAND	3-40
LUBRICATING THE REAR SUSPENSION	3-40
ELECTRICAL SYSTEM	3-41
CHECKING AND CHARGING THE BATTERY	3-41
CHECKING THE FUSES	3-46
REPLACING THE HEADLIGHT BULB	3-48
ADJUSTING THE HEADLIGHT BEAM	3-49

# INTRODUCTION/ PERIODIC MAINTENANCE/LUBRICATION INTERVALS



# PERIODIC INSPECTION AND ADJUSTMENT

# INTRODUCTION

This chapter includes all information necessary to perform recommended inspections and adjustments. These preventive maintenance procedures, if followed, will ensure more reliable vehicle operation and a longer service life. The need for costly overhaul work will be greatly reduced. This information applies to vehicles already in service as well as new vehicles that are being prepared for sale. All service technicians should be familiar with this entire chapter.

# PERIODIC MAINTENANCE/LUBRICATION INTERVALS

			EVE	ERY					
ITEM	REMARKS	BREAK-IN	6,000 km	12,000 km					
I I EIVI	REWARKS	1,000 km	or	or					
			6 months	12 months					
Valves*	Check valve clearance. Adjust if necessary.	EVERY 2	EVERY 24,000 km or 24 mor						
Spark plugs	Check condition. Clean or replace of necessary.	0	0	0					
Air filter	Clean. Replace if necessary.		0	0					
Carburetor*	Check idle speed/synchronization/starter operation. Adjust if necessary.	0	0	0					
Fuel line*	Check fuel hose for cracks or damage. Replace if necessary.		0	0					
Fuel filter*	Check condition. Replace if necessary.			0					
Engine oil	Replace (Warm engine before draining).	0	0	0					
Engine oil filter*	Replace.	0		0					
Brake*	Check operation/fluid leakage/See NOTE. Correct if necessary.		0	0					
Clutch*	Check operation/fluid leakage/See NOTE. Correct if necessary.		0	0					
Swingarm pivot*	Check swingarm assembly for looseness. Correct if necessary. Moderately repack every 24,000 km or 24 months.**			0					
Rear suspension link pivots*	Check operation. Apply grease lightly every 24,000 km or 24 months.**			0					
Wheels*	Check balance/damage/runout. Replace if necessary.		0	0					
Wheel bearings*	Check bearing assembly for looseness/damage. Replace if damaged.		0	0					
Steering bearings*	Check bearing assembly for looseness. Correct if necessary. Moderately repack every 24,000 km or 24 months.	0		0					
Front forks*	Check operation/oil leakage. Repair if necessary.		0	0					
Rear shock absorber*	Check operation/oil leakage. Repair if necessary.		0	0					
Drive chain	Check chain free play/alignment. Adjust if necessary. Clean and lube.	E	VERY 500 k	· · · · · · · · · · · · · · · · · · ·					
Fittings/Fasteners*	Check all chassis fittings and fasteners. Correct if necessary.	0	0	0					
Center and sidestand*	Check operation. Repair if necessary.	0	0	0					
Sidestand switch*	Check operation. Clean or replace if necessary.	0	0	0					
A.C. Generator*	Replace generator brushes every 100,000 km.								

# PERIODIC MAINTENANCE/LUBRICATION INTERVALS



- \*: It is recommended that these items be serviced by a Yamaha dealer.
- \*\*: Molybdenum disulfide grease.
- \*\*\*: Lithium soap base grease.

# NOTE: -


Brake fluid replacement:

- 1. When disassembling the master cylinder, caliper cylinder or clutch release cylinder, replace the brake fluid. Normally check the brake fluid level and add the fluid as required.
- 2. On the inner parts of the master cylinder, caliper cylinder and clutch release cylinder, replace the oil seals every two years.
- 3. Replace the brake and clutch hoses every four years, or if cracked or damaged.

# **SEAT, SIDE COVER AND FUEL TANK**



# **SEAT, SIDE COVER AND FUEL TANK**

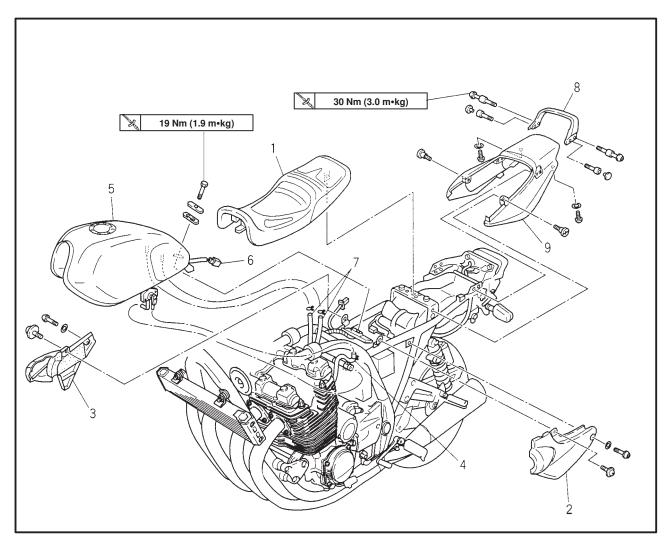

Order	Job/Part	Q'ty	Remarks
	Removing the seat, side cover and fuel tank		Remove the parts in the order listed.
1	Seat	1	
2	Side cover (left)	1	
3	Side cover (right)	1	
4	Fuel hose	1/1	NOTE:
			Disconnect the fuel pipe, set the fuel cock lever "ON" or "RES" position.
5	Fuel tank	1	
6	Fuel sender lead	1	
7	Drain hose	2	
8	Grab bar	1	
9	Rear fender cover	1	
			For installation, reverse the removal procedure.




# **ENGINE**

# **ADJUSTING THE VALVE CLEARANCE**

the following procedure applies to all of the valves.


# NOTE: \_

- Valve clearance adjustment should be made on a cold engine, at room temperature.
- When the valve clearance is to be measured or adjusted, the piston must be at top dead center (TDC) on the compression stroke.
- 1. Remove:
  - seat
  - side covers
  - fuel tank
     Refer to "SEAT, SIDE COVER AND FUEL TANK".

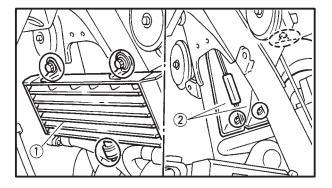


# 2. Remove:

- oil cooler (1)
- air ducts ②

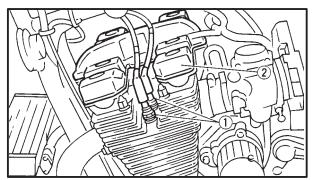

# 3. Remove:

- spark plugs ①
- cylinder head cover ②
- timing plate cover 3

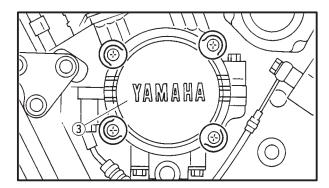

# 4. Measure:


valve clearance
 Out of specification → Adjust.




Valve clearance (cold):

Intake valve 0.11  $\times$  0.15 mm Exhaust valve 0.16  $\times$  0.20 mm



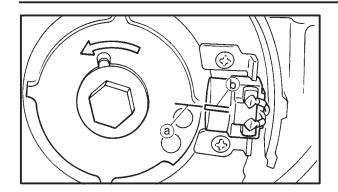


- a. Turn the crankshaft counterclockwise.
- b. When piston #1 is at TDC on the compression stroke, align the TDC mark (a) on the timing plate with the mark (b) on the pickup coil base plate.

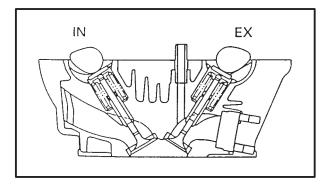

# NOTE: -


TDC on the compression stroke can be found when the camshaft lobes are turned away from each other.

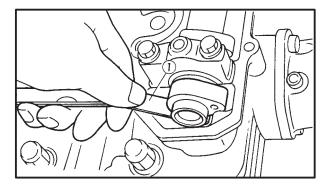

c. Measure the valve clearance with a thickness gauge 1.



- If the valve clearance is incorrect, record the measured reading.
- Measure the valve clearance in the following sequence.

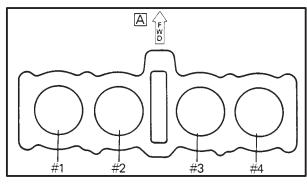


# Valve clearance measuring sequence Cylinder #1 $\rightarrow$ #2 $\rightarrow$ #4 $\rightarrow$ #3


A Front


- d. For each cylinder, starting with cylinder #1 at TDC, turn the crankshaft counterclockwise as specified in the following table.
- B Degrees that the crank shaft is turned counter clockwise
- C Cylinder
- D Combustion cycle


Cylinder #2	180°
Cylinder #4	360°
Cylinder #3	540°

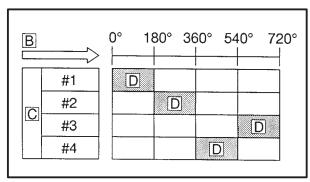





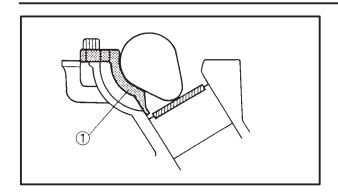

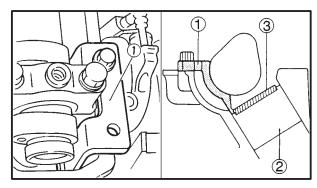

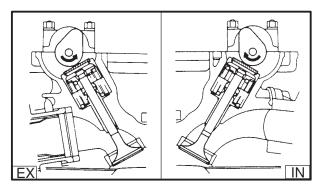

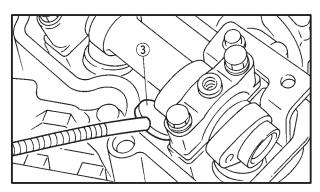

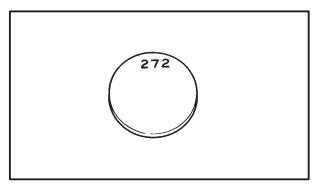

- 5. Adjust:
  - Valve clearance
- a. Align the intake and exhaust valve lifter slots with each other.
- b. Slowly turn the crankshaft until the cam lifted at maximum.
- c. Install the tappet adjusting tool 1 as shown.



Tappet adjusting tool: P/N 90890-04110

## NOTE: -

Make sure that the tappet adjusting tool touches only the valve lifter ②, not the valve pad ③.

- d. Slowly turn the crankshaft so that the valve pad can be removed.
- e. Remove the valve pad from the valve lifter with a small screwdriver and a pair of tweezers. Make a note of the position of each valve pad and valve pad number so they can be installed in the correct place.
- f. Select the proper valve pad from the following table.

		e pad ss range	Available valve pads
N	lo. 200 × lo. 320	2.00 mm × 3.20 mm	25 thicknesses in 0.05 mm incre ments

# NOTE: -

- The thickness of each valve pad is marked in hundredths of millimeters on the side that touches the valve lifter (not the camshaft).
- Since valve pads of various sizes are originally installed, the valve pad number must be rounded in order to reach the closest equivalent to the original.
- g. Round off the original valve pad number according to the following table.



# INTAKE

MEASURED										IN	ISTA	LLEC	PAE	) NU	MBE	R									$\neg$
CLEARANCE	200 2	205 2	210	215	220	225	230	235	240								280	285	290	295	300	305	310	315 3	20
$0.00 \times 0.05$																								305 3	
0.06 × 0.10	2																								
0.11 × 0.15		200 205 210 215 220 225 230 235 240 245 250 255 260 265 270 275 280 285 290 295 300 305 310 315 STANDARD CLEARANCE																							
	205 2																							320	$\neg$
	210 2																						320		
	215 2																					320			
	220 2																				320				
$0.36 \times 0.40$	225 2	230 2	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320					
	230 2																		320	]					
	235 2																	320							
	240 2																								
$0.56 \times 0.60$																									
0.61 × 0.65															320										
$0.66 \times 0.70$	255 2	260 2	265	270	275	280	285	290	295	300	305	310	315	320											
	260 2																								
0.76 × 0.80														١	/AL\	VE (	CLE	ARA	NC	E (c	(blo				
	270 2										320	J						.15		,	0.0.,	•			
0.86 × 0.90	275 2														-						^				
	280 2									l										s 25					
	285 2							320												nce			mm		
	290 2						320							F	Repl	ace	250	) pa	d wi	th 2	60 p	ad			
1.06 × 1.10 1.11 × 1.15	295 3 300 3					320									Ρ	ad r	านm	ber:	(ex	amp	ole)				
1.11 × 1.15 1.16 × 1.20	305 3																		•	.50 i	,				
	310 3			320	l															.60 i					
	315 3		020														_					hor	dave		
1.31 × 1.35	320	020												,	-NWS	ıysı	rista	ui pa	au w	/ith r	ium	ber	aow	/f1.	
1.01 × 1.00	320																								

# **EXHAUST**

MEASURED									IN	STA	LLEC	PAE	) NU	MBE	R									
CLEARANCE	200 205	210	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315	320
$0.00 \times 0.05$			200	205	210	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305
$0.06 \times 0.10$					215																			
$0.11 \times 0.15$	200	205	210	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	315
$0.16 \times 0.20$											DARI													
$0.21 \times 0.25$	205 210																							
$0.26 \times 0.30$	210 215																					320		
$0.31 \times 0.35$	215 220																				320			
$0.36 \times 0.40$	220 225																							
	225 230																			]				
$0.46 \times 0.50$	230 235																							
0.51 × 0.55	235 240																							
0.56 × 0.60	240 245																]							
0.61 × 0.65	245 250															]								
0.66 × 0.70	250 255	260	265	270	2/5	280	285	290	295	300	305	310	315	320	ļ									
0.71 × 0.75	255 260													1										
0.76 × 0.80	260 265												ļ											
$0.81 \times 0.85$ $0.86 \times 0.90$	265 270												,	VAL	VE (	CLE	ARA	ANC	E (c	old)	:			
0.86 × 0.90 0.91 × 0.95	270 275 275 280										J						).20		•	, ,	-			
0.96 × 1.00	280 285									J				-					-	^				
1.01 × 1.05	285 290								l								stal							
1.06 × 1.10	290 295							J									d cl					mm	1	
1.11 × 1.15	295 300					020	l							Rep	lace	250	) pa	d w	ith 2	:65 p	oad			
1.16 × 1.20	300 305				020	l								F	ad	num	ber	: (ex	amı	ole)				
1.21 × 1.25	305 310				J												250	•		,				
1.26 × 1.30	310 315			J																				
1.31 × 1.35	310   315   320   Pad No. 265 = 2.65 mm   Always install pad with number down.																							
1.36 × 1.40	320	J											4	HIW	ayS	IIISla	an pa	au v	VILII	iiuli	nei	uov	VII.	



### **EXAMPLE:**

Original valve pad number = 248 (thickness = 2.48 mm (0.098 in))

Rounded value = 250

h. Locate the rounded number of the original valve pad and the measured valve clearance in the valve pad selection table.

The point where the column and row intersect is the new valve pad number.

# NOTE: -

The new valve pad number is only an approximation. The valve clearance must be measured again and the above steps should be repeated if the measurement is still incorrect.

- i. Install the new valve pad with the numbered side facing down.
- j. Remove the tappet adjusting tool.

# INTAKE

# **EXHAUST**

- k. Measure the valve clearance again.
- If the valve clearance is still out of specification, repeat al of the valve clearance adjustment steps until the specified clearance is obtained.

\*\*\*\*

- 6. Install:
  - all removed parts

# NOTE: -

For installation, reverse the removal procedure. Note the following points.

- 7. Install:
  - fuel tank
  - side covers
  - seat

Refer to "SEAT, SIDE COVER AND FUEL TANK".

# SYNCHRONIZING THE CARBURETORS



EAS00050

# SYNCHRONIZING THE CARBURETORS

**NOTE** 


Prior to synchronizing the carburetors, the valve clearance and the engine idling speed should be properly adjusted and the ignition timing should be checked.

1. Stand the motorcycle on a level surface.

NOTE: -

Place the motorcycle on a suitable stand.

- 2. Remove:
  - side covers
  - seat
  - •fuel tank Refer to "SEAT, SIDE COVER AND FUEL TANK".

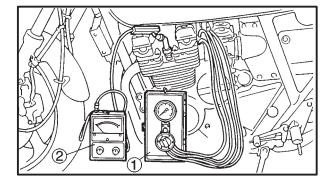

- 3. Install:
  - vacuum gauge (1)
  - engine tachometer ②
    (to the spark plug lead of cyl. #1)



Vacuum gauge 90890-03094 Engine tachometer 90890-03113

- 4. Start the engine and let it warm up for several minutes.
- 5. Check:
  - engine idling speed
     Out of specification → Adjust.
     Refer to "ADJUSTING THE ENGINE IDLING SPEED".




Engine idling speed:  $1,000 \times 1,100 \text{ r/min}$ 

- 6. Adjust:
  - carburetor synchronization
- a. Synchronize carburetor #1 to carburetor #2 by turning the synchronizing screw ① in either direction until both gauges read the same.

### NOTE: -

After each step, rev the engine two or three times, each time for less than a second, and check the synchronization again.

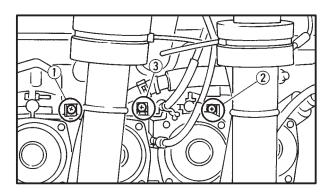

# SYNCHRONIZING THE CARBURETORS ADJUSTING THE ENGINE IDLING SPEED



- b. Synchronize carburetor #4 to carburetor #3 by turning the synchronizing screw ② in either direction until both gauges read the same.
- c. Synchronize carburetor #2 to carburetor #3 by turning the synchronizing screw ③ in either direction until both gauges read the same.



Vacuum pressure at engine idling speed:

31.3 kPa (235 mm Hg)

### NOTE: —

The difference in vacuum pressure between two carburetors should not exceed 1.33 kPa (10 mm Hg, 0.4 in Hg).

- 7. Check:
  - engine idling speed
     Out of specification → Adjust.
- 8. Stop the engine and remove the measuring equipment.
- 9. Adjust:
  - throttle cable free play
     Refer to "ADJUSTING THE THROTTLE CABLE FREE PLAY".



Throttle cable free play (at the throttle grip):

 $3 \times 5 \text{ mm}$ 

- 10. Install:
  - fuel tank
  - seat
  - side covers
     Refer to "SEAT, SIDE COVER AND FUEL TANK".


EAS00054

# ADJUSTING THE ENGINE IDLING SPEED

### NOTE: -

Prior to adjusting the engine idling speed, the carburetor synchronization should be adjusted properly, the air filter should be clean, and the engine should have adequate compression.

- 1. Start the engine and let it warm up for several minutes.
- 2. Install:
  - engine tachometer ①
    (to the spark plug lead of cyl. #1)

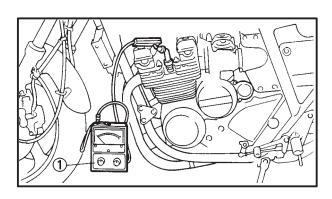

# ADJUSTING THE ENGINE IDLING SPEED ADJUSTING THE THROTTLE CABLE FREE PLAY





# **Engine tachometer** 90890-03113

- 3. Measure:
  - engine idling speed Out of specification → Adjust.



Engine idling speed 1,000 × 1,100 r/min

- 4. Adjust:
  - engine idling speed
- a. Turn the pilot screw 1 in or out until it is lightly seated.
- b. Turn the pilot screw out the specified number of turns.



Carburetor angle driver 2 90890-03158



# **Pilot screw**

1-1/2 turns out

c. Turn the throttle stop screw (1) in direction (a) or b until the specified engine idling speed is obtained.

Direction (a)	Engine idling speed is increased.
Direction (b)	Engine idling speed is decreased.

- 5. Adjust:
  - throttle cable free play Refer to "ADJUSTING THE THROTTLE CABLE FREE PLAY".



Throttle cable free play (at the flange of the throttle grip)

 $3 \times 5 \text{ mm}$ 

# ADJUSTING THE THROTTLE CABLE FREE **PLAY**


NOTE: -


Prior to adjusting the throttle cable free play, the engine idling speed and carburetor synchronization should be adjusted properly.


- 1. Check:
  - throttle cable free play (a) Out of specification → Adjust.



Throttle cable free play (at the flange of the throttle grip)  $3 \times 5 \text{ mm}$ 

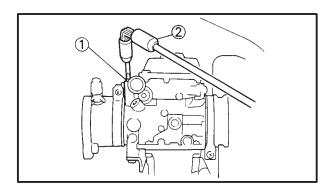

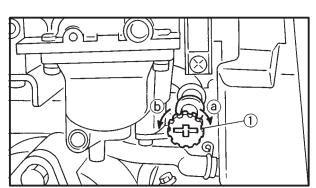

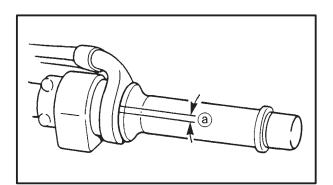

# ADJUSTING THE THROTTLE CABLE FREE PLAY



- 2. Remove:
  - seat
  - fuel tank Refer to "SEAT, SIDE COVER AND FUEL TANK".
- 3. Adjust:
  - throttle cable free play



When the motorcycle is accelerating, the accelerator cable 1 is pulled.

# Carburetor side

- a. Loosen the locknut (2) (3) on the decelerator cable.
- b. Turn the adjusting nut 4 in direction a or b to take up any slack on the decelerator cable.
- c. Loosen the locknut (5) on the accelerator cable.
- d. Turn the adjusting nut (6) in direction (a) or (b) until the specified throttle cable free play is ob-

Direction (a)	Throttle cable free play is increased.
Direction (b)	Throttle cable free play is decreased.

e. Tighten the locknuts.

# NOTE: -

If the specified throttle cable free play cannot be obtained on the carburetor side of the cable, use the adjusting nut on the handlebar side.

# Handlebar side

- a. Loosen the locknut (7).
- b. Turn the adjusting nut (8) in direction (a) or (b) until the specified throttle cable free play is obtained.

Direction (a)	Throttle cable free play is increased.
Direction (b)	Throttle cable free play is decreased.

c. Tighten the locknut.

# **A** WARNING


After adjusting the throttle cable free play, turn the handlebar to the right and to the left to ensure that this does not cause the engine idling speed to change.




# 4. Install:

- fuel tank
- seat

Refer to "SEAT, SIDE COVER AND FUEL TANK".

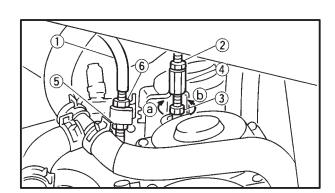

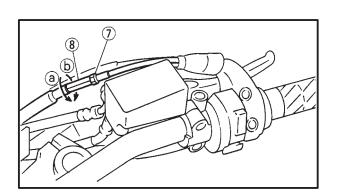

# CHECKING THE SPARK PLUGS CHECKING THE IGNITION TIMING



# CHECKING THE SPARK PLUGS

The following procedure applies to all of the spark plugs.

1. Disconnect:

spark plug cap

2. Remove:

spark plug



Before removing the spark plugs, blow away any dirt accumulated in the spark plug wells with compressed air to prevent it from falling into the cylinders.



spark plug type Incorrect → Change.

Spark plug type (manufacturer) DPR8EA-9 (NGK) X24EPR-U9 (DEŃSO)

Check

(2)

377-000

@lectrode (1)

Damage/wear → Replace the spark plug.

(Insulator (2)

Abnormal color → Replace the spark plug. Normal color is a medium-to-light tan color.

5. Clean:

spark plug

(with a spark plug cleaner or wire brush)

6. Measure:

(spark plug gap (a)

(with a wire gauge)
Out of specification → Regap.



Spark plug gap  $0.8 \times 0.9 \,\mathrm{mm}$ 

7. Install:

Spark plug



Spark plug 18 Nm (1.8 m/kg)

NOTE: -

Before installing the spark plug clean the spark plug and gasket surface.

8. Connect:


spark plug cap

**CHECKING THE IGNITION TIMING** 

Prior to checking the ignition timing, check the wiring connections of the entire ignition system. Make sure that all connections are tight and free of corrosion.


1. Remove:


(1) Timing plate cover

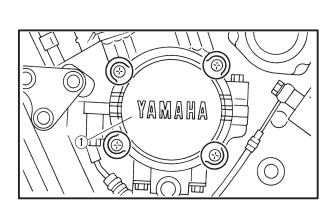

# CHECKING THE IGNITION TIMING MEASURING THE COMPRESSION PRESSURE



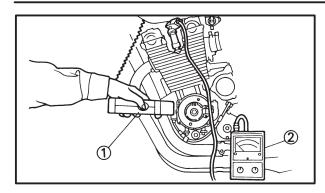

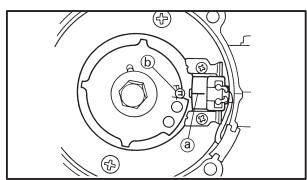

- 2. Install:
  - Jiming light 1
  - engine tachometer 2 (to the spark plug lead of cyl. #1)



Timing light 90890-03141 Engine tachometer 90890-03113

3. Check: gnition timing

a. Start the engine, warm it up for several minutes, and then let it run at the specified engine idling speed.



Engine idling speed  $1,000 \times 1,100 \text{ r/min}$ 

b. Check that the pickup coil ⓐ is within the firing range ⓑ on th timing plate.
 Incorrect firing range → Check the ignition system.

NOTE: -

The ignition timing is not adjustable.

- 4. Remove:
  - engine tachometer
  - **diming light**
- 5. Install:
  - **Timing plate cover**



Timing plate cover bolt: 7 Nm (0.7 m⋅kg) LOCTITE®

EAS0006

# MEASURING THE COMPRESSION PRESSURE

The following procedure applies to all of the cylinders.

NOTE: -

Insufficient compression pressure will result in a loss of performance.


- 1. Check:
- (valve clearance
  - Out of specification → Adjust.

Refer to "ADJUSTING THE VALVE CLEAR-ANCE".

2. Start the engine, warm it up for several minutes, and then turn it off.

# MEASURING THE COMPRESSION PRESSURE



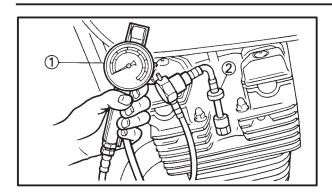

- 3. Disconnect:
  - spark plug cap
- 4. Remove:
  - spark plug

# **CAUTION:**

Before removing the spark plugs, use compressed air to blow away any dirt accumulated in the spark plug wells to prevent it from falling into the cylinders.

# 5. Install:

- compression gauge ①
- adapter ②



Compression gauge 90890-03081 Adapter 90890-04082

# 6. Measure:

compression pressure

Above the maximum pressure → Inspect the cylinder head, valve surfaces, and piston crown for carbon deposits.

Below the minimum pressure  $\rightarrow$  Squirt a few drops of oil into the affected cylinder and measure again.

• Refer to the following table.

Compression pressure (With oil applied into cylinder)		
Reading	Diagnosis	
Higher than without oil	Piston wear or damage  → Repair.	
Same as without oil	Piston ring(-s), valves, cylinder head gasket or piston possibly defective → Repair. Compression pressure (at sea level)	



Compression pressure (at sea level):

Standard:

1,050 kPa (10.5 kg/cm<sup>2</sup>, 10.5 bar)/400 r/min.

Minimum:

900 kPa (9.0 kg/cm<sup>2</sup>, 9.0 bar)/400 r/min.

Maximum:

1,200 kPa (12.0 kg/cm<sup>2</sup>, 12.0 bar)/400 r/min.

# MEASURING THE COMPRESSION PRESSURE/ CHECKING THE ENGINE OIL LEVEL



- a. Turn the main switch to "ON".
- b. With the throttle wide open, crank the engine until the reading on the compression gauge stabilizes.

# **A** WARNING

To prevent sparking, ground all spark plug leads before cranking the engine.

### NOTE: -

The difference in compression pressure between cylinders should not exceed 100 kPa (1 kg/cm<sup>2</sup>, 1 bar).

- 7. Install:
  - spark plug



Spark plug 18 Nm (1.8 m•kg)

- 8. Connect:
- spark plug cap

# **CHECKING THE ENGINE OIL LEVEL**

1. Stand the motorcycle on a level surface.

### NOTE:

- Place the motorcycle on a suitable stand.
- Make sure that the motorcycle is upright.
- 2. Let the engine idle for a few minutes, and then stop it.
- 3. Check:
  - engine oil level

The engine oil level should be between the minimum level marks (a) and maximum level marks (b).


Below the minimum level mark  $\rightarrow$  Add the recommended engine oil to the proper level.




Recommended engine oil

Refer to the chart for the engine oil grade which is best suited for certain atmospheric temperatures.


API standard SE or higher grade ACEA standard G4 or G5

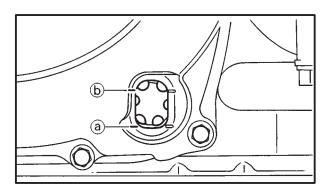

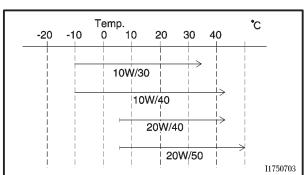

# CHECKING THE ENGINE OIL LEVEL/ CHANGING THE ENGINE OIL



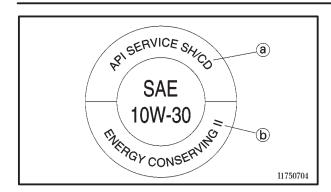

# **CAUTION:**

- Engine oil also lubricates the clutch and the wrong oil types or additives could cause clutch slippage. Therefore, do not add any chemical additives or use engine oils with a grade of CD (a) or higher and do not use oils labeled "ENERGY CONSERV-ING II" (b) or higher.
- Do not allow foreign materials to enter the crankcase.
- 4. Start the engine, warm it up for several minutes, and then turn it off.
- 5. Check the engine oil level again.

# NOTE: -

Before checking the engine oil level, wait a few minutes until the oil has settled.

# **CHANGING THE ENGINE OIL**

- 1. Start the engine, warm it up for several minutes, and then turn it off.
- 2. Place a container under the engine oil drain bolt.
- 3. Remove:
  - engine oil filler cap
  - engine oil drain bolt (1)
- 4. Drain:
  - engine oil (completely from the crankcase)
- 5. If the oil filter element is also to be replaced, perform the following procedure.



- a. Remove the oil filter element cover (1) and oil filter element (2).
- b. Check the O-ring 3 and replace it of it is cracked or damage.
- c. Install the new oil filter element and the oil filter element cover.



(3)

Oil filter element cover bolt 15 Nm (1.5 m•kg)



- 6. Check:
  - engine oil drain bolt gasket Damage → Replace.
- 7. Install:
  - engine oil drain bolt



Engine oil drain bolt 43 Nm (4.3 m•kg)

- 8. Fill:
  - crankcase

(with the specified amount of the recommended engine oil)

# CHANGING THE ENGINE OIL/ MEASURING THE ENGINE OIL PRESSURE





Quantity

Total amount

4.2 L

Without oil filter element replacement

31

With oil filter element replacement

3.35 L

- 9. Install:
  - engine oil filler cap
- 10. Start the engine, warm it up for several minutes, and then turn it off.
- 11. Check:
  - engine

(for engine oil leaks)

- 12. Check:
  - engine oil level

Refer to "CHECKING THE ENGINE OIL LEVEL".

EAS0007

### MEASURING THE ENGINE OIL PRESSURE

- 1. Check:
- engine oil level

Below the minimum level mark → Add the recommended engine oil to the proper level.

2. Start the engine, warm it up for several minutes, and then turn it off.

# **CAUTION:**

When the engine is cold, the engine oil will have a higher viscosity, causing the engine oil pressure to increase. Therefore, be sure to measure the engine oil pressure after warming up the engine.

- 3. Remove:
  - main gallery bolt

# **A** WARNING


The engine, muffler and engine oil are extremely hot.

- 4. Install:
  - oil pressure gauge 1
  - oil pressure adapter B 2



Oil pressure gauge 90890-03153 Oil pressure adapter B 90890-03124

- 5. Measure:
- engine oil pressure (at the following conditions)

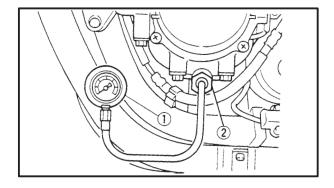

# MEASURING THE ENGINE OIL PRESSURE/ ADJUSTING THE CLUTCH LEVER





Engine oil pressure 80 kPa (0.8 kg/cm², 0.8 bar) Engine speed Approx. 1000 r/min Engine oil temperature 70 × 80°C (158 × 176°F)

Out of specification → Adjust.

Engine oil pressure	Possible causes
Below specification	Faulty oil pump Clogged oil filter Leaking oil passage Broken or damaged oil seal
Above specification	Leaking oil passage Faulty oil filter Oil viscosity too high

# 6. Install:

main gallery bolt




Main gallery bolt 12 Nm (1.2 m•kg)

### EAS00082

(a)

# **ADJUSTING THE CLUTCH LEVER**

- 1. Adjust:
  - clutch lever position (distance ⓐ from the handlebar grip to the clutch lever)

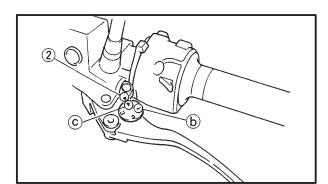

a. While pushing the clutch lever forward, turn the adjusting dial ① until the clutch lever is in the desired position.

# NOTE: -

Be sure to align the setting on the adjusting dial with the arrow mark ② on the clutch lever holder.


Position #1 (b)	Distance (a) is the largest
Position #4 ©	Distance (a) is the smallest

# **A** WARNING

After adjusting the clutch lever position, make sure that the pin on the clutch lever holder is firmly inserted in the hole in the adjusting dial.

## CHECKING THE CLUTCH FLUID LEVEL/ BLEEDING THE HYDRAULIC CLUTCH SYSTEM



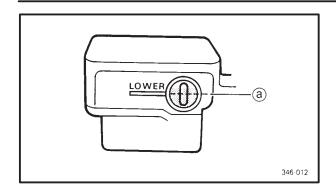

EAS0008

#### **CHECKING THE CLUTCH FLUID LEVEL**

1. Stand the motorcycle on a level surface.

#### NOTE:

Place the motorcycle on a suitable stand.

#### 2. Check:

 clutch fluid level Below the minimum level mark (a) → Add the recommended clutch fluid to the proper level.



Recommended clutch fluid Brake fluid DOT 4

## **A** WARNING

- Use only the designated clutch fluid. Other clutch fluids may cause the rubber seals to deteriorate, causing leakage and poor clutch performance.
- Refill with the same type of clutch fluid that is already in the system. Mixing clutch fluids may result in a harmful chemical reaction, leading to poor clutch performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the clutch fluid and could cause vapor lock.

CAUTION:
----------

Clutch fluid may damage painted surfaces or plastic parts. Therefore, always clean up any spilt clutch fluid immediately.

NOTE:	

In order to ensure a correct reading of the clutch fluid level, make sure that the top of the reservoir is horizontal.

EAS00084

## BLEEDING THE HYDRAULIC CLUTCH SYSTEM

## **A** WARNING

Bleed the hydraulic clutch system whenever:


- the system was disassembled,
- · a clutch hose was loosened or removed,
- the clutch fluid level is very low,
- clutch operation is faulty.

#### NOTE: -

- Be careful not to spill any clutch fluid or allow the clutch master cylinder reservoir to overflow.
- When bleeding the hydraulic clutch system, make sure that there is always enough clutch fluid before applying the clutch lever. Ignoring this precaution could allow air to enter the hydraulic clutch system, considerably lengthening the bleeding procedure.
- If bleeding is difficult, it may be necessary to let the clutch fluid settle for a few hours. Repeat the bleeding procedure when the tiny bubbles in the hose have disappeared.



hydraulic clutch system

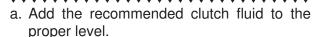

- b. Install the clutch master cylinder reservoir diaphragm.
- c. Connect a clear plastic hose ① tightly to the bleed screw ②.
- d. Place the other end of the hose into a container.
- e. Slowly squeeze the clutch lever several times.
- f. Fully squeeze the clutch lever without releasing it.
- g. Loosen the bleed screw.
  - This will release the tension and cause the clutch lever to contact the handlebar grip.
- h. Tighten the bleed screw and then release the clutch lever.
- i. Repeat steps (e) to (h) until all of the air bubbles have disappeared from the clutch fluid in the plastic hose.
- j. Tighten the bleed screw to specification.




## Bleed screw 6 Nm (0.6 m•kg)

k. Add the recommended clutch fluid to the proper level.

Refer to "CHECKING THE CLUTCH FLUID LEVEL".





After bleeding the hydraulic clutch system, check the clutch operation.

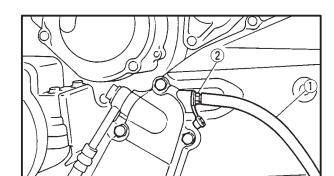


## **CLEANING THE AIR FILTER ELEMENT**



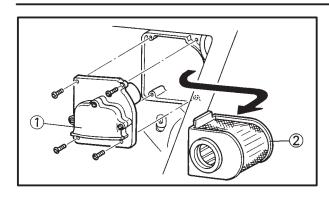

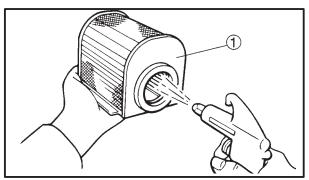

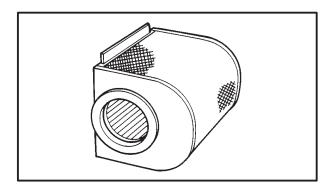

EAS00087

#### **CLEANING THE AIR FILTER ELEMENT**

- 1. Remove:
  - side cover (right)
     Refer to "SEAT, SIDE COVER AND FUEL TANK".
- air filter case cover (1)
- 2. Remove:
  - air filter element 2
- 3. Clean:
  - air filter element ①
     Apply compressed air to the inner surface of the air filter element.

- 4. Check:
  - air filter element
     Damage → Replace.
- 5. Install:
  - air filter element
  - air filter case cover (along with the gasket)

## **CAUTION:**

Never operate the engine without the air filter element installed. Unfiltered air will cause rapid wear of engine parts and may damage the engine. Operating the engine without the air filter element will also affect the carburetor tuning, leading to poor engine performance and possible overheating.

#### NOTE:

Make sure that the air filter element is properly installed in the air filter case.

- 6. Install:
  - side cover (right)
     Refer to "SEAT, SIDE COVER AND FUEL TANK".

### CHECKING THE CARBURETOR JOINTS AND INTAKE MANIFOLDS/ CHECKING THE FUEL AND VACUUM HOSES



EAS00095

## CHECKING THE CARBURETOR JOINTS AND INTAKE MANIFOLDS

The following procedure applies to all of the carburetor joints and intake manifolds.

- 1. Remove:
  - seat
  - side cover
  - fuel tank
     Refer to "SEAT, SIDE COVER AND FUEL TANK".



- carburetor joint (1)
- intake manifold ②
   Cracks/damage → Replace.

Refer to "CARBURETOR" in chapter 6.

- 3. Install:
  - fuel tank
  - side cover
  - seat

Refer to "SEAT, SIDE COVER AND FUEL TANK".

EAS00096

## CHECKING THE FUEL AND VACUUM HOSES

The following procedure applies to all of the fuel and vacuum hoses.

- 1. Remove:
  - seat
  - fuel tank


Refer to "SEAT, SIDE COVER AND FUEL TANK".



- vacuum hose ①
- fuel hose 2

Cracks/damage → Replace.

Loose connection → Connect properly.

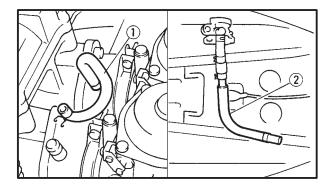


### 3. Install:

- fuel tank
- seat

Refer to "SEAT, SIDE COVER AND FUEL TANK".

## CHECKING THE CRANKCASE BREATHER HOSE/ CHECKING THE EXHAUST SYSTEM



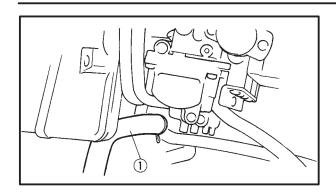

EAS0009

## CHECKING THE CRANKCASE BREATHER HOSE

EASON100

- 1. Check:
  - crankcase breather hose ①
     Cracks/damage → Replace.
     Loose connection → Connect properly.

#### **CAUTION:**

Make sure that the crankcase breather hose is routed correctly.

EAS00099


#### CHECKING THE EXHAUST SYSTEM


The following procedure applies to all of the exhaust pipes, mufflers and gaskets.

- 1. Check:
- exhaust pipe ①
- muffler 2

Cracks/damage → Replace.

- gasket ③, ④, ⑤ Exhaust gas leaks → Replace.
- 2. Check:
  - tightening torque

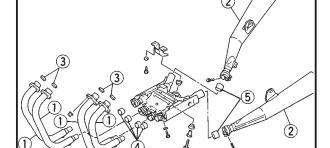

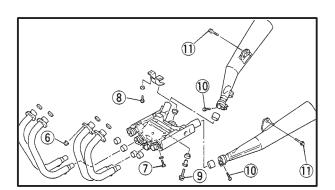




Exhaust pipe nut 6
25 Nm (2.5 m•kg)
Exhaust pipe and exhaust
chamber screw 7
20 Nm (2.0 m•kg)
Muffler bracket bolt 8
20 Nm (2.0 m•kg)
Exhaust chamber bolt 9
25 Nm (2.5 m•kg)
Exhaust chamber and muffler bolt

20 Nm (2.0 m•kg) Muffler and stay bolt ① 20 Nm (2.0 m•kg)

## ADJUSTING THE FRONT BRAKE/ ADJUSTING THE REAR BRAKE



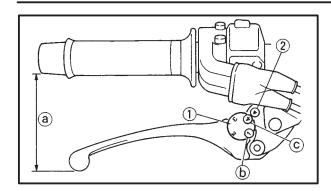

EAS00107

#### **CHASSIS**

#### ADJUSTING THE FRONT BRAKE

- 1. Adjust:
  - brake lever position (distance a) from the throttle grip to the brake lever)
- a. While pushing the brake lever forward, turn the adjusting dial ① until the brake lever is in the desired position.

#### NOTE: -

Be sure to align the setting on the adjusting dial with the arrow mark ② on the brake lever holder

	est.
Position #4 ©	Distance (a) is the smallest.
	est.

## **A** WARNING

After adjusting the brake lever position, make sure that the pin on the brake lever holder is firmly inserted in the hole in the adjusting dial.

#### ADJUSTING THE REAR BRAKE

- 1. Check:
  - brake pedal position (distance ⓐ from the top of the rider footrest to the top of the brake pedal)
     Out of specification → Adjust.



Brake pedal position (below the top of the rider footrest)
45 mm

- 2. Adjust:
  - bráke pedal position
- a. Loosen the locknut 1)
- b. Turn the adjusting bolt ② in direction ⓐ or ⓑ until the specified brake pedal position is obtained.

Direction (a)

Brake pedal is lowered.

Direction (b)

Brake pedal is raised.



## **A** WARNING

After adjusting the brake pedal position, check that the end of the adjusting bolt ② is visible through the hole ③.



(a)

## ADJUSTING THE REAR BRAKE/ CHECKING THE BRAKE FLUID LEVEL



EAS00110

c. Tighten the locknut 1 to specification.



Locknut 18 Nm (1.8 m•kg)

## **A** WARNING

A soft or spongy feeling in the brake pedal can indicate the presence of air in the brake system. Before the vehicle is operated, the air must be removed by bleeding the brake system. Air in the brake system will considerably reduce braking performance and could result in loss of control and possibly an accident. Therefore, inspect and, if necessary, bleed the brake system.

#### **CAUTION:**

After adjusting the brake pedal position, make sure that there is no brake drag.

#### 

- 3. Adjust:
  - rear brake light switch Refer to "ADJUSTING THE REAR BRAKE LIGHT SWITCH".

EAS00115

#### **CHECKING THE BRAKE FLUID LEVEL**

1. Stand the motorcycle on a level surface.

#### NOTE: -

- Place the motorcycle on a suitable stand.
- Make sure that the motorcycle is upright.
- 2. Check:
  - brake fluid level
     Below the minimum level mark ⓐ → Add the recommended brake fluid to the proper level.




## Recommended brake fluid DOT 4

A Front brake

B Rear brake

## **A** WARNING

- Use only the designated brake fluid.
   Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.

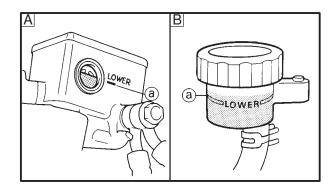

#### CHECKING THE BRAKE FLUID LEVEL/ CHECKING THE BRAKE PADS/ ADJUSTING THE REAR BRAKE LIGHT SWITCH



 When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

	ION:	<b>AUTIC</b>
--	------	--------------

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

#### NOTE:

In order to ensure a correct reading of the brake fluid level, make sure that the top of the reservoir is horizontal.

EAS00118

#### **CHECKING THE BRAKE PADS**

The following procedure applies to all of the brake pads.

- 1. Operate the brake.
- 2. Check:
  - front brake pad
  - rear brake pad

Brake pad almost worn to the wear indicator line ① → Replace the brake pads as a set. Refer to "REPLACING THE FRONT BRAKE PADS" and "REPLACING THE REAR BRAKE PADS" in chapter 6.

- A Front brake
- B Rear brake

EAS0012

## ADJUSTING THE REAR BRAKE LIGHT SWITCH

NOTE: -


The rear brake light switch is operated by movement of the brake pedal.


The rear brake light switch is properly adjusted when the brake light comes on just before the braking effect starts.

- 1. Check:
  - rear brake light operation timing Incorrect → Adjust.
- 2. Adjust:
  - rear brake light operation timing

a. Hold the main body ① of the rear brake light switch so that it does not rotate and turn the adjusting nut ② in direction ② or ⑤ until the rear brake light comes on at the proper time.

Direction (a)	Brake light comes on sooner.
Direction (b)	Brake light comes on later.

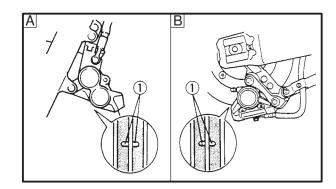

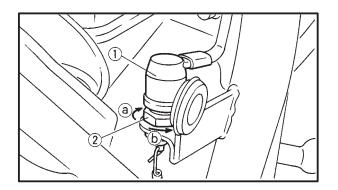

## **BLEEDING THE HYDRAULIC BRAKE SYSTEM**



EAS00134

## BLEEDING THE HYDRAULIC BRAKE SYSTEM

## **A** WARNING

Bleed the hydraulic brake system whenever:

- the system was disassembled,
- a brake hose was loosened or removed,
- the brake fluid level is very low,
- brake operation is faulty.


#### NOTE: -


- Be careful not to spill any brake fluid or allow the brake master cylinder reservoir or brake fluid reservoir to overflow.
- When bleeding the hydraulic brake system, make sure that there is always enough brake fluid before applying the brake. Ignoring this precaution could allow air to enter the hydraulic brake system, considerably lengthening the bleeding procedure.
- If bleeding is difficult, it may be necessary to let the brake fluid settle for a few hours.
   Repeat the bleeding procedure when the tiny bubbles in the hose have disappeared.

#### 1. Bleed:

hydraulic brake system

- a. Add the recommended brake fluid to the proper level.
- b. Install the diaphragm (brake master cylinder reservoir or brake fluid reservoir).
- c. Connect a clear plastic hose ① tightly to the bleed screw ②.
- A Front
- B Rear
- d. Place the other end of the hose into a container.
- e. Slowly apply the brake several times.
- f. Fully squeeze the brake lever or fully depress the brake pedal and hold it in position.
- g. Loosen the bleed screw. This will release the tension and cause the brake lever to contact the throttle grip or the brake pedal to fully extend.
- h. Tighten the bleed screw and then release the brake lever or brake pedal.
- i. Repeat steps (e) to (h) until all of the air bubbles have disappeared from the brake fluid in the plastic hose.
- j. Tighten the bleed screw to specification.

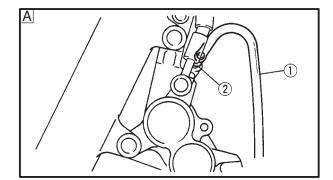

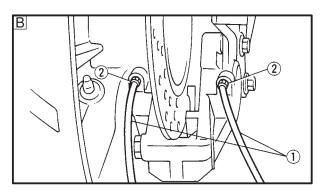

### BLEEDING THE HYDRAULIC BRAKE SYSTEM/ ADJUSTING THE SHIFT PEDAL/ ADJUSTING THE DRIVE CHAIN SLACK







## Bleed screw 6 Nm (0.6 m•kg)

k. Fill the reservoir to the proper level.
Refer to "CHECKING THE BRAKE FLUID LEVEL".

## **A** WARNING

After bleeding the hydraulic brake system, check the brake operation.

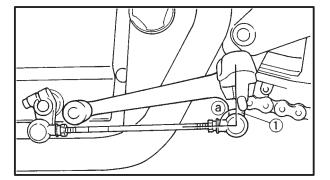

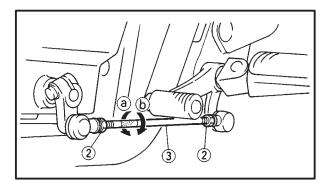

EAS00136

#### **ADJUSTING THE SHIFT PEDAL**

- 1. Check:
- shift pedal position

The end 1 of the shift pedal is above the shift rod. (The angle a should be approximately  $90^{\circ}$ .)

Incorrect → Adjust.

- 2. Adjust:
- shift pedal position
- a. Loosen both locknuts 2.
- b. Turn the shift rod ③ in direction ⓐ or ⓑ to obtain the correct shift pedal position.

Direction (a)	Shift pedal is raised.
Direction (b)	Shift pedal is lowered.

Tighten both locknuts.

EAS0014

## ADJUSTING THE DRIVE CHAIN SLACK

NOTE:

The drive chain slack must be checked at the tightest point on the chain.

#### **CAUTION:**

A drive chain that is too tight will overload the engine and other vital parts, and one that is too loose can skip and damage the swingarm or cause an accident. Therefore, keep the drive chain slack within the specified limits.

## ADJUSTING THE DRIVE CHAIN SLACK



1. Stand the motorcycle on a level surface.

## **A** WARNING

Securely support the motorcycle so that there is no danger of it falling over.

#### NOTE: -


Place the motorcycle on a suitable stand so that the rear wheel is elevated.

- 2. Rotate the rear wheel several times and check the drive chain to locate its tightest point.
- 3. Check:
- drive chain slack ⓐ
   Out of specification → Adjust.



Drive chain slack  $20 \times 30 \text{ mm}$ 

- 4. Adjust:
- drive chain slack

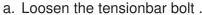

- b. Loosen the wheel axle nut 1.
- c. Loosen both locknuts 2.
- d. Turn both adjusting bolt ③ in direction ⓐ or
  b until the specified drive chain slack is obtained.

$\sim$	Drive chain is tightened.
Direction (b)	Drive chain is loosened.

#### NOTE:

To maintain the proper wheel alignment, adjust both sides evenly.

f. Tighten both locknuts to specification.



Locknut 16 Nm (1.6 m•kg)


g. Tighten the wheel axle nut to specification.




Wheel axle nut 150 Nm (15.0 m•kg)

## **A** WARNING

Always use a new cotter pin.

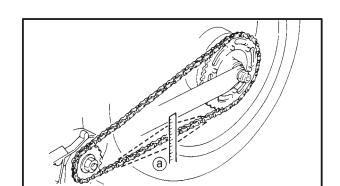

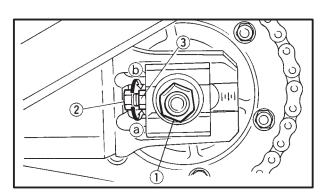

## ADJUSTING THE DRIVE CHAIN SLACK/ LUBRICATING THE DRIVE CHAIN



### **CAUTION:**

Do not loosen the wheel axle nut after tightening it to the specified torque. If the groove in the wheel axle nut is not aligned with the cotter pin hole in the wheel axle, tighten the nut further until they are aligned.

i. Tighten the tensionbar bolt to specification.




Tensionbar bolt 23 Nm (2.3 m•kg)

FAS0014

#### **LUBRICATING THE DRIVE CHAIN**

The drive chain consists of many interacting parts. If the drive chain is not maintained properly, it will wear out rapidly.

Therefore, the drive chain should be serviced, especially when the motorcycle is used in dusty areas. This motorcycle has a drive chain with small rubber O-rings ① between each side plate. Steam cleaning, high-pressure washing, certain solvents, and the use of a coarse brush can damage these O-rings. therefore, use only kerosine to clean the drive chain. Wipe the drive chain dry and thoroughly lubricate it with engine oil or chain lubricant that is suitable for O-ring chains. Do not use any other lubricants on the drive chain since they may contain solvents that could damage the O-rings.

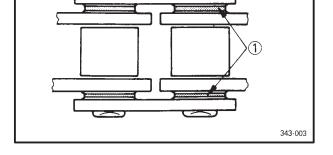



Recommended lubricant Engine oil or chain lubricant suitable for O-ring chains

## CHECKING AND ADJUSTING THE STEERING HEAD



EAS00146

## CHECKING AND ADJUSTING THE STEER-ING HEAD

1. Stand the motorcycle on a level surface.

## **A** WARNING

Securely support the motorcycle so that there is no danger of it falling over.

NOTE: —

Place the motorcycle on a suitable stand so that the front wheel is elevated.





steering head


Grasp the bottom of the front fork legs and gently rock the front fork.

Looseness or binding  $\rightarrow$  Adjust the steering head.

- 3. Remove:
  - seat
  - fuel tank
    Refer to "SEAT, SIDE COVER AND FUEL
    TANK".
- 4. Remove:
  - headlight unit 1

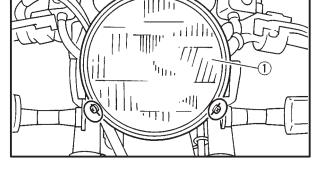

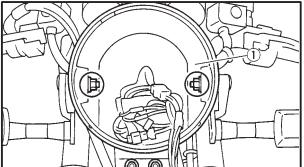

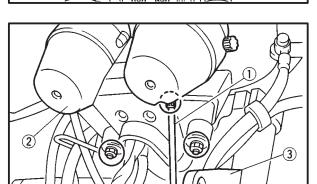


- 5. Remove:
  - headlight body 1

- 6. Disconnect:
  - speed meter cable (1)
- 7. Remove:
  - meter assembly 2
  - headlight stay 3


## CHECKING AND ADJUSTING THE STEERING HEAD



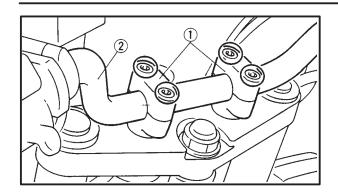




- upper handleber holder 1
- handleber 2

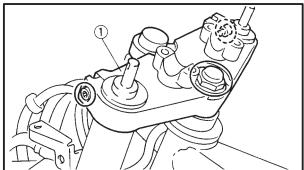

- 9. Remove:
  - handle crown (1)



- 10. Adjust:
  - steering head

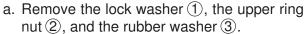

b. Loosen the lower ring nut 4 and then tighten it to specification with a ring nut wrench 5.



Set the torque wrench at a right angle to the ring nut wrench.



Ring nut wrench 90890-01403



Lower ring nut (initial tightening torque)

52 Nm (5.2 m•kg)

c. Loosen the lower ring nut 4 completely, then tighten it to specification.



Do not overtighten the lower ring nut.





Lower ring nut (final tightening torque)

18 Nm (1.8 m•kg)

d. Check the steering head for looseness or binding by turning the front fork all the way in both directions. If any binding is felt, remove the lower bracket and inspect the upper and lower bearings.


Refer to "STEERING HEAD AND HANDLEBAR" in chapter 7.

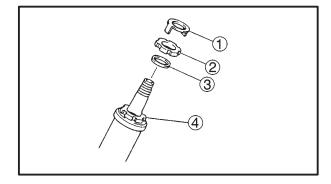

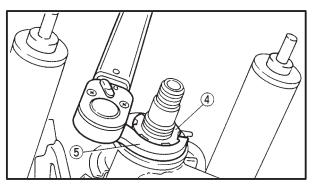

## CHECKING AND ADJUSTING THE STEERING HEAD/ CHECKING THE FRONT FORK



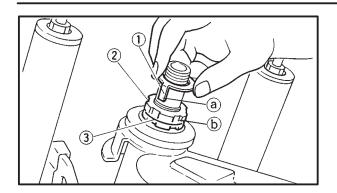

- e. Install the rubber washer (3).
- f. Install the upper ring nut 2.
- g. Finger tighten the upper ring nut ②, then align the slots of both ring nuts. If necessary, hold the lower ring nut and tighten the upper ring nut until their slots are aligned.
- h. Install the lock washer 1.

#### NOTE: -

Make sure that the lock washer tabs (a) sit correctly in the ring nut slots (b).

## 11. Install:

• handle crown



Steering stem nut 110 Nm (11.0 m•kg) Upper bracket pinch bolt 30 Nm (3.0 m•kg)

- 12. Install:
  - handlebar
- 13. Install:
  - upper handlebar holder



Handlebar holder bolt 23 Nm (2.3 m•kg)

EAS00149

#### **CHECKING THE FRONT FORK**

1. Stand the motorcycle on a level surface.

## **A** WARNING

Securely support the motorcycle so that there is no danger of it falling over.

- 2. Check:
  - •inner tube


Damage/scratches → Replace.

- oil seal
  - Oil leakage → Replace.
- 3. Hold the motorcycle upright and apply the front brake.
- 4. Check:
  - operation

Push down hard on the handlebar several times and check if the front fork rebounds smoothly.

Unsmooth operation → Repair.

Refer to "FRONT FORK" in chapter 6.

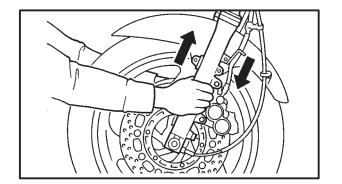

## **ADJUSTING THE FRONT FORK LEGS**



#### **ADJUSTING THE FRONT FORK LEGS**


The following procedure applies to both of the front fork legs.


## **A** WARNING

- Always adjust both front fork legs evenly.
   Uneven adjustment can result in poor handling and loss of stability.
- Securely support the motorcycle so that there is no danger of it falling over.

Spring preload	
CAUTION:	

- Grooves are provided to indicate the adjustment position.
- Never go beyond the maximum or minimum adjustment positions.

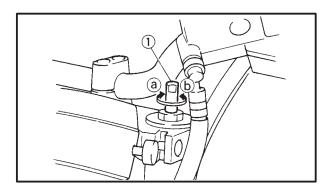

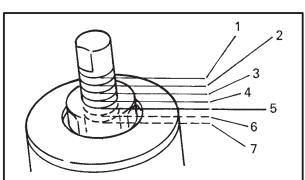

- 1. Adjust:
  - spring preload
- a. Turn the adjusting bolt ① in direction ② or ⑤.

Direction (a)	Spring preload is increased (suspension is harder).
Direction (b)	Spring preload is decreased (suspension is softer).

EAS00155

Adjusting pos	sitions			
Standard:	5			
Minimum:	7 (Soft)			
Maximum: 1 (Hard)				



EAS00161

## ADJUSTING THE REAR SHOCK ABSORBER ASSEMBLIES

The following procedure applies to both of the rear shock absorber assemblies.

## **A** WARNING

- Securely support the motorcycle so that there is no danger of it falling over.
- Always adjust both rear shock absorber assemblies evenly. Uneven adjustment can result in poor handling and loss of stability.

•	$\sim$ $^{\nu}$	ın	g	nr	$\sim$ 1	^	$\sim$

### CAUTION:

Never go beyond the maximum or minimum adjustment positions.



spring preload

NOTE: —


Adjust the spring preload with the special wrench and extension bar in cluded in the owner's tool kit.




Direction a	Spring preload is increased (suspension is harder).
Direction (b)	Spring preload is decreased (suspension is softer).

\_\_\_\_

Adjusting pos	itions
Standard:	1
Minimum:	1
Mavimum:	3

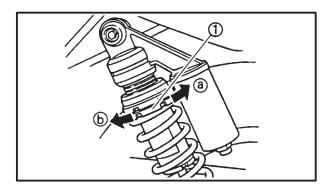

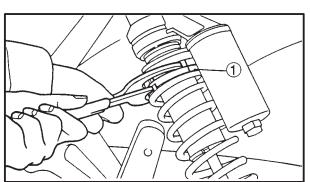

## **CHECKING THE TIRES**




EAS00162

#### **CHECKING THE TIRES**

The following procedure applies to both of the tires.


- 1. Measure:
  - tire pressure
     Out of specification → Regulate.

## **A** WARNING

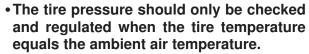


- The tire pressure and the suspension must be adjusted according to the total weight (including cargo, rider, passenger and accessories) and the anticipated riding speed.
- Operation of an overloaded motorcycle could cause tire damage, an accident or an injury.

#### **NEVER OVERLOAD THE MOTORCYCLE.**

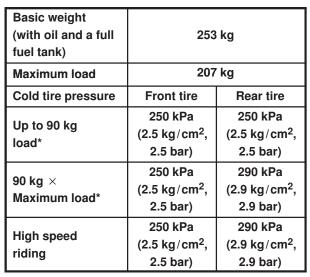


<sup>\*</sup> Load is the total weight of cargo, rider, passenger and accessories

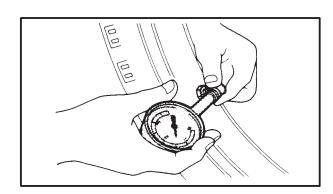

## **CHECKING THE TIRES**



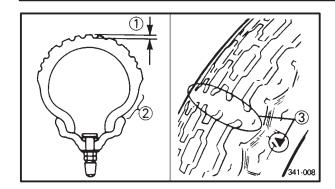

## **A** WARNING

It is dangerous to ride with a worn-out tire. When the tire tread reaches the wear limit, replace the tire immediately.

- 2. Check:
  - tire surfaces
     Damage/wear → Replace the tire.



## Minimum tire tread depth 1.6 mm

- 1 Tire tread depth
- 2 Side wall
- (3) Wear indicator

## **A** WARNING


- Do not use a tubeless tire on a wheel designed only for tube tires to avoid tire failure and personal injury from sudden deflation.
- When using a tube tire, be sure to install the correct tube.
- Always replace a new tube tire and a new tube as a set.
- To avoid pinching the tube, make sure that the wheel rim band and tube are centered in the wheel groove.
- Patching a punctured tube is not recommended. If it is absolutely necessary to do so, use great care and replace the tube as soon as possible with a good quality replacement.



B Wheel

Tube wheel	Tube tire only
Tubebeless wheel	Tube or tubeless tire

After extensive tests, the tires listed below have been approved by Yamaha Motor Co., Ltd. for this model. The front and rear tires should always be by the same manufacturer and of the same design. No guarantee concerning handling characteristics can be given if a tire combination other than one approved by Yamaha is used on this motorcycle.

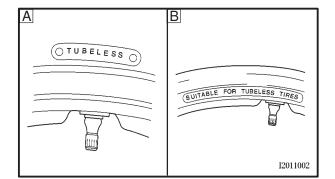



#### Front tire

Manufacturer	Size	Туре
MICHELIN	120/70ZR17	MACADAM 90X
DUNLOP	120/70ZR17	D207F
BRIDGESTONE	120/70ZR17	BT57F

#### Rear tire

Manufacturer	Size	Туре
MICHELIN	180/55ZR17	MACADAM 90X
DUNLOP	180/55ZR17	D207
BRIDGESTONE	180/55ZR17	BT57R

## **A** WARNING


New tires have a relatively low grip on the road surface until they have been slightly worn.

Therefore, approximately 100 km should be traveled at normal speed before any high-speed riding is done.

NIO.	TC.	
$\mathbf{N}()$	1 -	
$\cdot \cdot \cdot$		

For tires with a direction of rotation mark ①:

- Install the tire with the mark pointing in the direction of wheel rotation.
- Align the mark ② with the valve installation point.

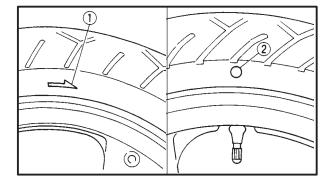

EAS00168

#### **CHECKING THE WHEELS**

The following procedure applies to both of the wheels.

- 1. Check:
- wheel

Damage/out-of-round  $\rightarrow$  Replace.

Λ	WA	DNI	ING
	WA	וווח	ING

Never attempt to make any repairs to the wheel.

#### NOTE: \_\_\_\_\_

After a tire or wheel has been changed or replaced, always balance the wheel.



EAS00170

#### **CHECKING AND LUBRICATING THE CABLES**

The following procedure applies to all of the cable sheaths and cables.

## **A** WARNING

Damaged cable sheaths may cause the cable to corrode and interfere with its movement. Replace damaged cable sheaths and cables as soon as possible.

- 1. Check:
  - cable sheath
     Damage → Replace.
- 2. Check:
  - cable operation Unsmooth operation → Lubricate.



Recommended lubricant Engine oil or a suitable cable lubricant

#### NOTE: -

Hold the cable end upright and pour a few drops of lubricant into the cable sheath or use a suitable lubing device.

EAS00171

#### **LUBRICATING THE LEVERS AND PEDALS**

Lubricate the pivoting point and metal-to-metal moving parts of the levers and pedals.



Recommended lubricant Engine oil

EAS00172

#### **LUBRICATING THE SIDESTAND**

Lubricate the pivoting point and metal-to-metal moving parts of the sidestand.



Recommended lubricant Engine oil

AS00173

#### LUBRICATING THE CENTERSTAND

Lubricate the pivoting point and metal-to-metal moving parts of the centerstand.



Recommended lubricant Engine oil

EAS00174


#### LUBRICATING THE REAR SUSPENSION

Lubricate the pivoting point and metal-to-metal moving parts of the rear suspension.



Recommended lubricant Molydenum disulfide grease



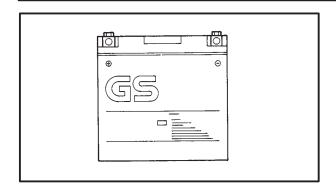

EAS00178

## ELECTRICAL SYSTEM CHECKING AND CHARGING THE BATTERY

## **A** WARNING

Batteries generate explosive hydrogen gas and contain electrolyte which is made of poisonous and highly caustic sulfuric acid. Therefore, always follow these preventive measures:

- Wear protective eye gear when handling or working near batteries.
- Charge batteries in a well-ventilated area.
- Keep batteries away from fire, sparks or open flames (e.g., welding equipment, lighted cigarettes).
- DO NOT SMOKE when charging or handling batteries.
- •KEEP BATTERIES AND ELECTROLYTE OUT OF REACH OF CHILDREN.
- Avoid bodily contact with electrolyte as it can cause severe burns or permanent eye injury.

First aid in case of bodily contact:

External

- •SKIN Wash with water.
- EYES Flush with water for 15 minutes and get immediate medical attention.

Internal

Drink large quantities of water or milk followed with milk of magnesia, beaten egg or vegetable oil. Get immediate medical attention.

#### **CAUTION:**

- This is a sealed battery. Never remove the sealing caps because the balance between cells will not be maintained and battery performance will deteriorate.
- Charging time, charging amperage and charging voltage for a MF battery are different from those of conventional batteries. The MF battery should be charged as explained in the charging method illustrations. If the battery is overcharged, the electrolyte level will drop considerably. Therefore, take special care when charging the battery.



#### NOTE: -

Since MF batteries are sealed, it is not possible to check the charge state of the battery by measuring the specific gravity of the electrolyte. Therefore, the charge of the battery has to be checked by measuring the voltage at the battery terminals.

- 1. Remove:
  - seat
- 2. Disconnect:
  - battery leads (from the battery terminals)

#### **CAUTION:**

First, disconnect the negative lead 1, then the positive lead 2.

- 3. Remove:
  - battery
- 4. Check:
  - battery charge

 Connect a pocket tester to the battery terminals.

Tester positive lead → battery positive terminal


Tester negative lead → battery negative terminal


#### NOTE: -


- The charge state of a MF battery can be checked by measuring its open-circuit voltage (i.e., the voltage when the positive terminal is disconnected).
- No charging is necessary when the open-circuit voltage equals or exceeds 12.8 V.
- b. Check the charge of the battery, as shown in the charts and the following example.


#### Example


- c. Open-circuit voltage = 12.0 V
- d. Charging time = 6.5 hours
- e. Charge of the battery = 20  $\times$  30 %
- 5. Charge:
  - battery (refer to the appropriate charging method illustration)

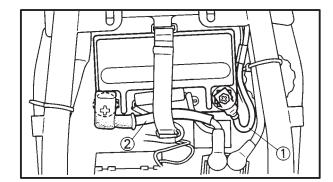

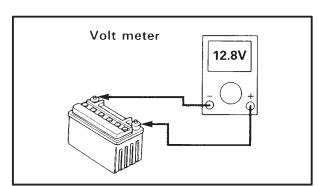

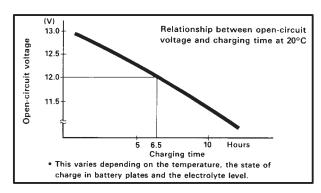

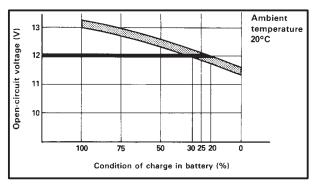

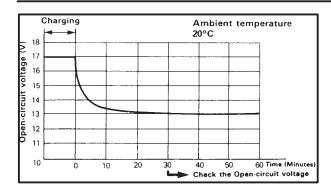

## **A** WARNING


Do not quick charge a battery.

#### **CAUTION:**

- Make sure that the battery vent is free of obstructions.
- Never remove the MF battery sealing caps.
- Do not use a high-rate battery charger. They force a high-amperage current into the battery quickly and can cause battery overheating and battery plate damage.
- If it is impossible to regulate the charging current on the battery charger, be careful not to overcharge the battery.
- When charging a battery, be sure to remove it from the motorcycle. (If charging has to be done with the battery mounted on the motorcycle, disconnect the negative lead from the battery terminal.)
- To reduce the chance of sparks, do not plug in the battery charger until the battery charger leads are connected to the battery.
- Before removing the battery charger lead clips from the battery terminals, be sure to turn off the battery charger.
- Make sure that the battery charger lead clips are in full contact with the battery terminal and that they are not shorted. A corroded battery charger lead clip may generate heat in the contact area and a weak clip spring may cause sparks.
- If the battery becomes hot to the touch at any time during the charging process, disconnect the battery charger and let the battery cool before reconnecting it. Hot batteries can explode!
- As shown in the following illustration, the open-circuit voltage of a MF battery stabilizes about 30 minutes after charging has been completed. Therefore, wait 30 minutes after charging is completed before measuring the open-circuit voltage.




### Charging method using a variable-voltage charger

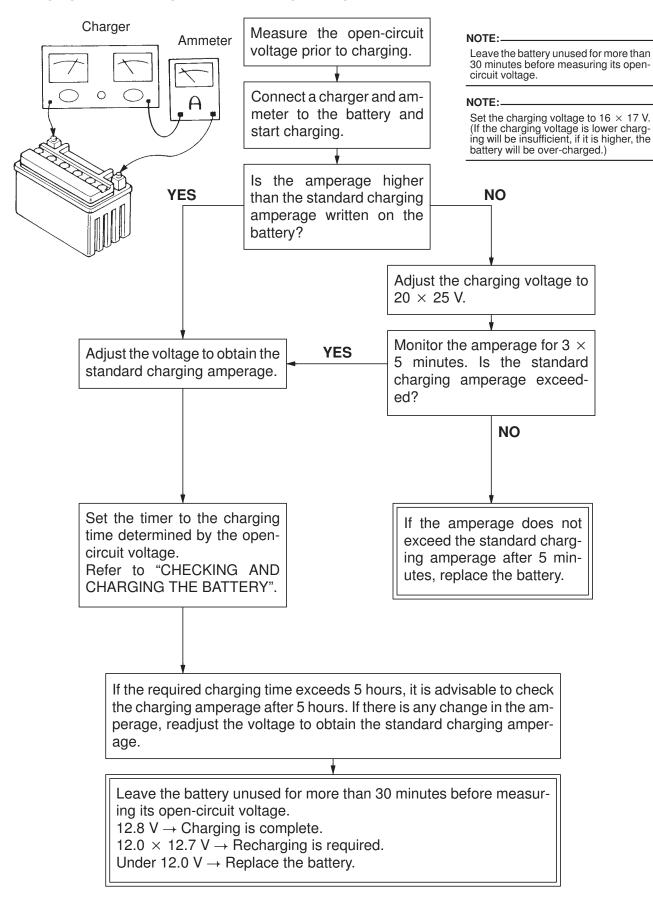




### Charging method using a constant-voltage charger

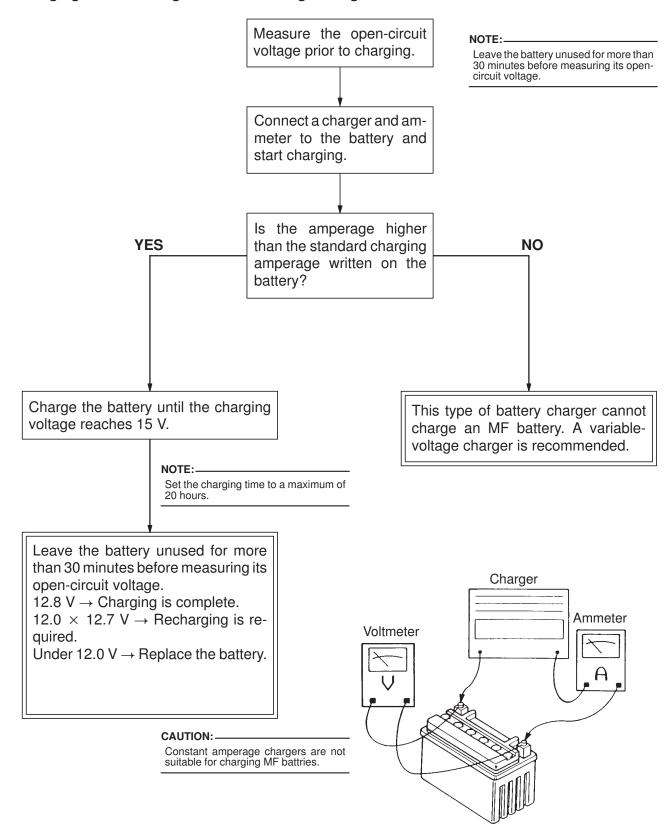

## CHECKING AND CHARGING THE BATTERY/ **CHECKING THE FUSES**



- 6. Check:
  - battery vent Obstruction  $\rightarrow$  Clean. Damage → Replace.
- 7. Install:
  - battery
- 8. Connect:
  - battery leads (to the battery terminals)

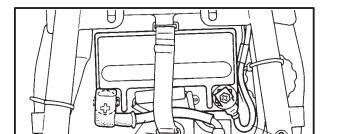

### **CAUTION:**

First, connect the positive lead ①, then the negative lead 2.

- 9. Check:
  - battery terminals Dirt → Clean with a wire brush. Loose connection → Connect properly.
- 10. Lubricate:
  - battery terminals



## **Recommended lubricant** Dielectric grease

- 11. Install:
- seat

#### **CHECKING THE FUSES**

The following procedure applies to all of the fuses.

#### **CAUTION:**

To avoid a short circuit, always turn the main switch to "OFF" when checking or replacing a fuse.

- 1. Remove:
  - seat
- 2. Check:
  - fuse

a. Connect the pocket tester to the fuse and check the continuity.

NOTE: \_

Set the pocket tester selector to " $\Omega$  x 1".

## **CHECKING THE FUSES**



## Pocket tester 90890-03112

b. If the pocket tester indicates "∞", replace the fuse.

3. Replace:

• blown fuse

- a. Turn off the ignition.
- b. Install a new fuse of the correct amperage rating.
- c. Turn on the switches to verify if the electrical circuit is operational.
- d. If the fuse immediately blows again, check the electrical circuit.

Fuses	Amperage rating	Quantity
Main fuse	30 A	1
Headlight fuse	15 A	1
Signaling system fuse	15 A	1
Ignition fuse	7.5 A	1
Reserve	30 A	1
	15 A	1
	7.5 A	1

## **A** WARNING


Never use a fuse with an amperage rating other than that specified. Improvising or using a fuse with the wrong amperage rating may cause extensive damage to the electrical system, cause the lighting and ignition systems to malfunction and could possibly cause a fire.

4. Install:

seat

## REPLACING THE HEADLIGHT BULB




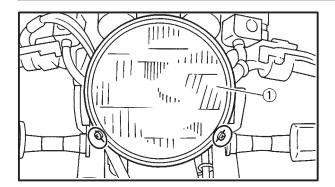


EAS00182

#### REPLACING THE HEADLIGHT BULB

- 1. Remove:
  - headlight unit 1

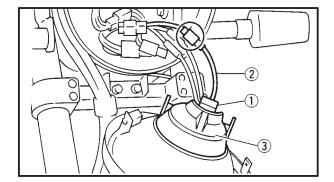

- 2. Disconnect:
  - headlight lead ①
  - auxiliary light lead ②
- 3. Remove:
  - cover ③

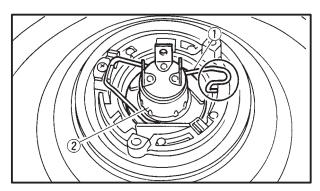

- 4. Remove:
- headlight bulb holder 1
- 5. Remove:
  - headlight bulb 2

## **A** WARNING

Since the headlight bulb gets extremely hot, keep flammable products and your hands away from the bulb until it has cooled down.

- 6. Install:
  - headlight bulb (New)
     Secure the new headlight bulb with the headlight bulb holder.

## **CAUTION:**

Avoid touching the glass part of the headlight bulb to keep it free from oil, otherwise the transparency of the glass, the life of the bulb and the luminous flux will be adversely affected. If the headlight bulb gets soiled, thoroughly clean it with a cloth moistened with alcohol or lacquer thinner.


## **REPLACING THE HEADLIGHT BULB**/ ADJUSTING THE HEADLIGHT BEAM



- 7. Install:
  - headlight bulb holder
- 8. Install:
  - cover
- 9. Connect:
  - auxiliary light lead
  - headlight lead
- 10. Install:
- headlight unit

## **ADJUSTING THE HEADLIGHT BEAM**

- 1. Adjust:
- headlight beam (vertically)

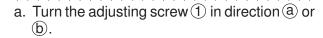



)	Headlight beam is raised.
Direction (b)	Headlight beam is lowered.


- 2. Adjust:
  - headlight beam (horizontally)

\*\*\*\*\*\*\* a. Turn the adjusting knob ② in direction ③ or

Direction (a)	Headlight beam moves to the right.
<b>Direction</b> (b)	Headlight beam moves to the left.

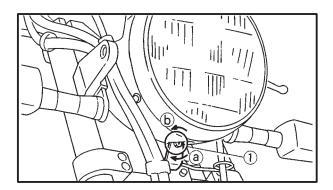

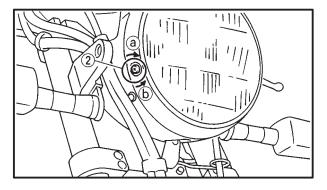

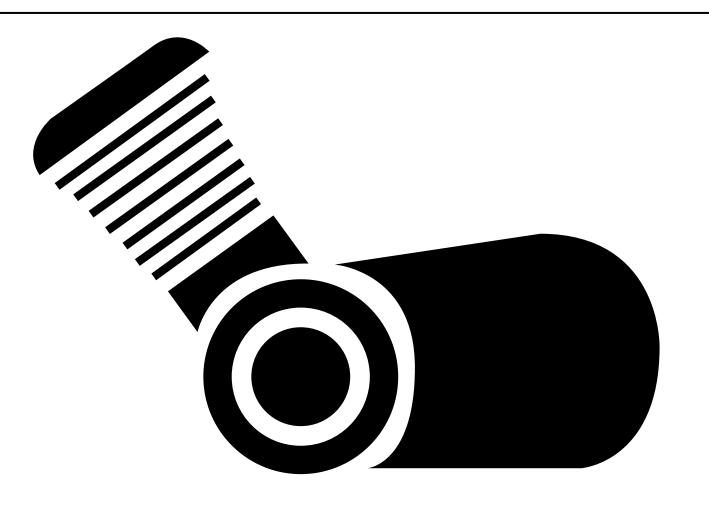

# **CHAPTER 4. ENGINE OVERHAUL**

ENGINE	
LEADS, HOSES AND EXHAUST PIPES	
ENGINE	
INSTALLING THE ENGINE	
montelina me ename	. 0
CAMSHAFT	4-7
CYLINDER HEAD COVER	4-7
CAMSHAFTS	_
REMOVING THE CAMSHAFTS	
CHECKING THE CAMSHAFTS	
CHECKING THE CAMSHAFT SPROCKETS AND TIMING CHAIN	
GUIDES	
CHECKING THE TIMING CHAIN TENSIONER	
INSTALLING THE CAMSHAFTS	4-12
CYLINDER HEAD	4-15
REMOVING THE CYLINDER HEAD	
CHECKING THE CYLINDER HEAD	
INSTALLING THE CYLINDER HEAD	4-17
VALVES AND VALVE SPRINGS	
REMOVING THE VALVES	
CHECKING THE VALVES AND VALVE GUIDES	
CHECKING THE VALVE SEATS	
CHECKING THE VALVE LIFTERS	
CHECKING THE VALVES	
INSTALLING THE VALVES	4-24
CYLINDERS AND PISTONS	4-26
REMOVING THE CYLINDERS AND PISTONS	
CHECKING THE CYLINDERS AND PISTONS	4-27
CHECKING THE PISTON RINGS	4-29
INSTALLING THE PISTONS AND CYLINDERS	4-30
CLUTCH	
CLUTCH COVER	
CLUTCH	
REMOVING THE CLUTCH	
CHECKING THE FRICTION PLATES	
CHECKING THE CLUTCH PLATES	
CHECKING THE CLUTCH SPAING PLATE	
CHECKING THE CLUTCH HOOSING	
CHECKING THE CLUTCH SPRING PLATE	
CHECKING THE CLUTCH HOUSING	
CHECKING THE CLUTCH BOSS	

CHECKING THE PRESSURE PLATE	4-37
CHECKING THE CLUTCH PUSH RODS	4-38
INSTALLING THE CLUTCH	4-38
CLUTCH MASTER CYLINDER	4-41
CHECKING THE CLUTCH MASTER CYLINDER	4-43
ASSEMBLING THE CLUTCH MASTER CYLINDER	4-44
INSTALLING THE CLUTCH MASTER CYLINDER	4-44
CLUTCH RELEASE CYLINDER	4-47
DISASSEMBLING THE CLUTCH RELEASE CYLINDER	4-49
CHECKING THE CLUTCH RELEASE CYLINDER	4-49
INSTALLING THE CLUTCH RELEASE CYLINDER	4-50
OIL DUMP	4 50
OIL PUMP CHECKING THE OIL PUMP	
ASSEMBLING THE OIL PUMP	
INSTALLING THE OIL PUMP	4-55
SHIFT SHAFT	4-56
CHECKING THE SHIFT SHAFT	4-57
CHECKING THE STOPPER LEVER	4-57
INSTALLING THE SHIFT SHAFT	4-57
TIMING PLATE AND PICKUP COIL	1 EC
TIMING PLATE AND PICKOP COIL	4-58
OIL PAN	
REMOVING THE OIL PAN	4-61
CHECKING THE RELIEF VALVE	4-61
CHECKING THE OIL DELIVERY PIPES	4-61
CHECKING THE OIL STRAINER	4-61
INSTALLING THE OIL STRAINER	4-62
INSTALLING THE OIL PAN	4-62
CRANKCASE	4-63
DISASSEMBLING THE CRANKCASE	
CHECKING THE CRANKCASE	
ASSEMBLING THE CRANKCASE	
ACCEMBENTAL THE CHARACTOR	100
STARTER CLUTCH	
CHECKING THE STARTER CLUTCH	
CHECKING THE GENERATOR SHAFT	
INSTALLING THE STARTER CLUTCH ROLLER	4-71
CRANKSHAFT	4-72
CRANKSHAFT	
CONNECTING ROD	
REMOVING THE CRANKSHAFT ASSEMBLY	
REMOVING THE CONNECTING RODS	
CHECKING THE CRANKSHAFT AND CONNECTING RODS	
CHECKING THE TIMING CHAIN	
CHECKING THE HY-VO CHAIN	

# ENG


CHECKING THE BEARINGS AND OIL SEALS CHECKING THE CIRCLIPS AND WASHERS INSTALLING THE CONNECTING RODS INSTALLING THE CRANKSHAFT	4-79 4-79
TRANSMISSION	4-82
	_
SHIFT CAM AND SHIFT FORK	4-85
CHECKING THE SHIFT FORK	4-86
CHECKING THE SHIFT DRUM ASSEMBLY	4-86
CHECKING THE TRANSMISSION	4-86
INSTALLING THE SHIFT FORKS AND SHIFT DRUM ASSEMBLY	4-87
INSTALLING THE TRANSMISSION	4-88



EAS0018


## **ENGINE OVERHAULE**

## **ENGINE**LEADS, HOSES AND EXHAUST PIPES

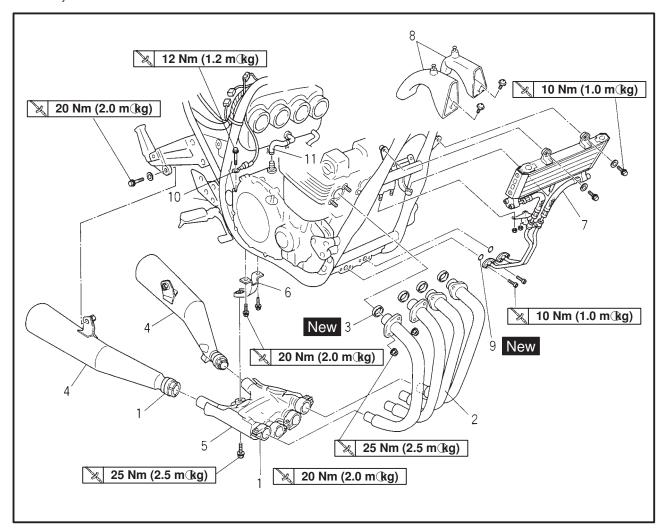

Order	Job/Part	Q'ty	Remarks
	Removing the leads, hoses and exhaust pipes		Remove the parts in the order listed.
	Seat, side cover, fuel tank		Refer to "SEAT, SIDE COVER AND FUEL TANK" in Chapter 3.
	Carburetor		Refer to "CARBURETOR" in Chapter 5.
	Engine oil		Drain
1	Exhaust band	6	
2	Exhaust pipe	4	
3	Gasket	4	
4	Muffler left/right	1/1	
5	Exhaust chamber	1	
6	Exhaust chamber bracket	1	
7	Oil cooler	1	
8	Air duct left/right	1/1	




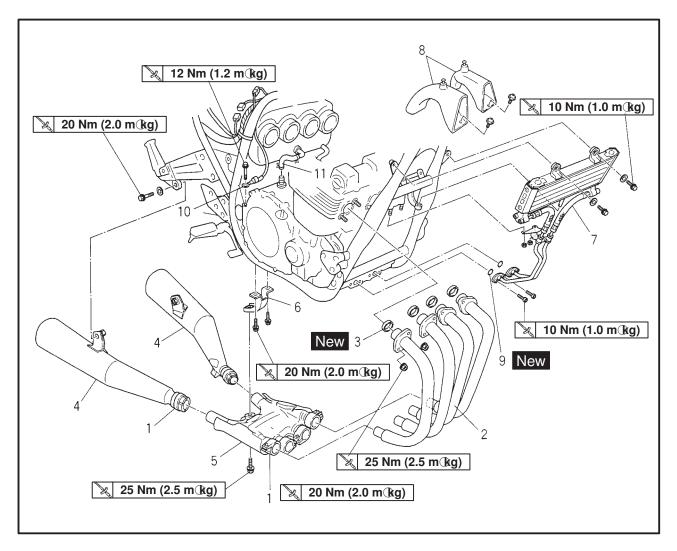


Order	Job/Part	Q'ty	Remarks
9	O-ring Ground lead	2	NOTE:
11	Crankcase breather hose	1	For installation, reverse the removal procedure.

EAS00190

#### **LEADS AND DRIVE SPROCKET**

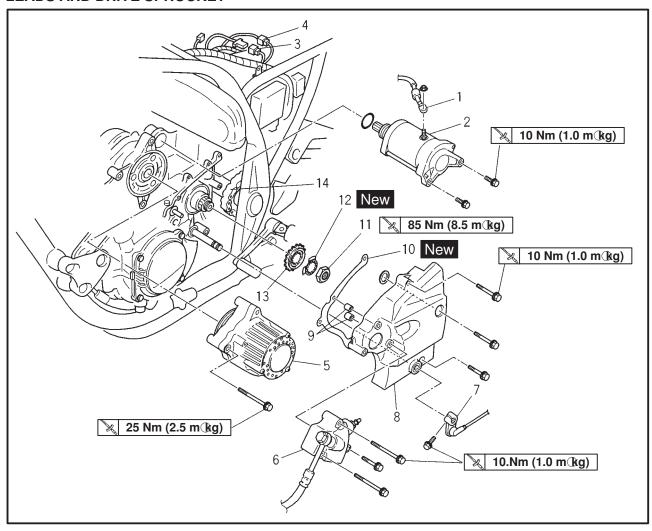


Order	Job/Part	Q'ty	Remarks
1	Removing the leads and drive sprocket Starter motor lead	1	Remove the parts in the order listed.  NOTE:  Disconnect starter motor lead.
2 3 4 5 6 7 8 9 10	Starter motor Pickup/neutral switch lead A.C. generator lead A.C. generator Clutch release cylinder comp. Shift arm Drive sprocket cover Dowel pins Gasket Nut	1 1 1 1 1 1 1 2 1	Refer to "INSTALLING THE ENGINE"

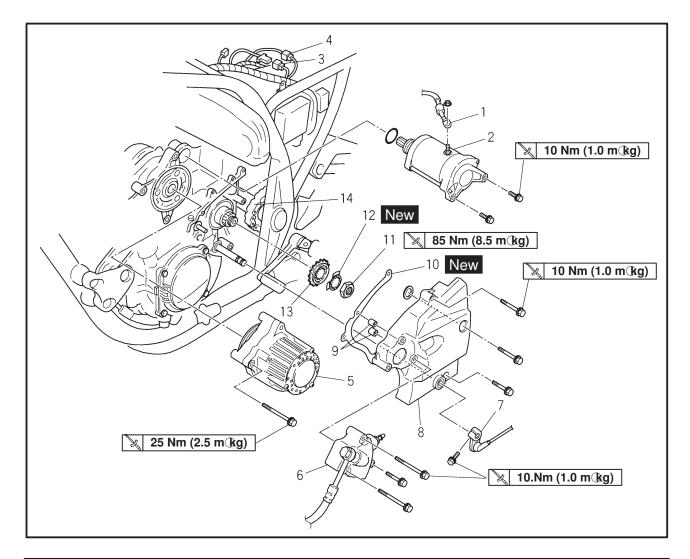

Order	Job/Part	Q'ty	Remarks
12 13 14	Lock washer Drive sprocket Drive chain	1 1 1	For installation, reverse the removal procedure.




#### **ENGINE**

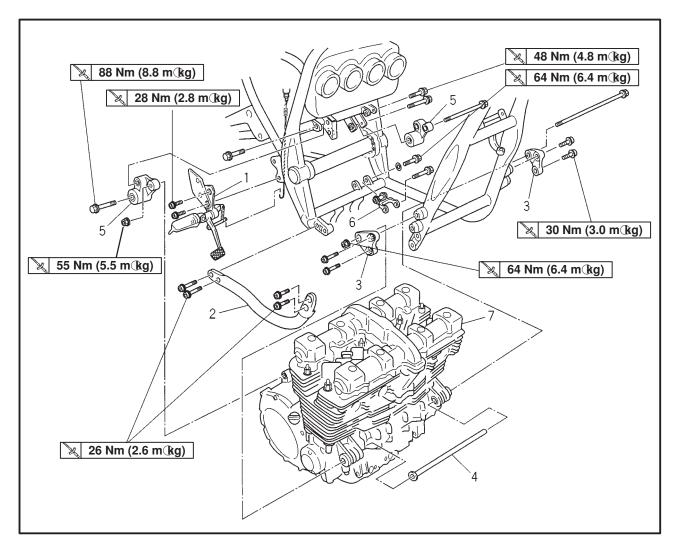



Order	Job/Part	Q'ty	Remarks
1 2	Removing the engine Footrest Down tube	1 1	Remove the parts in the order listed.  NOTE:  Place a suitable stand under the frame
3 4	Engine bracket (front) Spacer	2 -	and engine.
5 6 7	Engine bracket (rear upper) left, right Engine bracket (rear lower) Engine	2 1 1 -	Refer to "INSTALLING THE ENGINE".
			For installation, reverse the removal procedure.

#### **ENGINE**



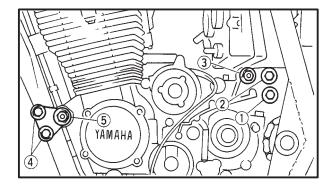

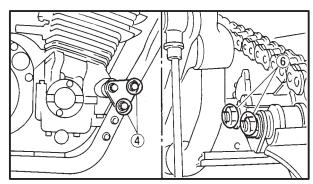

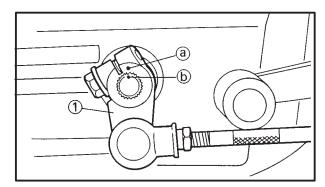

EAS00192

#### **INSTALLING THE ENGINE**

1. Tighten the bolts in the following order.



**Bolt** (1):

88 Nm (8.8 m kg)

Bolt 2:

48 Nm (4.8 m/kg)

Bolt 3:

55 Nm (5.5 m/kg)

Bolt 4:

30 Nm (3.0 m/kg)

Bolt 5:

64 Nm (6.4 m/kg)

Nut 6:

64 Nm (6.4 m/kg)

2. Install:

shift arm (1)

**NOTE** 

Align the punch mark (b) in the shift shaft with the punched mark (a) on the shift arm.

Align the bottom edge of the shift pedal with the mark on the frame-to-swingarm bracket.




Shift arm bolt 10 Nm (1.0 m⋅kg)





### **CAMSHAFT CYLINDER HEAD COVER**




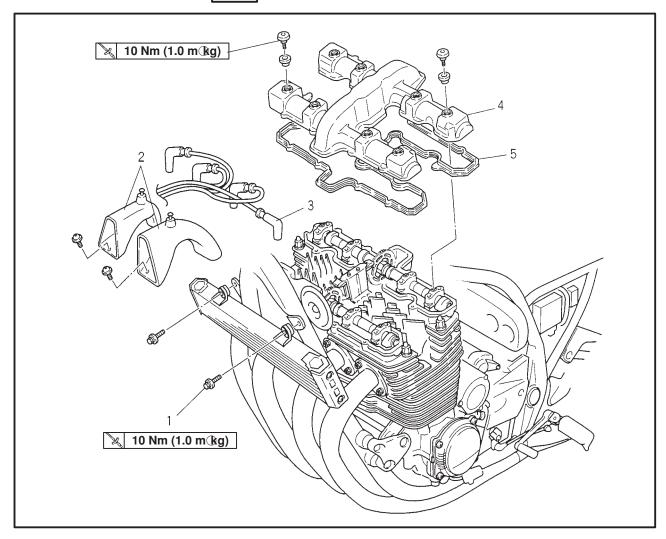

Order	Job/Part	Q'ty	Remarks
	Removing the cylinder head covers Seat, fuel tank		Remove the parts in the order listed. Refer to "SEAT, SIDE COVER AND FUEL TANK".
1	Bolts	2	
2	Air duct (left/right)	1/1	
3	Plug cap	4	
4	Cylinder head cover	1	
5	Gasket	1	
			For installation, reverse the removal procedure.

EAS00196

#### **CAMSHAFTS**

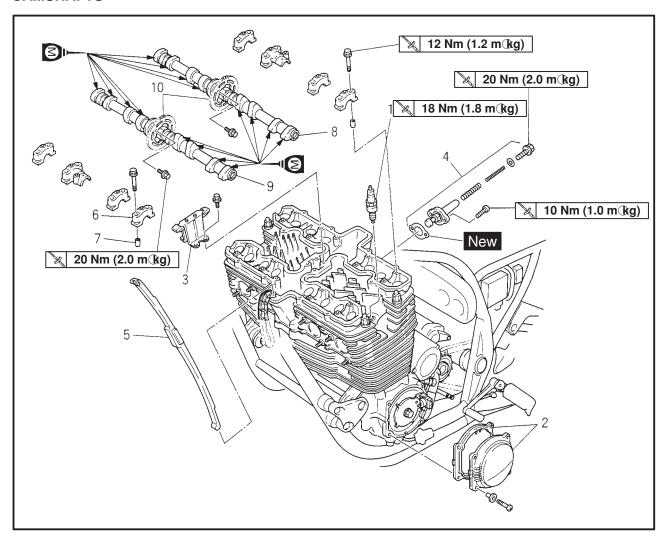


Order	Job/Part	Q'ty	Remarks
1 2 3 4 5 6 7 8 9	Removing the camshafts Spark plugs Timing plate cover/Gasket Timing chain guide (top side) Timing chain tensioner assembly Timing chain guide (exhaust side) Camshaft caps Dowel pins Camshaft (intake) Camshaft (exhaust) Camshaft sprockets	4 1/1 1 1 8 16 1	Remove the parts in the order listed.  Refer to "REMOVING/INSTALLING THE CAMSHAFTS".
10	Carrionalt Sprockets		For installation, reverse the removal procedure.





EAS00199

#### **REMOVING THE CAMSHAFTS**

CT" mark on the timing plate (with the stationary pointer on the pickup coil base plate)

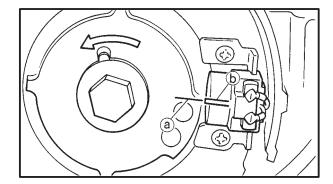

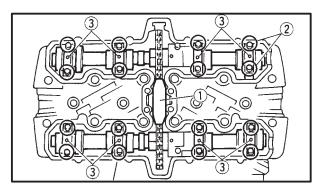

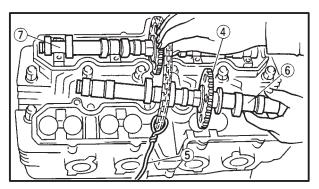

a. Turn the crankshaft counterclockwise.

b. When piston #1 is at TDC on the compression stroke, align the "T" mark (a) with the pickup coil mark (b).

TDC on the compression stroke can be found when the camshaft lobes are turned away from each other.

\_\_\_\_

2. Remove:

Timing chain guide (top side)

3. Loosen:

camshaft sprocket bolts

4. Loosen:

cap bolt 2

5. Remove:

**Diming chain tensioner** 

#### NOTE: -

To prevent the timing chain from falling into the crankcase, fasten it with a wire 5.

6. Remove:

Climing chain guide (exhaust side)

camshaft caps (3)

#### NOTE: -

For reference during installation, put identification marks on each camshaft cap.

#### **CAUTION:**

To prevent damage to the cylinder head, camshafts or camshaft caps, loosen the camshaft cap bolts in stages and in a crisscross pattern, working from the outside in.

7. Remove:


Ontake camshaft 6


(exhaust camshaft (7)


camshaft sprockets 4







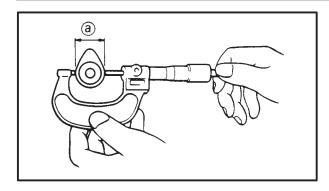

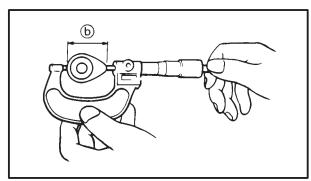

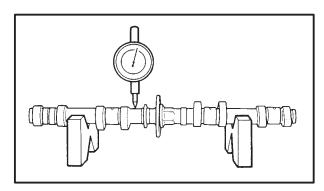

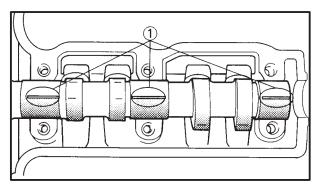

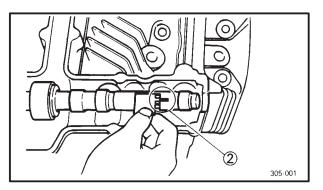

EAS000204

#### **CHECKING THE CAMSHAFTS**

#### 1. Check:

camshaft lobes

Blue discoloration/pitting/scratches  $\rightarrow$  Replace the camshaft.

#### 2. Measure:

camshaft lobe dimensions (a) and (b)

Out of specification  $\rightarrow$  Replace the camshaft.



#### Camshaft lobe dimension limit Intake/exhaust

- (a) Wear limit <28.15 mm>
- (b) Wear limit <35.85 mm>

#### 3. Measure:

camshaft runout

Out of specification → Replace.



#### Camshaft runout Less than 0.03 mm

#### 4. Measure:

camshaft-journal-to-camshaft-cap clearance

Out of specification  $\rightarrow$  Measure the camshaft journal diameter.



Camshaft-journal-to-camshaftcap clearance 0.020 × 0.054 mm

\_\_\_\_\_

- a. Install the camshaft into the cylinder head (without the dowel pins and camshaft caps).
- b. Position a strip of Plastigauge® ① onto the camshaft journal as shown.
- c. Install the dowel pins and camshaft caps.

#### NOTE: -

- Tighten the camshaft cap bolts in stages and in a crisscross pattern, working from the inner caps out.
- Do not turn the camshaft when measuring the camshaft journal-to-camshaft cap clearance with the Plastigauge<sup>®</sup>.




#### Camshaft cap bolt 12 Nm (1.2 m⋅kg)

d. Remove the camshaft caps and then measure the width of the Plastigauge<sup>®</sup> (2).





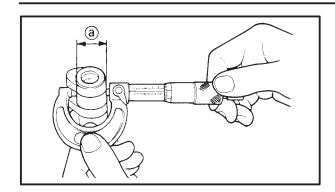

#### 5. Measure:

©amshaft journal diameter (a)

Out of specification  $\rightarrow$  Replace the camshaft.

Within specification  $\rightarrow$  Replace the cylinder head and the camshaft caps as a set.



Camshaft journal diameter 24.967 × 24.980 mm

EAS00208

# CHECKING THE CAMSHAFT SPROCKETS, AND TIMING CHAIN GUIDES

The following procedure applies to all of the camshafts sprockets and timing chain guides.

#### 1. Check:

camshaft sprocket

Damage/wear → Replace the camshaft sprockets and the timing chain as a set.

#### 2. Check:

Climing chain guide (exhaust side)

Chiming chain guide (top side)

Damage/wear  $\rightarrow$  Replace the defective part(-s).

EAS00210

#### **CHECKING THE TIMING CHAIN TENSIONER**

#### 1. Check:

Timing chain tensioner

Cracks/damage → Replace.

#### 2. Check:

One-way cam operation

Rough movement  $\rightarrow$  Replace the timing chain tensioner housing.

#### 3. Check:

cap bolt

©opper washer

**spring** 

one-way cam


**@**asket

Timing chain tensioner rod

Damage/wear  $\rightarrow$  Replace the defective part(-s).





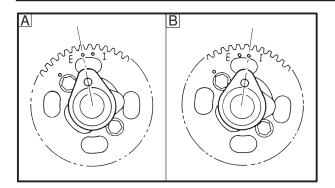

#### **INSTALLING THE CAMSHAFTS**

1. Install:

@amshaft sprockets

NOTE: -

Be sure to set the sprockets in the specified position as shown in the figure.

Temporarily tighten the bolts in this stage.


A Exhaust side


B Intake side


2. Install:

@amshaft (exhaust)

@amshaft (intake)

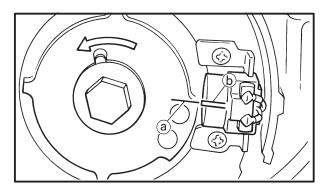

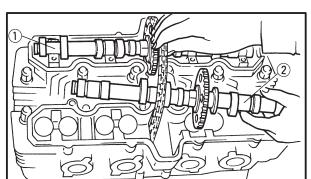

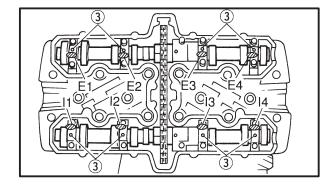

a. Turn the crankshaft counterclockwise until the TDC mark (a) is aligned with the pickup coil mark (b).

#### **CAUTION:**

Do not turn the crankshaft during the camshafts installation. Damage or improper valve timing will result.

b. Fit the timing chain onto both camshaft sprockets and install the camshafts.

#### NOTE: -

Onstall the exhaust camshaft 1 first, then the intake camshaft 2.

Onstall the camshafts with the punched mark facing upward.

Keep the timing chain as tense as possible on the exhaust side.

c. Install the camshaft caps ③ with dowel pins.

#### NOTE: -

On Make sure that each camshaft cap is installed in its original place by reference to its embossed identification mark, as follows:

Intake: I


Exhaust: E

Install the camshaft cap with the arrow mark pointing towards the right side of the engine.

Temporarily tighten the bolts in this stage.





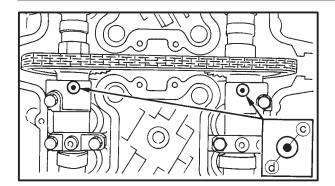

- d. Check if the punched marks © on both camshafts are inside the holes of camshaft caps d. If they are not in the position, repeat the above steps.
- e. Tighten the bolts (camshaft cap) in a crisscross pattern from the inside outwards.

#### **CAUTION:**


The bolts (camshaft caps) must be tightened evenly or damage to the cylinder head, camshaft caps and camshaft will result.




Bolt (camshaft cap): 12 Nm (1.2 m kg)

f. Remove the safety wire from the timing

\*\*\*\*

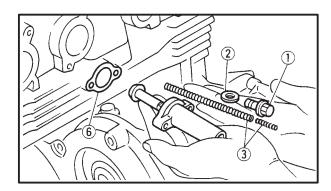

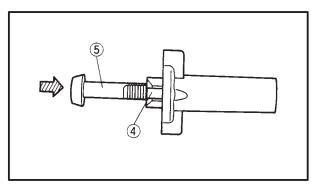

3. Install:

**Diming chain tensioner** 

#### **Installation steps:**

- a. Remove the tensioner cap bolt ①, washer 2 and springs 3.
- b. Release the timing chain tensioner one-way cam 4 and push the tensioner rod 5 all the way into the timing chain tensioner housing.
- c. Install the timing chain tensioner with a gasket 6 onto the cylinder.

#### **CAUTION:**

Always use a new gasket.


#### NOTE: -

The timing chain tensioner teeth should face down.



Timing chain tensioner bolt: 10 Nm (1.0 m/kg)

d. Install the springs 3, washer 2 and cap bolt (1).

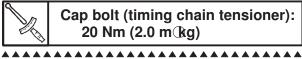


Cap bolt (timing chain tensioner): 20 Nm (2.0 m/kg)

4. Check:

Valve timing

Out of alignment → Reinstall the camshafts by referring the above steps.



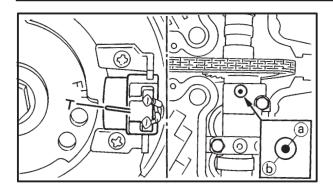

- a. Turn the crankshaft counterclockwise several times until the TDC mark on the timing plate is aligned with the stationary pointer.
- b. Check if both the camshaft timing punch marks ⓐ are aligning with the camshaft cap hole ⓑ.
- 5. Tighten:

  Bolts (cam sprockets)

#### **CAUTION:**

Be sure to tighten the camshaft sprocket bolts to the specified torque to avoid the possibility of the bolts coming loose and damaging the engine.



Bolts (cam sprockets): 20 Nm (2.0 m@g)


### **CYLINDER HEAD**





# CYLINDER HEAD




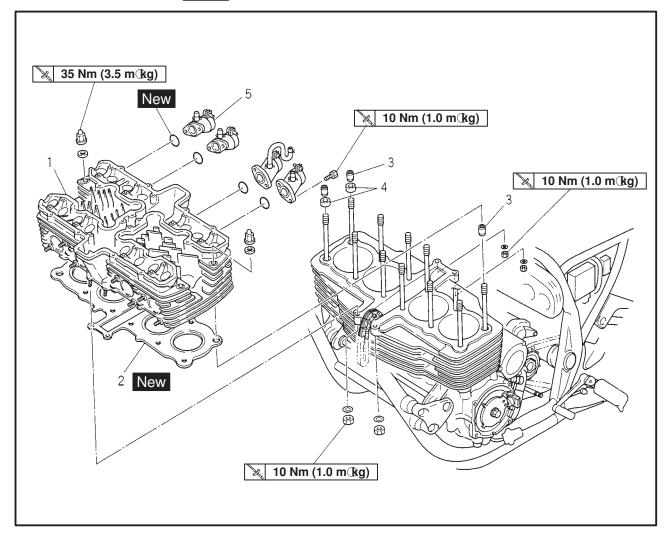



Order	Job/Part	Q'ty	Remarks
	Removing the cylinder head		Remove the parts in the order listed.
			Remove the engine mount (front) and move the engine to front side.
1 2 3 4 5	Camshafts Cylinder head Gasket Dowel pins O-rings Intake manifold	1 - 1 2 2 - 4	Refer to "CAMSHAFTS".  Refer to "REMOVING/INSTALLING THE CYLINDER HEAD".
			For installation, reverse the removal procedure.


#### **CYLINDER HEAD**



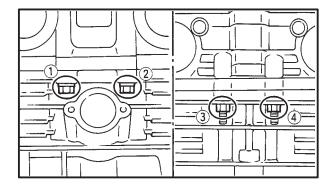

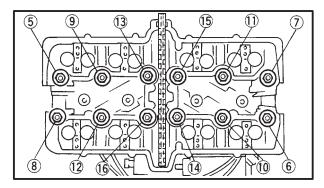

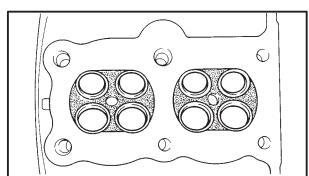

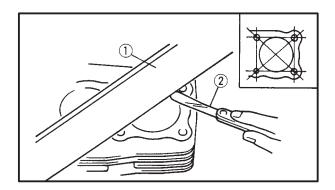

EAS00223

#### **REMOVING THE CYLINDER HEAD**

1. Remove:

Cylinder head nuts  $1 \times 6$ 

NOTE: \_

Occupation of the proper sequence as shown.

Oppose neach nut 1/2 of a turn at a time. After all of the nuts are fully loosened, remove them.

EAS00228

#### **CHECKING THE CYLINDER HEAD**

The following procedure applies to all of the cylinder heads.

1. Eliminate:

©ombustion chamber carbon deposits (with a rounded scraper)

NOTE: -

Do not use a sharp instrument to avoid damaging or scratching:

spark plug threads

Valve seats

- 2. Check:
  - **C**ylinder head
  - Damage/scratches → Replace.
- 3. Measure:
  - **Cylinder** head warpage

Out of specification  $\rightarrow$  Resurface the cylinder head.




#### Cylinder head warpage Less than 0.1 mm


- a. Place a straightedge ① and a thickness gauge ② across the cylinder head.
- b. Measure the warpage.
- c. If the limited is exceeded, resurface the cylinder head as follows.
- d. Place a 400 × 600 grit wet sandpaper on the surface plate and resurface the cylinder head using a figure-eight sanding pattern.


#### CYLINDER HEAD

NOTE: \_

To ensure an even surface, rotate the cylinder head several times.

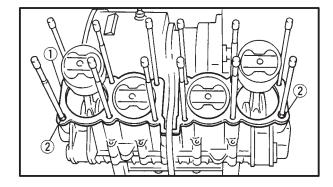

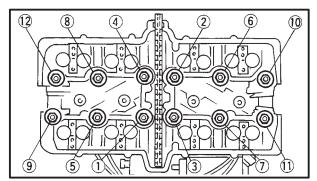

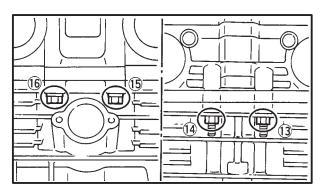

EAS00232

#### **INSTALLING THE CYLINDER HEAD**

- 1. Install:
  - gasket (New) 1
  - dowel pins 2
- 2. Install:
  - **c**ylinder head
  - **Washers**
  - ©opper washers
  - **Cylinder** head nuts

#### NOTE: \_

- Apply engine oil onto the threads of the cylinder head nuts.
- Tighten the cylinder head nuts in the proper tightening sequence as shown and torque them in two stages.



Cylinder head Cap nut 35 Nm (3.5 m/kg) Cylinder head nut 10 Nm (1.0 m/kg)

- 3. Install:
- @xhaust camshaft
- Ontake camshaft


Refer to "INSTALLING THE CAMSHAFTS".

ENG



VALVES AND VALVE SPRINGS



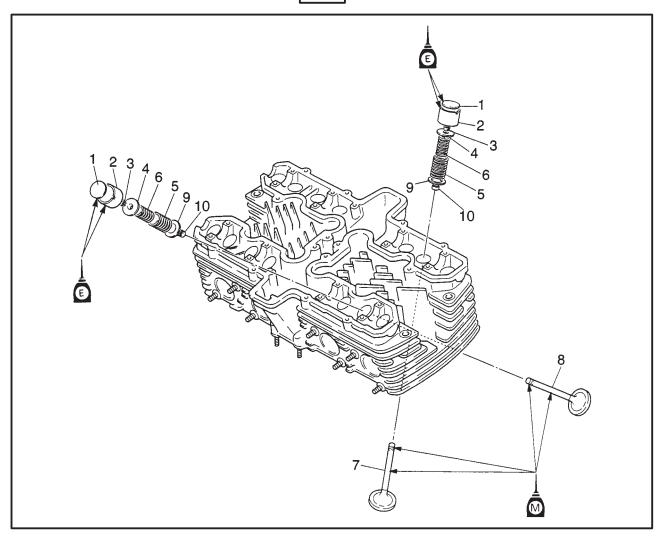

Order	Job/Part	Q'ty	Remarks
	Removing the valves and valve springs		Remove the parts in the order listed.
	Camshaft Cylinder head		Refer to "CAMSHAFTS". Refer to "CYLINDER HEAD".
1 2 3 4 5 6 7 8 9	Valve pads Valve lifters Valve cotters Upper springs seats Valve springs (outer) Valve springs (inner) Intake valves Exhaust valves Lower spring seats Oil seals	16 - 16 32 16 16 16 8 8 16 -	Refer to "REMOVING/INSTALLING THE VALVES".
. 0			For installation, reverse the removal procedure.

**ENG** 


EAS00237


#### **REMOVING THE VALVES**


The following procedure applies to all of the valves and related components.

NOTE: -

Before removing the internal parts of the cylinder head (e.g., valves, valve springs, valve seats), make sure that the valves properly seal.

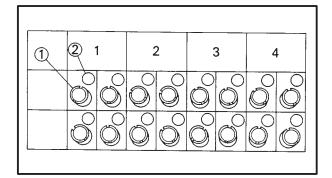

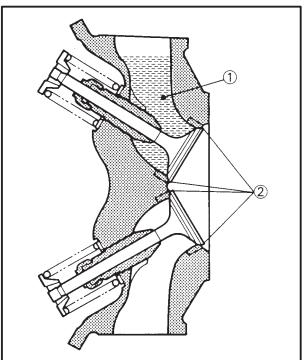

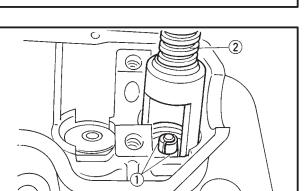

1. Remove:

(valve lifter (1)

Valve pad 2

NOTE: -

Make a note of the position of each valve lifter and valve pad so that they can be reinstalled in their original place.

2. Check:

Valve sealing

Leakage at the valve seat → Check the valve face, valve seat, and valve seat width. Refer to "CHECKING THE VALVE SEATS".

a. Pour a clean solvent (1) into the intake and exhaust ports.

b. Check that the valves properly seal. There should be no leakage at the valve seat

\_\_\_\_\_

3. Remove:

(valve cotters (1)

NOTE: -


Remove the valve cotters by compressing the valve spring with the valve spring compressor 2.




Valve spring compressor 90890-04019





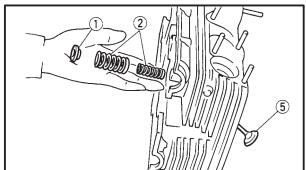

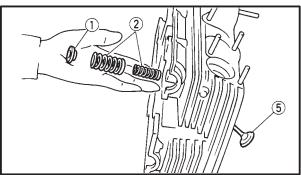


## (yalve (5) NOTE: -


4. Remove:

Oupper spring seat (1) Valve springs 2 (3) oil seal

Oower spring seat 4

Identify the position of each part very carefully so that it can be reinstalled in its original place.

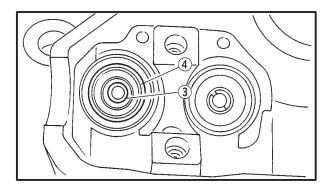

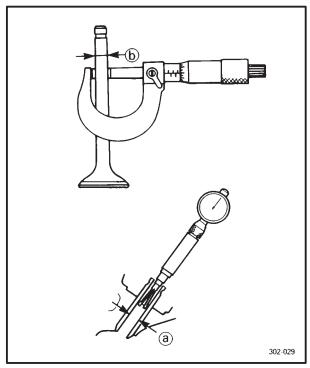

EAS00239

#### **CHECKING THE VALVES AND VALVE GUIDES**

The following procedure applies to all of the valves and valve guides.

1. Measure:

Valve-stem to valve guide clearance

Valve-stem to valve-guide clearance = Valve guide inside diameter (a) -Valve stem diameter (b)

Out of specification -> Replace the valve guide.



Valve-stem to valve-guide clearance

Intake

 $0.010 \times 0.037 \, \text{mm}$ Limit: 0.08 mm

**Exhaust** 

 $0.025 \times 0.052 \text{ mm}$ Limit: 0.10 mm


2. Replace: Valve guide

NOTE: -


To ease valve guide removal and installation, and to maintain the correct fit, heat the cylinder head to 100°C (212°F) in an oven.





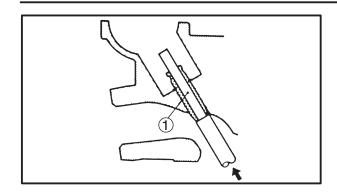

- a. Remove the valve guide with a valve guide remover ①.
- b. Install the new valve guide with a valve guide installer ② and valve guide remover ①.
- c. After installing the valve guide, bore the valve guide with a valve guide reamer ③ to obtain the proper valve-stem to valve-guide clearance.

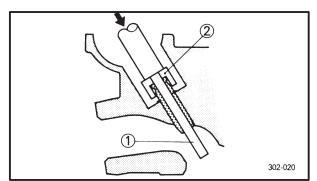


#### NOTE: -

After replacing the valve guide, reface the valve seat.



Valve guide remover, reamer & installer

(5.5 mm): 90890-04016

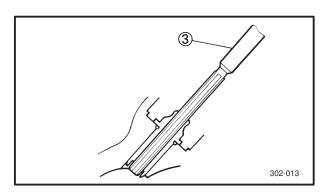

(a)-

45°

302-000

- 3. Eliminate:
  - ©arbon deposits

(from the valve face and valve seat)

- 4. Check:
- Valve face

Pitting/wear → Grind the valve face.

(valve stem end

Mushroom shape or diameter larger than the body of the valve stem  $\rightarrow$  Replace the valve.

- 5. Measure:
  - Valve margin thickness (a)

Out of specification → Replace the valve.



Valve margin thickness 0.8 mm  $\times$  1.2 mm




(valve stem runout

Out of specification → Replace the valve.

#### NOTE:

- When installing a new valve, always replace the valve guide.
- Of the valve is removed or replaced, always replace the oil seal.

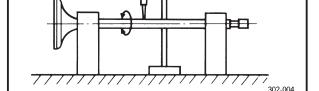



Valve stem runout 0.01 mm



EAS00240

#### **CHECKING THE VALVE SEATS**

The following procedure applies to all of the valves and valve seats.

1. Eliminate:

**©**arbon deposits

(from the valve face and valve seat)

2. Check:

(Valve seat

Pitting/wear → Replace the cylinder head.

3. Measure:


Valve seat width (a)

Out of specification  $\rightarrow$  Replace the cylinder head.



Valve seat width

Intake: 0.9  $\times$  1.1 mm Exhaust: 0.9  $\times$  1.1 mm

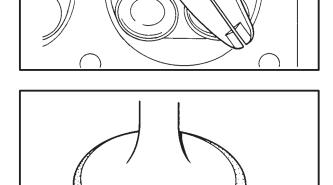

- a. Apply Mechanic's blueing dye (Dykem) **(b)** onto the valve face.
- b. Install the valve into the cylinder head.
- c. Press the valve through the valve guide and onto the valve seat to make a clear pattern.
- d. Measure the valve seat width. Where the valve seat and valve face contacted one another, the blueing will have been removed.

4. Lap:


302-017


Valve face

(valve seat

#### NOTE: -

After replacing the cylinder head or replacing the valve and valve guide, the valve seat and valve face should be lapped.

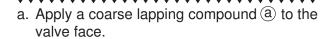

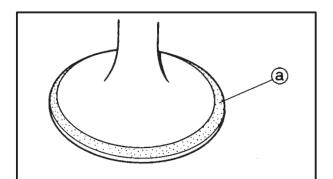


#### **CAUTION:**


Do not let the lapping compound enter the gap between the valve stem and the valve quide.

- b. Apply molybdenum disulfide oil onto the valve stem.
- c. Install the valve into the cylinder head.



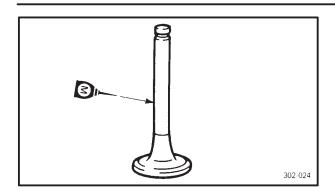


d. Turn the valve until the valve face and valve seat are evenly polished, then clean off all of the lapping compound.

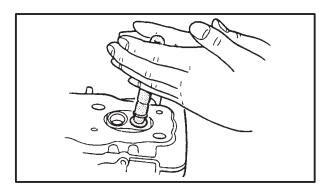


NOTE: \_

For the best lapping results, lightly tap the valve seat while rotating the valve back and forth between your hand.

e. Apply a fine lapping compound to the valve face and repeat the above steps.

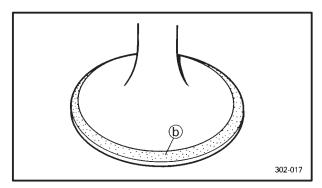

- f. After every lapping procedure, be sure to clean off all of the lapping compound from the valve face and valve seat.
- g. Apply Mechanic's blueing dye (Dykem) (b) onto the valve face.
- h. Install the valve into the cylinder head.
- Press the valve through the valve guide and onto the valve seat to make a clear impression.
- j. Measure the valve seat width © again. If the valve seat width is out of specification, reface and lap the valve seat.

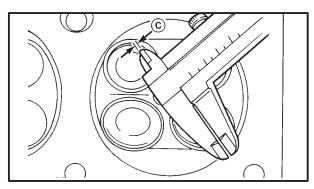

EAS00241


#### **CHECKING THE VALVE SPRINGS**

The following procedure applies to all of the valve springs.

1. Measure:

Ovalve spring free length (a)

Out of specification → Replace the valve spring.

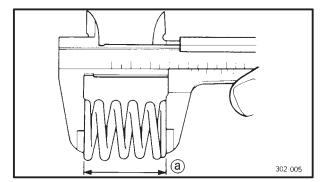









Valve spring free length (intake and exhaust)

Inner spring <Limit> 39.65 mm <37.5 mm> Outer spring <Limit> 41.1 mm <39 mm>

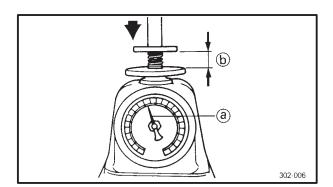

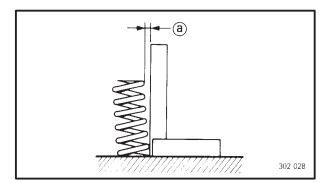

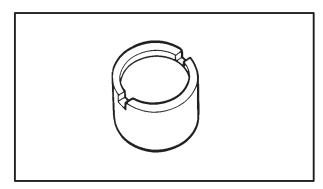

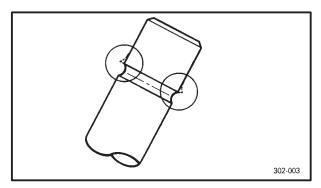

#### 2. Measure:

②compressed spring force ③
Out of specification → Replace the valve spring.

(b) Installed length



**Compressed spring force** 

Intake and exhaust inner spring  $61.7 \times 72.5$  N  $(6.29 \times 7.39$  kg) at 32.8 mm Intake and exhaust outer spring  $130.4 \times 154.0$  N  $(13.3 \times 15.7$  kg) at 34.8 mm

#### 3. Measure:

Valve spring tilt (a)

Out of specification → Replace the valve spring.



#### Spring tilt limit

Intake and exhaust inner spring 2.5°/1.7 mm
Intake and exhaust outer spring 2.5°/1.7 mm

EAS00242

#### **CHECKING THE VALVE LIFTERS**

The following procedure applies to all of the valve lifters.

#### 1. Check:

valve lifter

Damage/scratches  $\rightarrow$  Replace the valve lifters and cylinder head.

EAS00245

#### **INSTALLING THE VALVES**


The following procedure applies to all of the valves and related components.


#### 1. Deburr:


(with an oil stone)





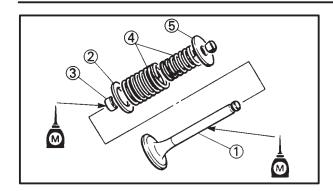

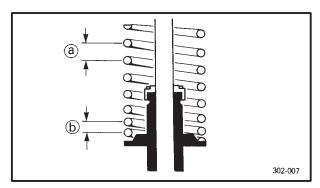

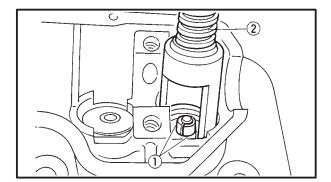



#### Recommended lubricant Molybdenum disulfide oil

- 2. Install:
  - (yalve (1)
  - Oower spring seat ②
  - (il seal 3)
  - (valve springs (4)
  - Upper spring seat (5) (into the cylinder head)

#### NOTE:

Install the valve spring with the larger pitch ⓐ facing up.

- **b** Smaller pitch
- 3. Install:

valve cotters 1

#### NOTE:

Install the valve cotters by compressing the valve spring with the valve spring compressor ②.




# Valve spring compressor 90890-04019

4. To secure the valve cotters ① onto the valve stem, lightly tap the valve tip with a soft-face hammer.

#### **CAUTION:**

Hitting the valve tip with excessive force could damage the valve.

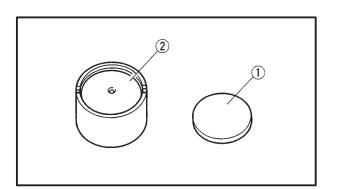

- 5. Install:
  - (Valve pad (1)
  - (valve lifter (2)

#### NOTE: -


- Apply molybdenum disulfide oil onto the valve lifter and valve pad.
- The valve lifter must move smoothly when rotated with a finger.
- Each valve lifter and valve pad must be reinstalled in its original position.






CYLINDERS AND PISTONS




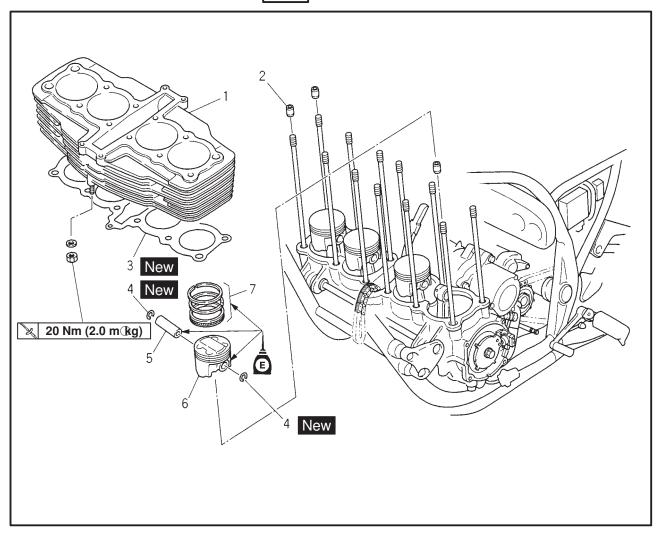

Order	Job/Part	Q'ty	Remarks
1 2 3 4 5 6 7	Removing the cylinders and pistons Cylinder head Cylinder block Dowel pins Gasket Piston pin clips Piston pins Pistons Oil ring sets	1 - 2 1 8 4 4 4 -	Remove the parts in the order listed. Refer to "CYLINDER HEAD".  Refer to "REMOVING/INSTALLING THE CYLINDERS AND PISTONS".  For installation, removal procedure.



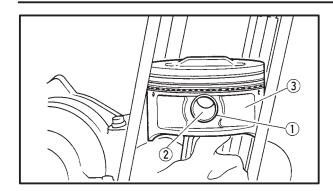

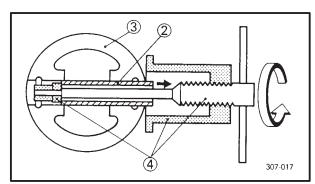

EAS00254

#### REMOVING THE CYLINDERS AND PISTONS

The following procedure applies to all of the cylinders and pistons.

1. Remove:

piston pin clip 1

piston pin 2

piston 3

#### **CAUTION:**


Do not use a hammer to drive the piston pin out.

#### NOTE: -

- Before removing the piston pin clip, cover the crankcase opening with a clean rag to prevent the piston pin clip from falling into the crankcase
- For reference during installation, put an identification mark on each piston crown.
- Before removing the piston pin, deburr the piston pin clip's groove and the piston's pin bore area. If both areas are deburred and the piston pin is still difficult to remove, remove it with the piston pin puller 4.



Piston pin puller 90890-01304

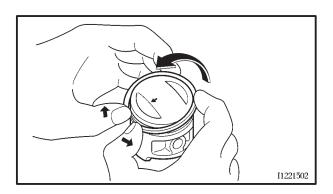

2. Remove:

Cop ring

2nd ring

**oil** ring

NOTE: -

When removing a piston ring, open the end gap with your fingers and lift the other side of the ring over the piston crown.

EAS00260

#### **CHECKING THE CYLINDERS AND PISTONS**

The following procedure applies to all of the cylinders and pistons.

1. Check:

**piston** wall


**c**ylinder wall

Vertical scratches  $\rightarrow$  Replace the cylinder, and replace the piston and piston rings as a set.


2. Measure:

piston to cylinder clearance



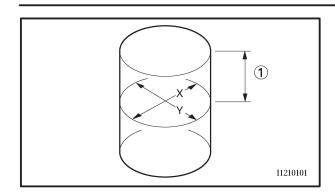

Ρ

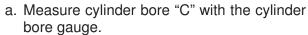

1) 20 mm from the top of the cylinder

#### NOTE:

Measure cylinder bore "C" by taking side-toside and front-to-back measurements of the cylinder. Then, find the average of the measurements.

### Cylinder bore gauge

Standard	79.00 × 79.01 mm
Wear limit	79.1 mm
Cylinder bore "C"	"C" = X + Y/2

- b. If out of specification, replace the cylinder, and replace the piston and piston rings as a set
- c. Measure piston skirt diameter "P" with the micrometer.
- (a) 2.0 mm from the bottom edge of the piston.

	Piston size "P"
Standard	78.970 × 78.985
	mm

- d. If out of specification, replace the piston and piston rings as a set.
- e. Calculate the piston to cylinder clearance with the following formula.

Piston to cylinder clearance = Cylinder bore "C" – Piston skirt diameter "P"



307-001


Piston-to-cylinder clearance  $0.015 \times 0.040 \text{ mm}$  <Limit> : 0.15 mm

 If out of specification, replace the cylinder, and replace the piston and piston rings as a set.







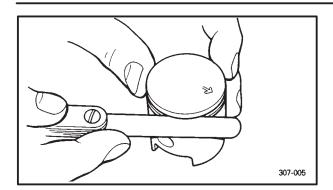

EAS00263

#### **CHECKING THE PISTON RINGS**

1. Measure:

piston ring side clearance
 Out of specification → Replace the piston and piston rings as a set.

#### NOTE: -

Before measuring the piston ring side clearance, eliminate any carbon deposits from the piston ring grooves and piston rings.



Piston ring side clearance Top ring  $0.045 \times 0.080 \text{ mm}$  <Limit>: 0.1 mm 2nd ring  $0.03 \times 0.07 \text{ mm}$  <Limit>: 0.1 mm

#### 2. Install:

piston ring (into the cylinder)

#### NOTE:

(a)

307-027

Level the piston ring in the cylinder with the piston crown as shown.

#### (a) 30 mm

#### 3. Measure:

piston ring end gap
 Out of specification → Replace the piston ring.


#### NOTE: -

The oil ring expander spacer's end gap cannot be measured. If the oil ring rail's gap is excessive, replace all three piston rings.




Top ring  $0.20 \times 0.35$  mm <Limit>: 0.6 mm 2nd ring  $0.35 \times 0.50$  mm <Limit>: 0.75 mm Oil ring  $0.2 \times 0.5$  mm

Piston ring end gap







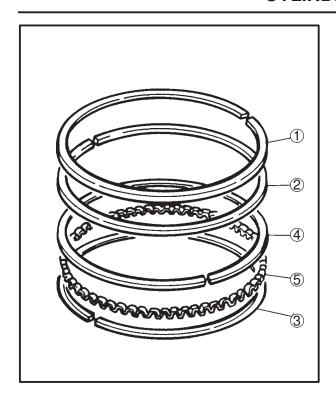


EAS0027

#### INSTALLING THE PISTONS AND CYLIN-DERS


The following procedure applies to all of the pistons and cylinders.

- 1. Install:
  - Crop ring (1)
  - (2nd ring (2)
  - Oower oil ring rail 3
  - Oupper oil ring rail 4
  - (3) oil ring expander

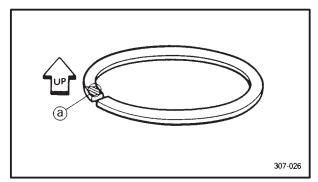



- Be sure to install the piston rings so that the manufacturer's marks or numbers a are located on the upper side of the rings.
- The piston rings that have an "R" mark must be installed into the 2nd ring groove.

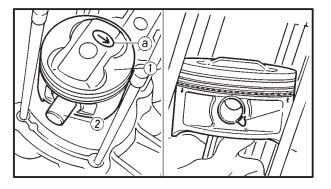

2. Install:


- piston 1
- piston pin 2
- piston pin clip (New) 3


#### NOTE:

- Apply engine oil onto the piston pin.
- Make sure that the arrow mark (a) on the piston points towards the exhaust side of the engine.
- Before installing the piston pin clip, cover the crankcase opening with a clean rag to prevent the piston pin clip from falling into the crankcase.
- Reinstall each piston into its original cylinder (numbering order starting from the left: #1 to #4).





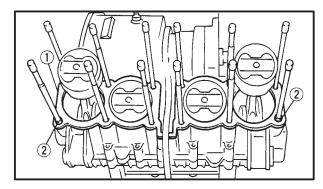

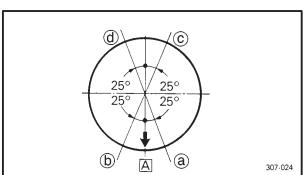

- 3. Install:
- gasket (New) 1
- dowel pins 2
- 4. Lubricate:
  - **piston**
  - piston rings
  - **C**ylinder

(with the recommended lubricant)



#### Recommended lubricant Engine oil

- 5. Offset:
  - piston ring end gaps
- (a) Top ring
- (b) Lower oil ring rail
- © Upper oil ring rail
- d 2nd ring
- A forward
- 6. Install:

**c**ylinder block


#### NOTE: -

- Onstall pistons #2 and #3 before installing pistons #1 and #4.
- Pass the timing chain and timing chain guide (intake side) through the timing chain cavity.



CLUTCH CLUTCH COVER



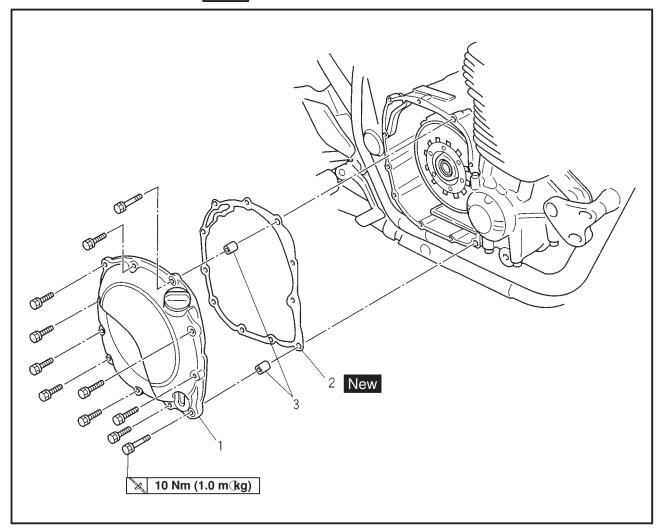


Order	Job/Part	Q'ty	Remarks
1 2 3	Removing the clutch cover. Engine oil Clutch cover Gasket Dowel pins	1 1 2	Remove the parts in the order listed. Drain  For installation, reverse the removal procedure.




EAS00274

#### **CLUTCH**

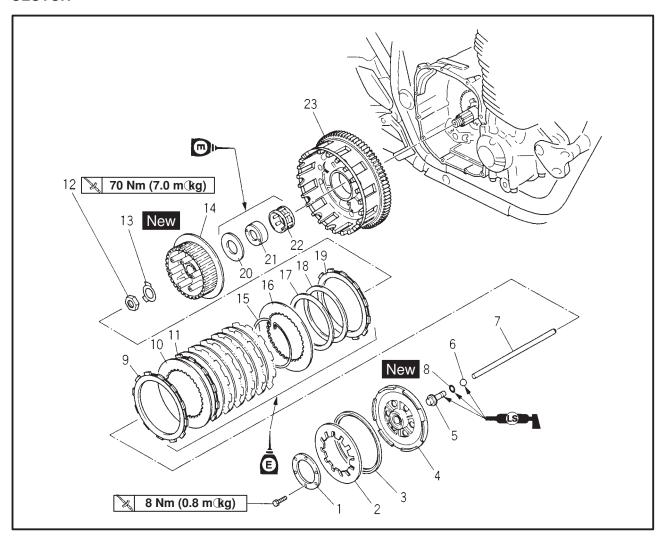

Order	Job/Part	Q'ty	Remarks
	Removing the clutch		Remove the parts in the order listed.
1	Pressure plate	1 -	
2	Clutch spring	1	
3	Spring housing	1	
4	Pressure plate	1	
5	Clutch push rod (short)	1	
6	Ball	1	Refer to "INSTALLING THE CLUTCH".
7	Clutch push rod (long)	1	
8	O-ring	1	
9	Friction plates	1	
10	Clutch plates	6	
11	Friction plates	6 -	
12	Clutch boss nut	1 -	Refer to "REMOVING/INSTALLING
13	Lock washer	1 -	THE CLUTCH".



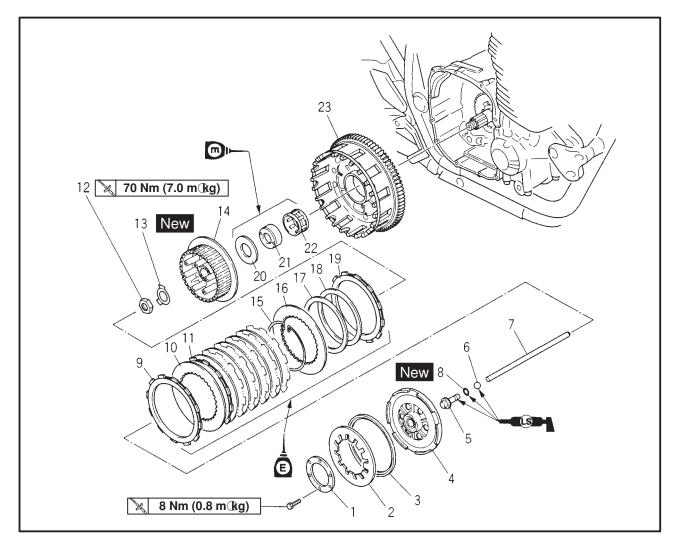



Order	Job/Part	Q'ty	Remarks
14 15 16 17 18 19 20 21 22 23	Clutch boss Stopper ring Clutch plate Clutch spring plate Clutch spring plate seat Friction plates (narrow) Thrust washer Spacer Bearing Clutch housing	1 1 1 1 1 1 1 1 1 1 1 1	Refer to "REMOVING/INSTALLING THE CLUTCH".  For installation, reverse the removal procedure.


#### **CLUTCH**






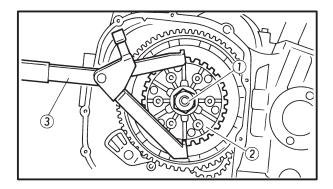

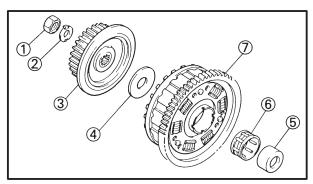

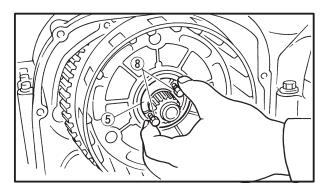

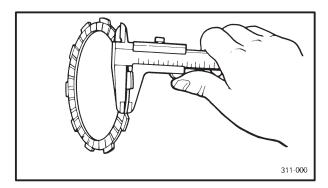

EAS00275

#### REMOVING THE CLUTCH

- 1. Straighten the lock washer tab.
- 2. Loosen:

©lutch boss nut ①

#### NOTE: -

While holding the clutch boss ② with the universal clutch holder, loosen the clutch boss nut.



# Universal clutch holder ③ 90890-04086

3. Remove:

©lutch boss nut (1)

Oock washer 2

clutch boss 3

(thrust washer 4)

spacer 5

Dearing 6

©lutch housing 7

#### NOTE: -

Insert two 6 mm bolts (8) into the spacer and then remove the spacer by pulling on the bolts.

EAS00280

#### **CHECKING THE FRICTION PLATES**

The following procedure applies to all of the friction plates.

1. Check:

**Triction** plate

Damage/wear  $\rightarrow$  Replace the friction plates as a set.

2. Measure:

**Friction plate thickness** 

Out of specification  $\rightarrow$  Replace the friction plates as a set.

#### NOTE:

Measure the friction plate at four places.



Friction plate thickness  $2.9 \times 3.1 \text{ mm}$ 

<Limit>: 2.8 mm



EAS00281

#### **CHECKING THE CLUTCH PLATES**

The following procedure applies to all of the clutch plates.

#### 1. Check:

©lutch plate

 $\mbox{Damage} \rightarrow \mbox{Replace the clutch plates as a set.}$ 

#### 2. Measure:


**©**lutch plate warpage

(with a surface plate and thickness gauge

Out of specification  $\rightarrow$  Replace the clutch plates as a set.



Clutch plate warpage limit Less than 0.1 mm

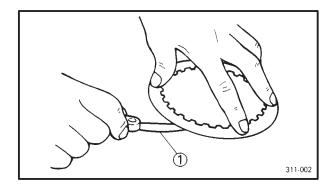


#### **CHECKING THE CLUTCH SPRING**

#### 1. Check:

Clutch spring

Damage  $\rightarrow$  Replace as a set.

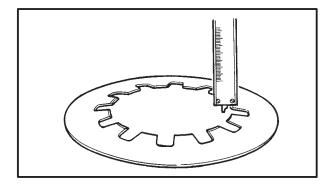

#### 2. Measure:

Clutch spring free height

Out of specification  $\rightarrow$  Replace spring as a set.



Free height limit (clutch spring): 6.0 mm

EAS00283

#### CHECKING THE CLUTCH SPRING PLATE

- 1. Check:
  - **©**lutch spring plate


Damage → Replace.

2. Check:

©lutch spring plate seat

Damage → Replace.



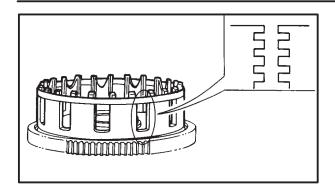

EAS00284

#### **CHECKING THE CLUTCH HOUSING**

1. Check:

Clutch housing dogs

Damage/pitting/wear → Deburr the clutch housing dogs or replace the clutch housing.


NOTE: -

Pitting on the clutch housing dogs will cause erratic clutch operation.

2. Check:

**Dearing** 

 $Damage/wear \rightarrow Replace$  the clutch housing.

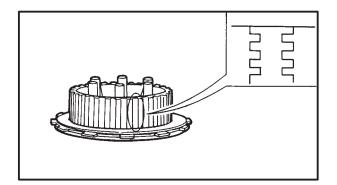

EAS00285

#### **CHECKING THE CLUTCH BOSS**

1. Check:

**@lutch** boss splines

 $\label{eq:decomposition} Damage/pitting/wear \rightarrow Replace \ the \ clutch \ boss.$ 

NOTE: -

Pitting on the clutch boss splines will cause erratic clutch operation.

EAS00286

#### **CHECKING THE PRESSURE PLATE**

1. Check:


pressure plate


Cracks/damage → Replace.


### **CLUTCH**






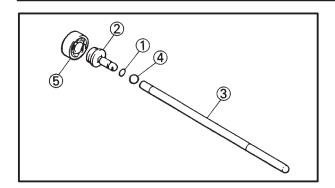

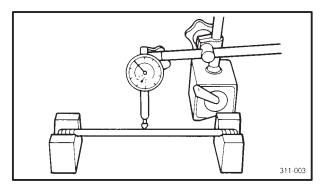

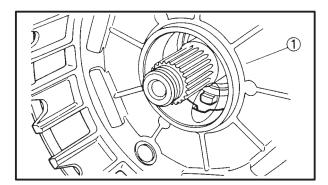

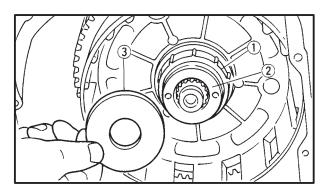

EAS00288

#### **CHECKING THE CLUTCH PUSH RODS**

- 1. Check:
  - ①-ring ①
  - 3 short clutch push rod 2
  - Oong clutch push rod 3
  - Oball (4)
  - (bearing (5)
  - Cracks/damage/wear  $\rightarrow$  Replace the defective part(-s).
- 2. Measure:
  - Ong clutch push rod bending limit
    Out of specification → Replace the long clutch push rod.



Long clutch push rod bending limit 0.3 mm

#### **INSTALLING THE CLUTCH**

- 1. Install:
  - clutch housing 1

#### NOTE: -

Engage the notch of clutch housing and the projection on the oil pump drive gear.


- 2. Install:
  - (bearing (1)
  - spacer 2
  - Thrust washer 3


#### NOTE: -

Install the spacer with the two screw holes facing towards the clutch boss.





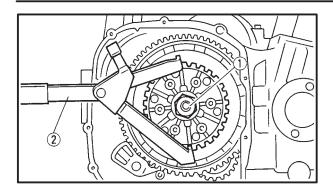

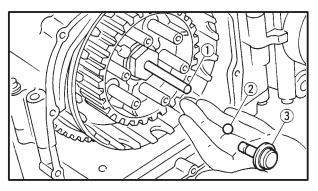

3. Tighten:

Clutch boss nut (1)

NOTE: -

While holding the clutch boss with the universal clutch holder ②, tighten the clutch boss nut.



Universal clutch holder 90890-04086



Clutch boss nut 70 Nm (7.0 m⋅kg)

- 4. Bend the lock washer tab along a flat side of the nut.
- 5. Lubricate:


Ong clutch push rod 1

Oball 2

(with the recommended lubricant)



Recommended lubricant Lithium soap base grease

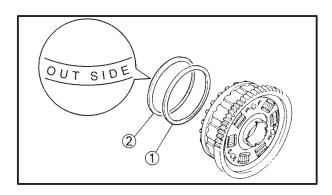

6. Install:


©lutch spring plate seat ①
©lutch spring plate ②


NOTE:


Install the spring plate with the letters "OUT SIDE" facing outward.






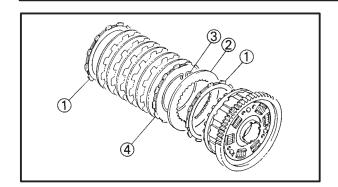

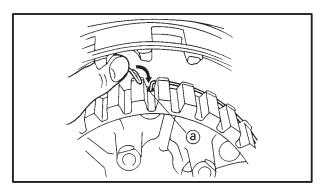

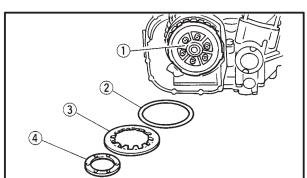

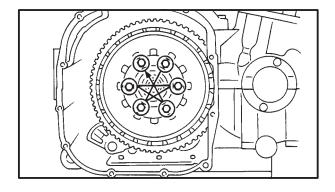

#### 7. Install:

- Friction plates (narrow type) 1
- ©lutch plates ②
- Stopper ring 3
- Friction plates (wide type) 4

# a. Install the friction plate of narrow contact face ① and one of the clutch plate to the clutch

b. Install the stopper ring ③.

#### NOTE: -

Install the stopper ring onto the groove around the clutch boss with both ends of the ring fitted in the hole ⓐ on the boss.

- c. Install the other 6 clutch plates and the 6 friction plates of wide contact face alternately.
- d. Install the another friction plate of narrow face.

#### 8. Install:

- Pressure plate 1
- Spring housing 2
- Clutch spring 3
- Plate 4
- **Bolts** (clutch spring)

#### NOTE: -

Tighten the bolts (clutch spring) in stages, using a crisscross pattern.




Bolt (clutch spring): 8 Nm (0.8 m@kg)



EAS00305


# CLUTCH MASTER CYLINDER



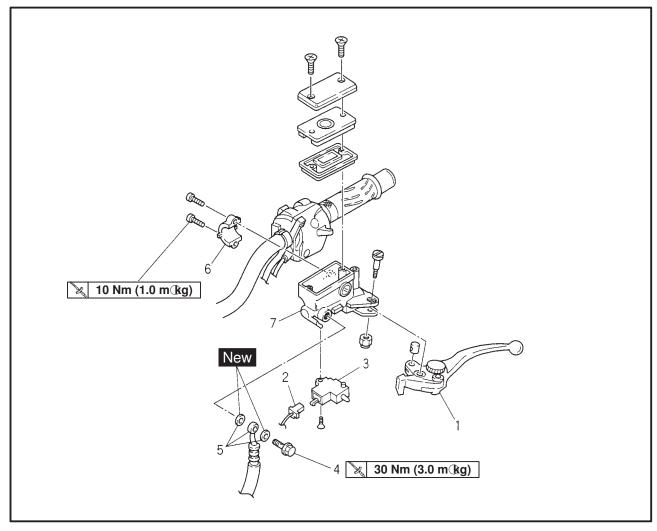

Order	Job/Part	Q'ty	Remarks
1 2 3	Removing the clutch master cylinder Clutch lever Clutch switch lead Clutch switch	1 1 1	Remove the parts in the order listed.  NOTE:  Before removing the clutch master cylinder, drain the clutch fluid from the entire clutch system.
4 5 6 7	Union bolt Copper washers/Clutch hose Clutch lever holder Clutch master cylinder	1 - 2/1 1 1 -	Refer to "INSTALLING THE CLUTCH MASTER CYLINDER".  For installation, reverse the removal procedure.



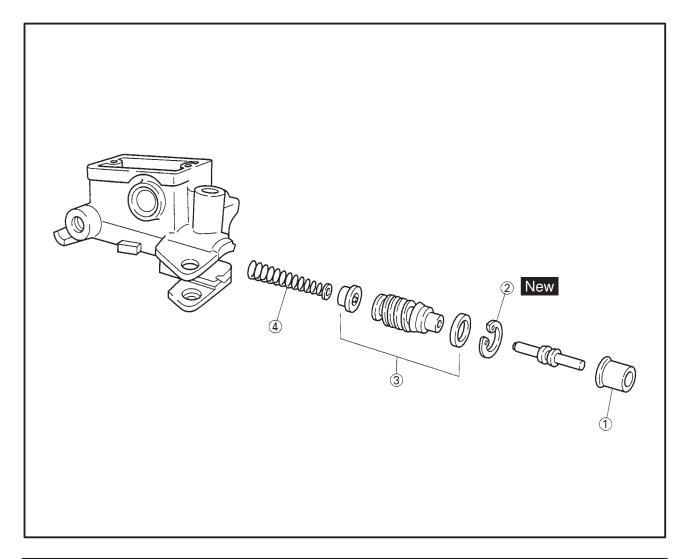

Order	Job/Part	Q'ty	Remarks
1 2 3 4	Disassembling the clutch master cylinder Master cylinder boot Circlip Master cylinder kit Spring	1 1 1 1	Disassembly the parts in the order listed.  For assembly, reverse the disassembly procedure.



EAS00307

<b>CAUTION:</b>	

Clutch components rarely require disassembly.

Therefore, always follow these preventive measures:

- Never disassemble clutch components unless absolutely necessary.
- Of any connection on the hydraulic clutch system is disconnected, the entire clutch system must be disassembled, drained, cleaned, properly filled, and bled after reassembly.
- Never use solvents on internal clutch components.
- Use only clean or new clutch fluid for cleaning clutch components.
- Clutch fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt fluid immediately.
- Avoid clutch fluid coming into contact with the eyes as it can cause serious injury.

First aid for clutch fluid entering the eyes:

Flush with water for 15 minutes and get immediate medical attention.

#### CHECKING THE CLUTCH MASTER CYL-**INDER**

Recommended clutch component replacement schedule			
Piston seals	Every two years		
Clutch hose	Every two years		
Clutch fluid	Every two years and whenever the clutch is disassembled.		


#### 1. Check:

- ©lutch master cylinder body 1
  - Cracks/damage → Replace the clutch master cylinder.
- @lutch fluid delivery passage 2 (clutch master cylinder body)

Obstruction → Blow out with compressed air.


## **A** WARNING

Whenever a clutch master cylinder is disassembled, replace the piston seals.

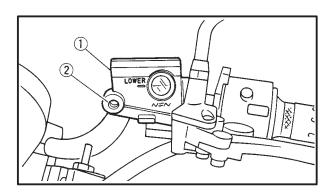





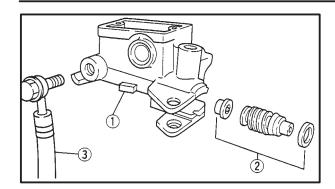

#### 2. Check:

- ©lutch master cylinder ①
- ©lutch master cylinder kit ②


Rust/scratches/wear  $\rightarrow$  Replace the clutch master cylinder and clutch master cylinder kit as a set.

- ©lutch hose (3)
- Cracks/damage/wear → Replace.

ASSEMBLING THE CLUTCH MASTER CYL-INDER

#### **A** WARNING

- Before installation, all internal clutch components must be cleaned and lubricated with clean or new clutch fluid.
- Never use solvents on internal clutch components as they will cause the piston seals to swell and distort.
- Whenever a clutch master cylinder is disassembled, replace the piston seals.

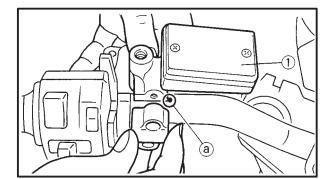



#### Recommended clutch fluid Brake fluid DOT 4

EAS00310

## INSTALLING THE CLUTCH MASTER CYLINDER

1. Install:

©lutch master cylinder (1)

## **A** WARNING

- Onstall the clutch lever holder with the "UP" mark facing up.
- Align the end of the clutch lever holder with the punch mark (a) in the handlebar.
- First, tighten the upper bolt, then the lower bolt.

#### 2. Install:


- ©opper washers (New)
- ©lutch hose (1)
- Union bolt (2)



Proper clutch hose routing is essential to insure safe motorcycle operation. Refer to "CABLE ROUTING".


NOTE:

While holding the clutch hose, tighten the union bolt.

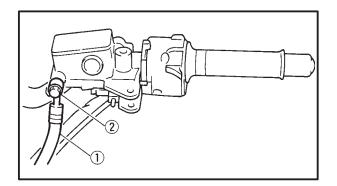





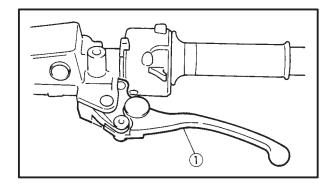

No.
\ \

#### Union bolt 30 Nm (3.0 m⋅kg)

#### 3. Install:

clutch lever (1)

#### NOTE: -

Lubricate the clutch lever pivot bolt with lithium soap base grease.

#### 4. Fill:

©lutch master cylinder reservoir (with the specified amount of the recommended clutch fluid)



Recommended clutch fluid Brake fluid DOT 4

## **A** WARNING

- Use only the designated clutch fluid. Other clutch fluids may cause the rubber seals to deteriorate, causing leakage and poor clutch performance.
- Refill with the same type of clutch fluid that is already in the system. Mixing clutch fluids may result in a harmful chemical reaction, leading to poor clutch performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the clutch fluid and could cause vapor lock.

#### CAUTION:

Clutch fluid may damage painted surfaces or plastic parts. Therefore, always clean up any spilt clutch fluid immediately.

#### NOTE: —


In order to ensure a correct reading of the clutch fluid level, make sure that the top of the reservoir is horizontal.

#### 5. Bleed:

**©**lutch system

Refer to "BLEEDING THE HYDRAULIC CLUTCH SYSTEM" in chapter 3.



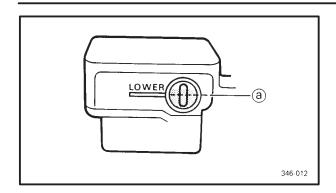

#### 6. Check:

**Clutch fluid level** 

Below the minimum level mark  $\textcircled{a} \to \operatorname{Add}$  the recommended clutch fluid to the proper level.

Refer to "CHECKING THE CLUTCH FLUID LEVEL" in chapter 3.

#### 7. Check:

©lutch lever operation


Soft or spongy feeling  $\rightarrow$  Bleed the clutch system.

Refer to "BLEEDING THE HYDRAULIC CLUTCH SYSTEM" in chapter 3.




EAS00311

#### **CLUTCH RELEASE CYLINDER**

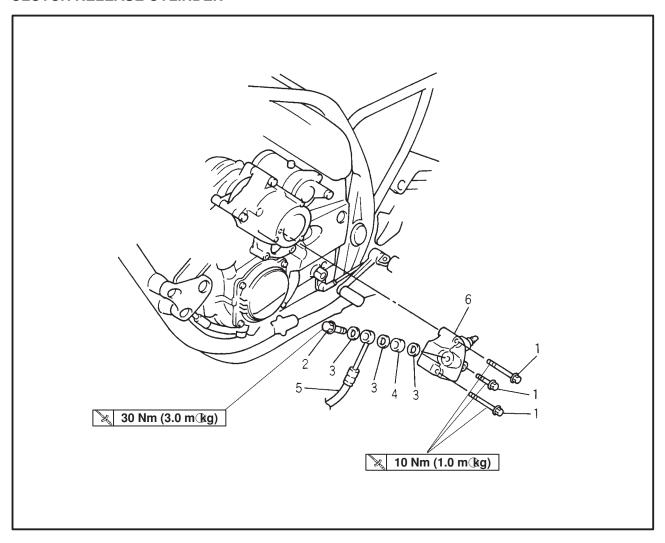

Order	Job/Part	Q'ty	Remarks
	Removing the clutch release cylinder		Remove the parts in the order listed.  Refer to "INSTALLING THE CLUTCH
1	Bolt	3	RELEASE CYLINDER".
			Before removing the clutch releace cylinder, drain the clutch fluid from the entire clutch system.
2 3 4 5 6	Union bolt Copper washer Spacer Clutch hose Clutch release cylinder	1 - 3 1 1 1 -	Refer to "INSTALLING THE CLUTCH RELEASE CYLINDER".
	Glaton Glado dy middi	'	For installation, reverse the removal procedure.




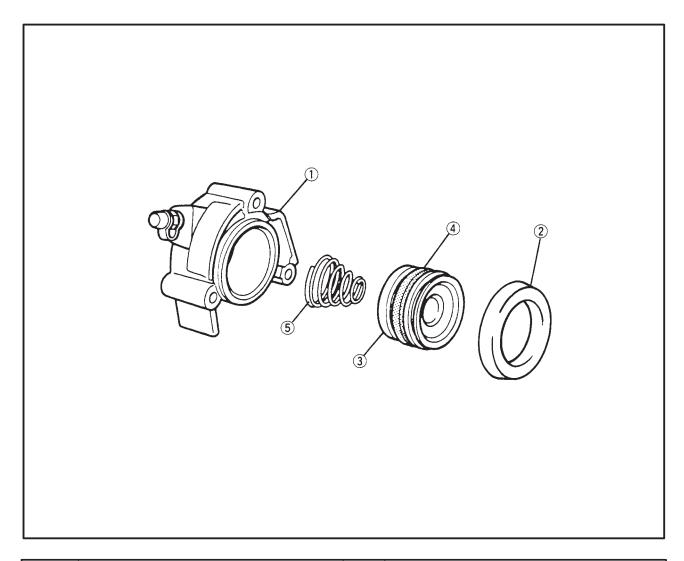



Order	Job/Part	Q'ty	Remarks
1 2 3 4 5	Disassembling the clutch release cylinder Clutch release cylinder Piston seal Clutch release cylinder piston Piston seal Spring	1 - 1 1 1 1 -	Disassembly the parts in the order listed.  Refer to "DISASSEMBLING THE CLUTCH RELEASE CYLINDER".  For assembly, reverse the disassembly procedure.





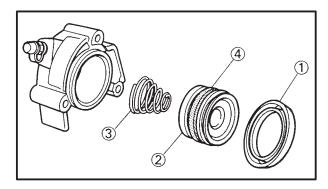

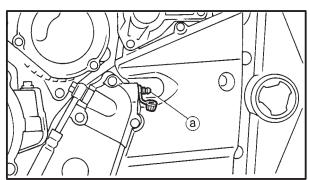

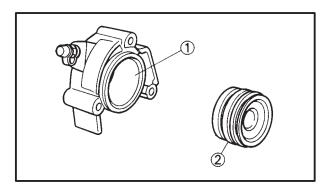

EAS00313

## DISASSEMBLING THE CLUTCH RELEASE CYLINDER

- 1. Remove:
  - piston seal 1
  - clutch release cylinder piston 2
  - spring 3
  - piston seal (4)
- a. Blow compressed air into the clutch hose joint opening ⓐ to force out the piston from the clutch release cylinder.

## **A** WARNING

- Cover the clutch release cylinder with a rag. Be careful not to get injured when the piston is expelled from the clutch release cylinder.
- Never try to pry out the clutch release cylinder piston.
- b. Remove the clutch release cylinder piston seals.

EAS00314


#### CHECKING THE CLUTCH RELEASE CYL-INDER

Recommended clutch component replacement schedule			
Piston seals	Every two years		
Clutch hose	Every two years		
Clutch fluid	Every two years and whenever the clutch is disassembled		

- 1. Check:
  - ©lutch release cylinder body
    Cracks/damage → Replace the clutch release cylinder.
- 2. Check:
  - ©lutch release cylinder ①
  - ©lutch release cylinder piston ②
  - Rust/scratches/wear  $\rightarrow$  Replace the clutch release cylinder and clutch release cylinder piston as a set.





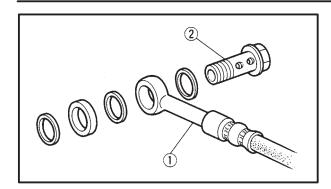

EAS00315

## INSTALLING THE CLUTCH RELEASE CYL-INDER

- 1. Check:
  - ©opper washers (New)
  - ©lutch hose (1)
  - Ounion bolt 2

## **A** WARNING

Proper clutch hose routing is essential to insure safe motorcycle operation. Refer to "CABLE ROUTING".



Union bolt 30 Nm (3.0 m⋅kg)

#### 2. Fill:

©lutch master cylinder reservoir (with the specified amount of the recommended clutch fluid)



Recommended clutch fluid Brake fluid DOT 4

## **A** WARNING

- Use only the designated clutch fluid. Other clutch fluids may cause the rubber seals to deteriorate, causing leakage and poor clutch performance.
- Refill with the same type of clutch fluid that is already in the system. Mixing clutch fluids may result in a harmful chemical reaction, leading to poor clutch performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the clutch fluid and could cause vapor lock.

#### CAUTION:

Clutch fluid may damage painted surfaces or plastic parts. Therefore, always clean up any spilt clutch fluid immediately.



#### NOTE: -

In order to ensure a correct reading of the clutch fluid level, make sure that the top of the reservoir is horizontal.

#### 3. Bleed:

**@lutch** system

Refer to "BLEEDING THE HYDRAULIC CLUTCH SYSTEM" in chapter 3.

#### 4. Check:

clutch fluid level

Below the minimum level mark  $\textcircled{a} \to \operatorname{Add}$  the recommended clutch fluid to the proper level


Refer to "CHECKING THE CLUTCH FLUID LEVEL" in chapter 3.

#### 5. Check:

©lutch lever operation

Soft or spongy feeling  $\rightarrow$  Bleed the clutch system.


Refer to "BLEEDING THE HYDRAULIC CLUTCH SYSTEM" in chapter 3.

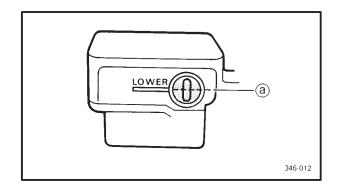



## OIL PUMP




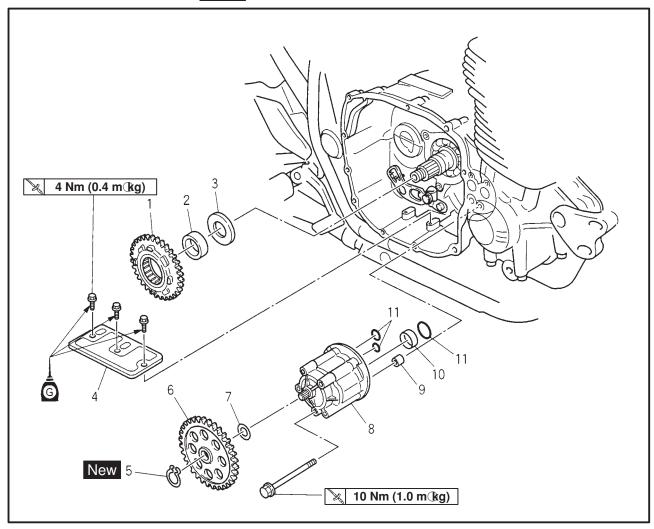

Order	Job/Part	Q'ty	Remarks
	Removing the oil pump.		Remove the parts in the order listed.
	Clutch		Refer to "INSTALLING THE CLUTCH".
1	Oil pump drive gear	1	
2	Collar	1	
3	Washer	1	
4	Oil buffer plate	1	
5	Circlip	1	
6	Oil pump driven gear	1	
7	Washer	1	
8	Oil pump	1	Refer to "INSTALLING THE OIL PUMP".
9	Dowel pin	1	
10	Collar	1	
11	O-ring	3	
			For installation, reverse the removal procedure.





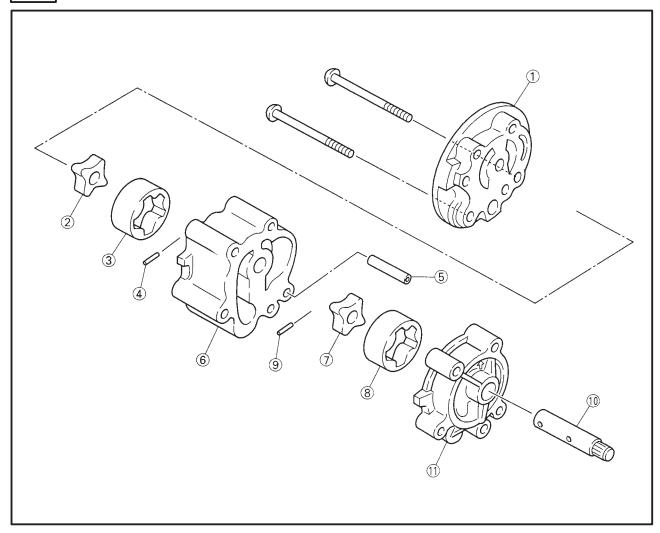



Order Job/Part Q'ty	Remarks
① Oil pump housing       1         ② Inner rotor       1         ③ Outer rotor       1         ④ Pin       1         ⑤ Dowel pin       1         ⑥ Oil pump housing       1         ⑦ Inner rotor       1         ⑧ Outer rotor       1         ⑨ Pin       1         ⑩ Oil pump shaft       1         ① Oil pump cover       1	the parts in the order listed.  SEMBLING THE OIL  reverse the disassembly

#### **OIL PUMP**





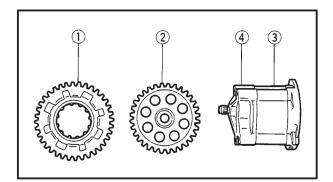

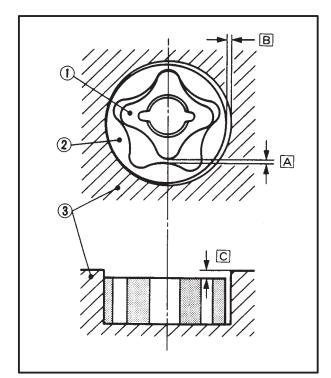

EAS00364

#### **CHECKING THE OIL PUMP**

#### 1. Check:

(a) oil pump drive gear (1)

(a) oil pump driven gear (2)

(a) jump housing cover (4)

Cracks/damage/wear  $\rightarrow$  Replace the defective part(-s).

#### 2. Measure:

Onner-rotor to outer-rotor tip clearance A

Outer-rotor to oil-pump-housing clearance B

(il-pump-housing to inner-rotor and outer-rotor clearance C

Outer of specification  $\rightarrow$  Replace the oil pump.

- 1 Inner rotor
- 2 Outer rotor
- 3 Oil pump housing



Inner-rotor to outer-rotor tip clearance

 $0.12 \times 0.17$  mm <Limit 0.2 mm> Outer-rotor to oil-pump-housing clearance

 $0.03\times0.08\ mm$  <Limit 0.15 mm> Oil-pump-housing to inner-rotor and outer-rotor clearance

 $0.03 \times 0.08$  mm <Limit 0.15 mm>

#### 3. Check:

Oil pump operation

Unsmooth  $\rightarrow$  Repeat steps (1) and (2) or replace the defective part(-s).

#### **OIL PUMP**





EAS00375

#### ASSEMBLING THE OIL PUMP

- 1. Lubricate:
  - Onner rotor
  - **Outer** rotor
  - oil pump shaft

(with the recommended lubricant)



#### Recommended lubricant Engine oil

- 2. Install:

(to the oil pump cover 2)

(b) in (3)

Onner rotor (4)

Outer rotor (5)

Opin 6

(i) jump housing (7)

screw



Oil pump housing screw 10 Nm (1.0 m/kg)

NOTE: —

When installing the inner rotor, align the pin ③ in the oil pump shaft with the groove on the inner rotor ④.

- 3. Check:
  - @il pump operation

Refer to "CHECKING THE OIL PUMP".

EAS00376

#### **INSTALLING THE OIL PUMP**

- 1. Install:
  - (3) il pump (1)




Oil pump bolt 10 Nm (1.0 m/kg)


#### **CAUTION:**

After tightening the bolts, make sure that the oil pump turns smoothly.

NOTE:

Align the arrow (a) on the oil pump with the arrow (b) on the crankcase.

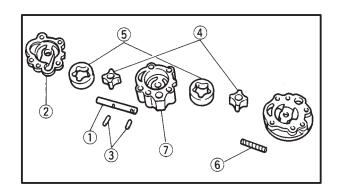


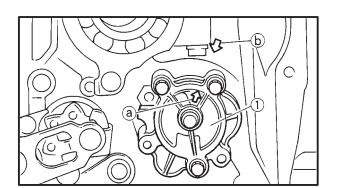

## SHIFT SHAFT






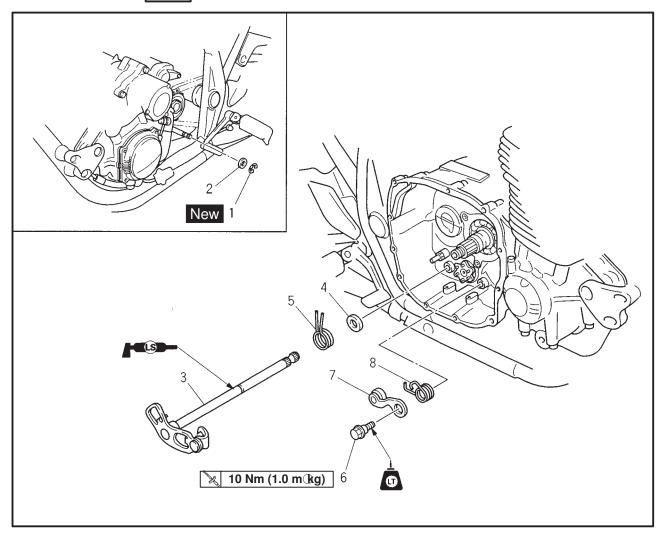

Order	Job/Part	Q'ty	Remarks
	Removing the shift shaft and		Remove the parts in the order listed.
	Stopper lever Oil pump Drive sprocket cover		Refer to "OIL PUMP". Refer to "ENGINE".
1 2	Circlip Washer	1 -	
3 4 5	Shift shaft Washer Shift lever spring	1 1 1	Refer to "INSTALLING THE SHIFT SHAFT".
6 7 8	Bolt Stopper lever	1 1 1 -	
0	Stopper lever spring	-	For installation, reverse the removal procedure.

#### SHIFT SHAFT



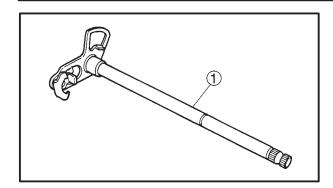

EAS00328

#### **CHECKING THE SHIFT SHAFT**


1. Check:

\$hift shaft (1)

Bends/damage/wear → Replace.

Shift lever spring

Damage/wear → Replace.

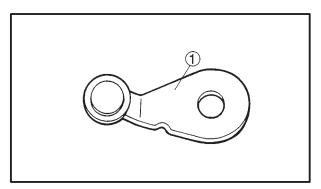

EAS00330


#### **CHECKING THE STOPPER LEVER**

1. Check:

③stopper lever ①

Bends/damage → Replace.

Roller turns roughly  $\rightarrow$  Replace the stopper lever.

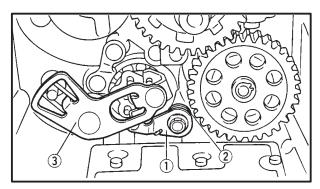

EAS00331

#### **INSTALLING THE SHIFT SHAFT**

1. Install:

③stopper lever ①


③stopper lever spring ②

shift shaft lever 3



Hook the ends of the stopper lever spring onto the stopper lever and the crankcase boss.

Mesh the stopper lever with the shift drum segment assembly.

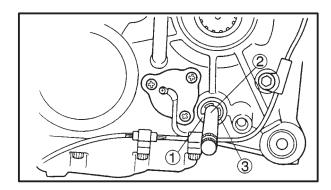

2. Install:


(washer (1)

\$hift shaft 2

@irclip 3

## **SHIFT SHAFT**



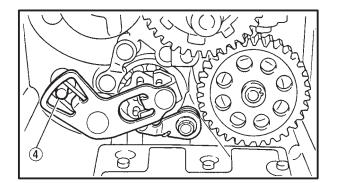

#### NOTE: —

- Oubricate the oil seal lips with lithium soap base grease.
- Hook the end of the shift lever spring onto the shift lever spring stopper 4.


## TIMING PLATE AND PICKUP COIL





## TIMING PLATE AND PICKUP COIL




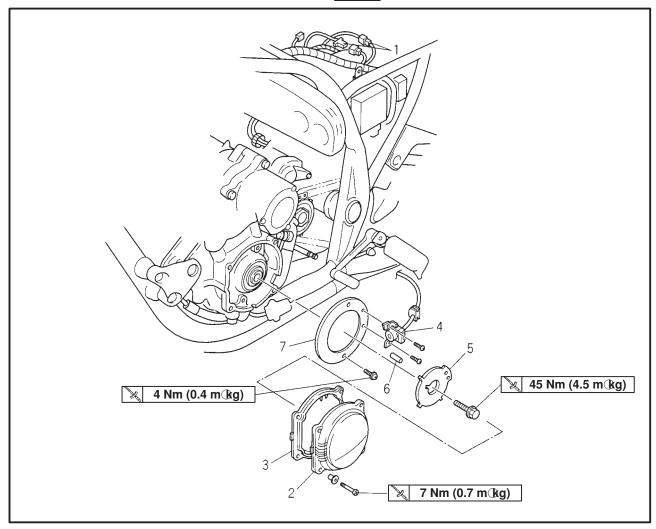

Order	Job/Part	Q'ty	Remarks
	Removing the timing plate and pickup coil Seat, side cover, fuel tank		Remove the parts in the order listed.
1	Pickup coil read	1	
2	Timing plate cover	1	
3	Gasket	1	
4	Pickup coil	1	
5	Timing plate	1	
6	Dowel pin	1	
7	Pickup base	1	
			For installation, reverse the removal procedure.





## **OIL PAN**

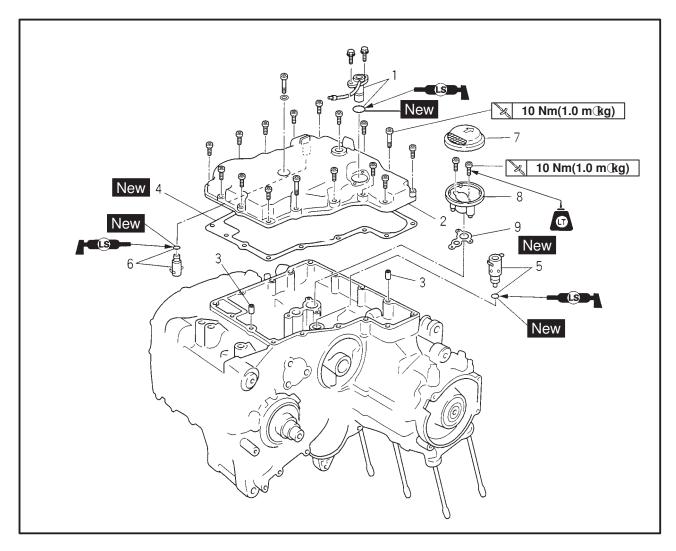



Order	Job/Part	Q'ty	Remarks
1 2 3 4 5 6 7 8 9	Removing the oil pan Engine Oil level switch/O-ring Oil pan Dowel pin Gasket Relief valve/O-ring Relief valve/O-ring Oil strainer Oil strainer housing Gasket	l	Remove the parts in the order listed. Refer to "ENGINE".  Refer to "REMOVING/INSTALLING THE OIL PAN".  Refer to "INSTALLING THE OIL STRAINER".  For installation, reverse the removal procedure.



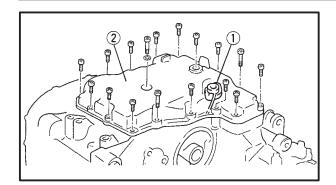

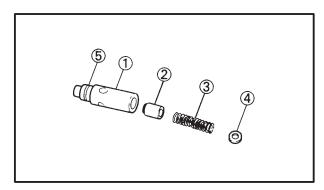

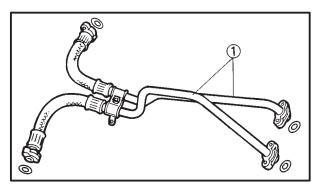

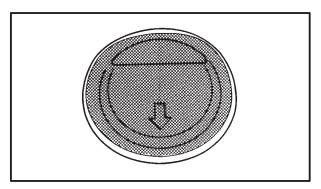

EAS00362

#### **REMOVING THE OIL PAN**

1. Remove:

(3) il level switch (1)

oil pan 2

**Q**asket

**dowel** pins

NOTE: —

Loosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern. After all of the bolts are fully loosened, remove them.

EAS00365

#### **CHECKING THE RELIEF VALVE**

1. Check:

Oelief valve body 1

Oelief valve 2

spring 3

Cover (4)

Damage/wear  $\rightarrow$  Replace the defective part(-s).

**@irclip** (5)

EAS00367

#### **CHECKING THE OIL DELIVERY PIPES**

The following procedure applies to all of the oil delivery pipes.

1. Check:

(i) delivery pipe (1)

Damage → Replace.

Obstruction  $\rightarrow$  Wash and blow out with compressed air.

EAS00368

#### **CHECKING THE OIL STRAINER**

1. Check:

**oil** strainer


Damage → Replace.


Contaminants → Clean with engine oil.


#### **OIL PAN**





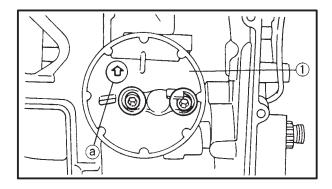

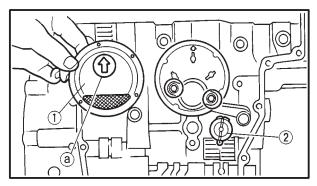

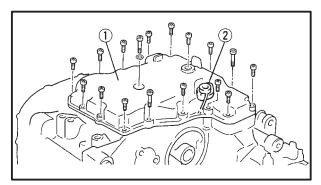

EAS00378

#### **INSTALLING THE OIL STRAINER**

1. Install:

(a) il strainer housing (1)



Oil strainer housing bolt 10 Nm (1.0 m/kg) LOCTITE®

NOTE: -

The arrow ⓐ on the oil strainer housing must point towards the front of the engine.

2. Install:

@il strainer cover ①

Telief valve (2)

NOTE: -

The arrow (a) on the oil strainer cover must point towards the front of the engine.

EAS00380

#### **INSTALLING THE OIL PAN**

1. Install:

**dowel** pins

gasket (New)

engine oil drain bolt

## **WARNING**

Always use new copper washers.


NOTE: -

Tighten the oil pan bolts in stages and in a crisscross pattern.


①ubricate the oil level switch's O-ring with engine oil.



Oil pan bolt 10 Nm (1.0 m⋅kg) Oil level switch bolt 10 Nm (1.0 m⋅kg)

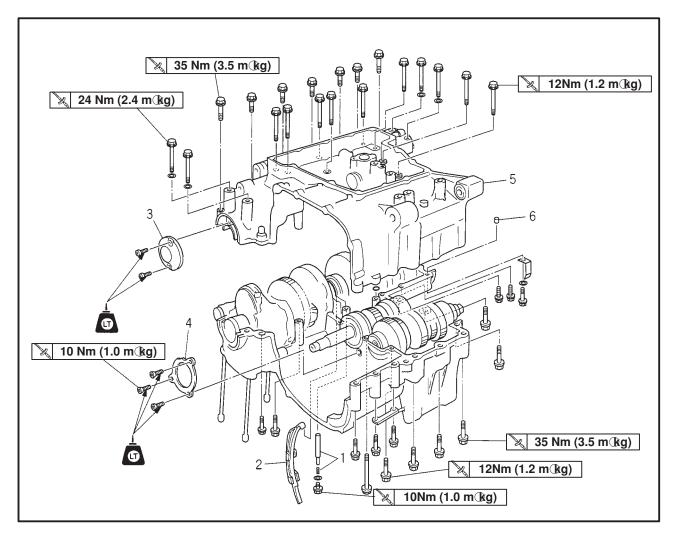

Order	Job/Part	Q'ty	Remarks
1 2 3	Removing the oil pan Engine Camshafts Cylinder head Cylinder, piston Clutch Oil pump Shift shaft Timing plate, pickup coil Oil strainer Spring/rod Chain guide Cover	1/1 1 1	Remove the parts in the order listed. Refer to "ENGINE". Refer to "CAMSHAFTS". Refer to "CYLINDER HEAD". Refer to "CYLINDERS AND PISTONS". Refer to "CLUTCH". Refer to "OIL PUMP". Refer to "SHIFT SHAFT". Refer to "TIMING PLATE AND PICKUP COIL". Refer to "OIL PAN".

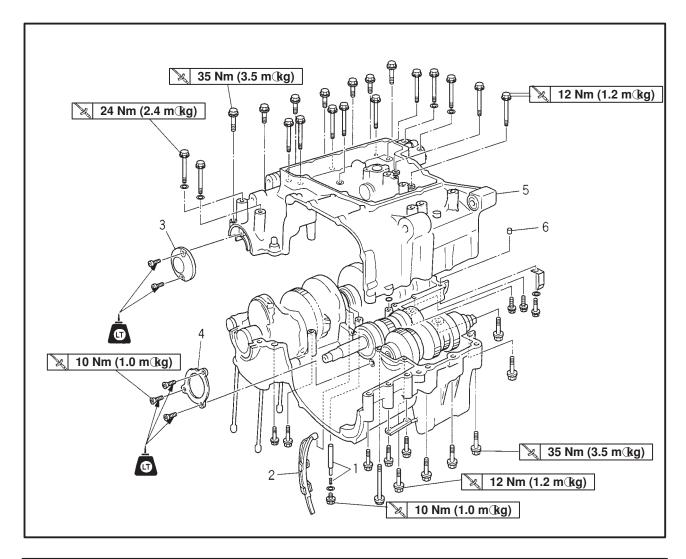

Order	Job/Part	Q'ty	Remarks
4	Bearing cover	1	
5	Crankcase (lower)	1	Refer to "DISASSEMBLING/ASSEM-
			BLING THE CRANKCASE".
6	Dowel pin	2	
			For installation, reverse the removal pro-
			cedure.

EAS00384

#### DISASSEMBLING THE CRANKCASE

1. Remove:

**©**rankcase bolts

NOTE: \_

Obosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern. After all of the bolts are fully loosened, remove them.

Oosen the bolts in decreasing numerical order (refer to the numbers in the illustration).

The numbers embossed on the crankcase indicate the crankcase tightening sequence.

2. Place the engine upside down.

3. Remove:

Oower crankcase

A Upper crankcase

☆: M10 bolts

×: M8 bolts

 $\Delta$ : M6 bolts



Tap on one side of the crankcase with a softface hammer. Tap only on reinforced portions of the crankcase, not on the crankcase mating surfaces. Work slowly and carefully and make sure that the crankcase halves separate evenly.

4. Remove:

**dowel** pins

**O**-ring

B Lower crankcase

☆: M10 bolts

×: M8 bolts


 $\Delta$ : M6 bolts

5. Remove:

©rankshaft journal lower bearing (from the lower crankcase)

NOTE: -

Identify the position of each crankshaft journal lower bearing so that it can be reinstalled in its original place.

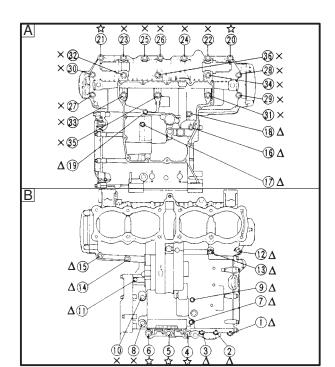

EAS00399

#### **CHECKING THE CRANKCASE**

- 1. Throughly wash the crankcase halves in a mild solvent.
- 2. Thoroughly clean all the gasket surfaces and crankcase mating surfaces.
- 3. Check:
  - **C**rankcase
    - Cracks/damage → Replace.
  - @il delivery passages
  - Obstruction → Blow out with compressed air.

FAS00412

#### **ASSEMBLING THE CRANKCASE**

- 1. Lubricate:
  - ©rankshaft journal bearings (with the recommended lubricant)



#### Recommended lubricant Engine oil

- 2. Apply:
  - **sealant**

(onto the crankcase mating surfaces)



Yamaha bond No. 1215 90890-85505

#### NOTE: -

Do not allow any sealant to come into contact with the oil gallery or crankshaft journal bearings. Do not apply sealant to within 2  $\sim$  3 mm of the crankshaft journal bearings.




**dowel** pin

4. Install:

©rankshaft journal lower bearings (into the lower crankcase)


#### NOTE:


- Align the projections (a) on the crankshaft journal lower bearings with the notches (b) in the crankcase.
- Onstall each crankshaft journal lower bearing in its original place.

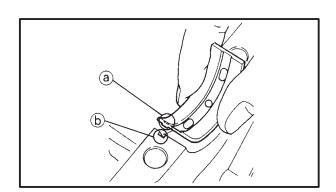






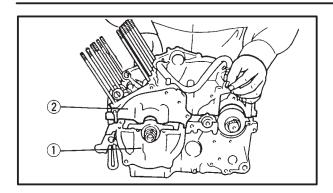

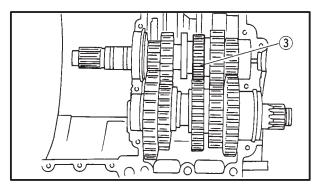

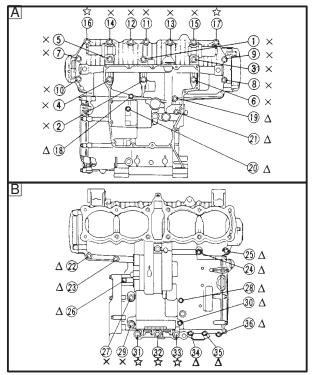

- 5. Set the shift drum assembly and transmission gears in the neutral position.
- 6. Install:

Oower crankcase (1) (onto the upper crankcase (2))

#### **CAUTION:**

Before tightening the crankcase bolts, make sure that the transmission gears shift correctly when the shift drum assembly is turned by hand.

#### NOTE: -

- Carefully position the shift forks so that they mesh smoothly with the transmission gears.
- Mesh shift fork center with the 2nd pinion gear 3 on the main axle.

#### 7. Install:

Ower crankcase bolts
Opper crankcase bolts

#### NOTF:

Tighten the bolts in the tightening sequence cast on the crankcase.

- A Upper crankcase
- B Lower crankcase



- ★ M10 bolt (16, 17, 31 ~ 33): 35 Nm (3.5 m (kg)
- × M8 bolt (① ~ ⑤, ②, ②): 24 Nm (2.4 m⋅kg)
- $\triangle$  M6 bolt ( $(18 \sim 26, 28, 30, 34 \sim 36)$ ): 12 Nm (1.2 m(kg)
- 8. Install:


**clutch** cover



Clutch cover bolt 10 Nm (1.0 m⋅ g)




# STARTER CLUTCH

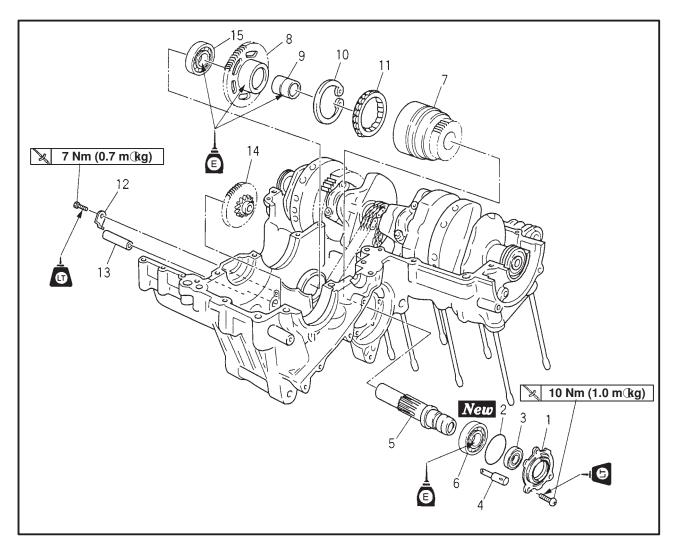

Order	Job/Part	Q'ty	Remarks
	Removing the starter clutch		Remove the parts in the order listed.
	Crankcase		Refer to "CRANKCASE".
1	Bearing housing	1	
2	O-ring	1	
3	Oil seal	1	
4	Nozzle	1	
5	Generator shaft	1	
6	Bearing	1	
7	Starter clutch drive gear	1	Refer to "INSTALLING THE STARTER
			CLUTCH".
8	Starter clutch gear	1	
9	Collar	1	
10	Circlip	1 -	Refer to "INSTALLING THE STARTER
11	Starter clutch roller	1 -	└ CLUTCH".
12	Stopper plate	1	




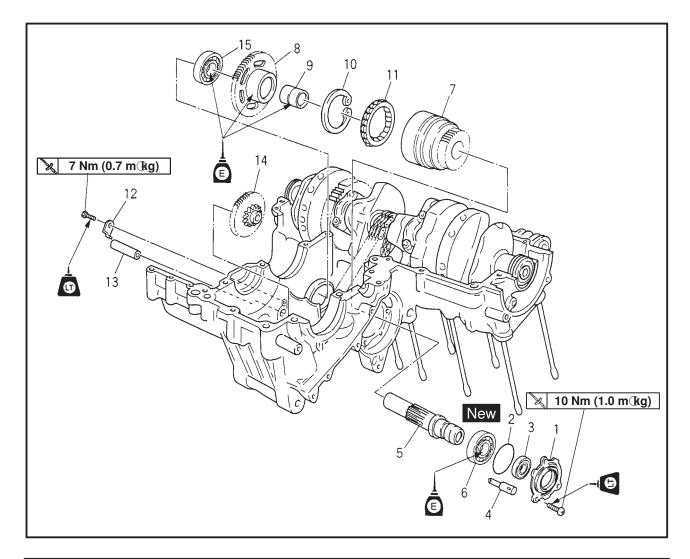


Order	Job/Part	Q'ty	Remarks
13 14 15	Idle gear shaft Starter clutch idle gear Bearing	1 1 1	For installation, reverse the removal procedure.

#### STARTER CLUTCH



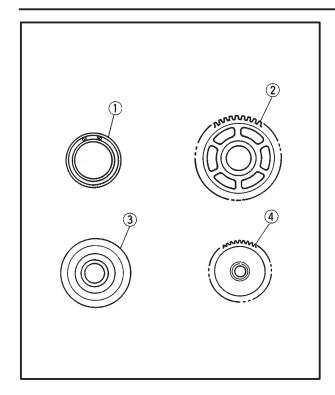

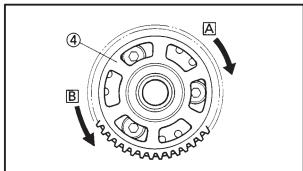

EAS00350

#### CHECKINHG THE STARTER CLUTCH

1. Check:

starter clutch rollers ①
Damage/wear → Replace.

2. Check:

starter clutch idle gear 2

starter clutch drive gear 3

starter clutch gear 4

Burrs/chips/roughness/wear → Replace the defective part(-s).

3. Check:

Starter clutch gear's contacting surfaces Damage/pitting/wear → Replace the starter clutch gear.

4. Check:

**starter** clutch operation

\*\*\*\*\*\*\*\*

a. Install the starter clutch gear 4 onto the starter clutch and hold the starter clutch.

- b. When turning the starter clutch drive gear clockwise A, the starter clutch and the starter clutch drive gear should engage. If the starter clutch drive gear and starter clutch do not engage, the starter clutch is faulty and must be replaced.
- c. When turning the starter clutch drive gear counterclockwise B, it should turn freely. If the starter clutch drive gear does not turn freely, the starter clutch is faulty and must be replaced.


\_\_\_\_\_

5. Check:

Starter clutch shaft
Bends/damage/wear → Replace.

#### STARTER CLUTCH



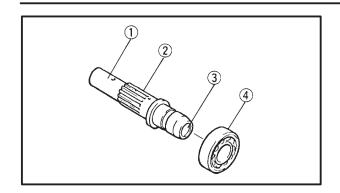

EAS00352

#### **CHECKING THE GENERATOR SHAFT**

1. Check:

generator shaft 1

generator shaft splines 2


Damage/wear → Replace the generator shaft.


(il passages (3)

 $Dirt/obstruction \rightarrow Wash the generator shaft and then blow out the oil passages with compressed air.$ 

(bearing 4)

Rough movement → Replace.

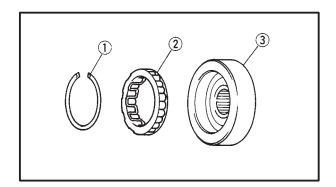

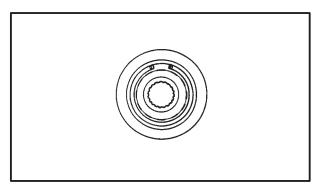

# INSTALLING THE STARTER CLUTCH ROLLER

1. Install:

@irclip (1)


starter clutch roller 2

starter clutch drive gear 3

#### **CAUTION:**

Be sure to install the starter clutch roller to the starter clutch drive gear so that the circlip is outside. EAS0038


# CRANKSHAFT CRANKSHAFT

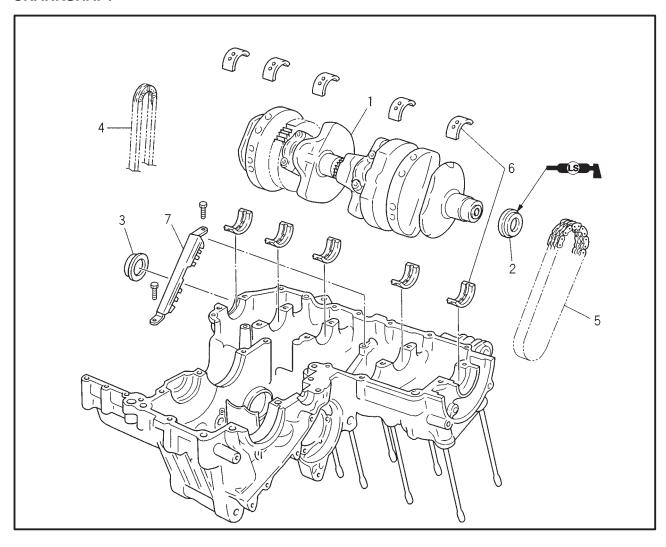

Order	Job/Part	Q'ty	Remarks
1 2 3 4 5 6	Removing the crankshaft assembly Crankcase Starter clutch Crankshaft Oil seal Cover Timing chain HY-VO chain Crankshaft journal bearings HY-VO chain guide	1 - 1 1 1 1 - 10	Remove the parts in the order listed. Refer to "CRANKCASE". Refer to "STARTER CLUTCH".  Refer to "INSTALLING THE CRANKSHAFT ASSEMBLY".  Refer to "REMOVING/INSTALLING THE CRANKSHAFT ASSEMBLY".  For installation, reverse the removal procedure.




## **CONNECTING ROD**

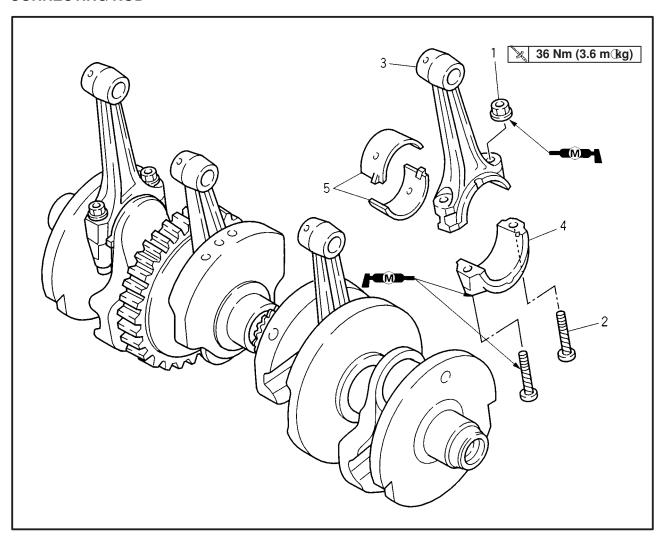



Order	Job/Part	Q'ty	Remarks
1 2 3 4 5	Removing the connecting rod.  Nut Connecting rod bolt Coonecting rod Connecting rod cap Connecting rod bearing		Remove the parts in the order listed Refer to "INSTALLING THE CONNEECTING RODS."  Refer to "REMOVING/INSTALLING THE CONNECTING RODS."  For installation, reverse the removal procedur.

#### **CRANKSHAFT**



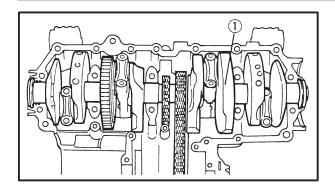

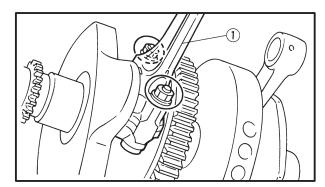

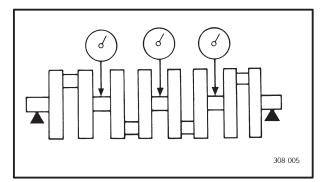

EAS00387

#### REMOVING THE CRANKSHAFT ASSEMBLY

- 1. Remove:
- ©rankshaft assembly ①
- ©rankshaft journal upper bearings (from the upper crankcase)

NOTE: -

Identify the position of each crankshaft journal upper bearing so that it can be reinstalled in its original place.

EAS00391

#### REMOVING THE CONNECTING RODS

- 1. Remove:
  - ©onnecting rods (1)
  - **big end bearings**

NOTE: -

Identify the position of each big end bearing so that it can be reinstalled in its original place.

EAS00395

# CHECKING THE CRANKSHAFT AND CONNECTING RODS

- 1. Measure:
- **©**rankshaft runout

Out of specification → Replace the crank-shaft.



Crankshaft runout Less than 0.02 mm

- 2. Check:
  - ©rankshaft journal surfaces
  - **©**rankshaft pin surfaces
  - **Dearing** surfaces
  - Scratches/wear → Replace the crankshaft.
- 3. Measure:
  - ©rankshaft-journal-to-crankshaft-journalbearing clearance
  - Out of specification → Replace the crankshaft journal bearings.




Crankshaft-journal to crankshaft-journal-bearing clearance  $0.030 \times 0.064 \text{ mm}$ 


#### **CAUTION:**


Do not interchange the crankshaft journal bearings. To obtain the correct crankshaft-journal-to-crankshaft-journal-bearing clearance and prevent engine damage, the crankshaft journal bearings must be installed in their original positions.







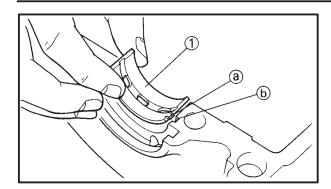

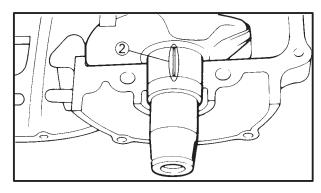

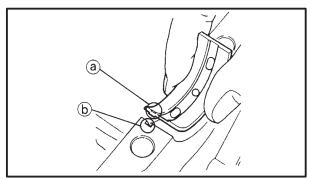

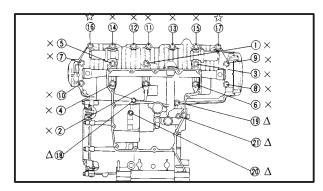

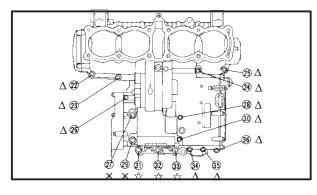

- a. Clean the crankshaft journal bearings, crankshaft journals, and bearing portions of the crankcase.
- b. Place the upper crankcase upside down on a bench.
- c. Install the crankshaft journal upper bearings

  (1) and the crankshaft into the upper crankcase.

#### NOTE: -

Align the projections ⓐ of the crankshaft journal upper bearings with the notches ⓑ in the crankcase.

d. Put a piece of Plastigauge<sup>®</sup> ② on each crankshaft journal.

#### NOTE: -

Do not put the Plastigauge<sup>®</sup> over the oil hole in the crankshaft journal.

e. Install the crankshaft journal lower bearings into the lower crankcase and assemble the crankcase halves.

## NOTE: -

- Align the projections (a) of the crankshaft journal lower bearings with the notches (b) in the crankcase.
- Do not move the crankshaft until the clearance measurement has been completed.
- f. Tighten the bolts to specification in the tightening sequence cast on the crankcase.



# Crankcase bolt

★ M10 (No.16, 17, 31 ~ 33):
35 Nm (3.5 m kg)
× M8 (No.1 ~ 15, 27, 29):
24 Nm (2.4 m kg)
Δ M6 (No.18 ~ 26, 28, 30, 34 ~ 36):
12 Nm (1.2 m kg)


- A Upper crankcase
- B Lower crankcase

#### NOTE:


Lubricate the crankcase bolt threads (M8) with engine oil.





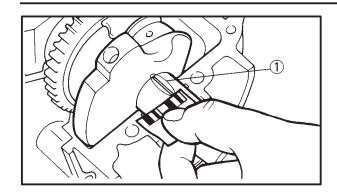



- g. Remove the lower crankcase and the crankshaft journal lower bearings.
- h. Measure the compressed Plastigauge® width 1 on each crankshaft journal. If the clearance is out of specification, select replacement crankshaft journal bearings.

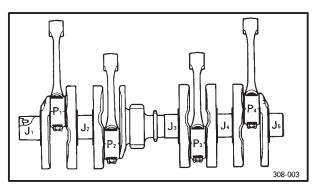


# 4. Select:

 $\bigcirc$ rankshaft journal bearings (J<sub>1</sub> ~ J<sub>5</sub>)

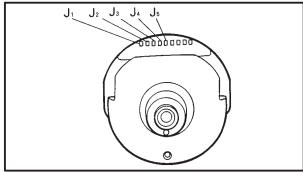

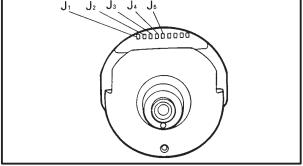

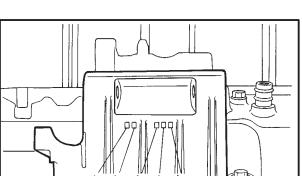

For example, if the crankcase "J<sub>1</sub>" and crankshaft web "J<sub>1</sub>" numbers are "6" and "2" respectively, then the bearing size for "J<sub>1</sub>" is:

# Bearing size for $J_1$ :

 $J_1$  (crankcase) –  $J_1$  (crankshaft web) = 6 - 2 = 4 (green)

CRANKSHAFT JOUF (COLOR CODE)	RNAL BEARING
1	Blue
2	Black
3	Brown
4	Green
5	Yellow

#### 5. Measure:

@rankshaft-pin-to-big-end-bearing clear-

Out of specification → Replace the big end bearings.




Crankshaft-pin-to-big-end-bearing clearance


 $0.017 \sim 0.040 \text{ mm}$ <Limit: 0.08 mm>


The following procedure applies to all of the connecting rods.





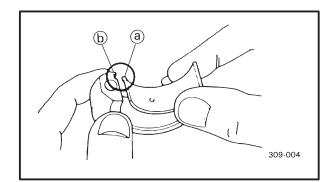

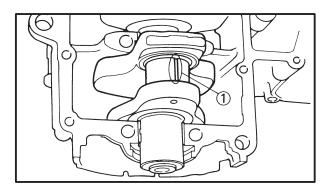

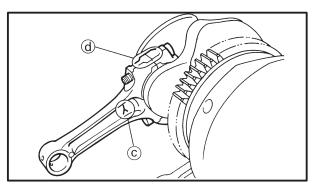

# **CAUTION:**

Do not interchange the big end bearings and connecting rods. To obtain the correct crank-shaft-pin-to-big-end-bearing clearance and prevent engine damage, the big end bearings must be installed in their original positions.

- a. Clean the big end bearings, crankshaft pins, and bearing portions of the connecting rods.
- b. Install the big end upper bearing into the connecting rod and the big end lower bearing into the connecting rod cap.

#### NOTE: -

Align the projections (a) on the big end bearings with the notches (b) in the connecting rod and connecting rod cap.

- c. Put a piece of Plastigauge<sup>®</sup> ① on the crankshaft pin.
- d. Assemble the connecting rod halves.

#### NOTE


- Do not move the connecting rod or crankshaft until the clearance measurement has been completed.
- Apply molybdenum disulfide grease onto the bolts, threads, and nuts seats.
- Make sure that the "Y" mark © on the connecting rod faces towards the left side of the crankshaft.
- Make sure that the characters d on both the connecting rod and connecting rod cap are aligned.
- e. Tighten the connecting rod nuts.


# **CAUTION:**


- When tightening the connecting rod nuts, be sure to use an F-type torque wrench.
- Without pausing, tighten the connecting rod nuts to the specified torque. Apply continuous torque between 2.0 and 3.6 m/kg. Once you reach 2.0 m/kg, DO NOT STOP TIGHTENING until the specified torque is reached. If the tightening is interrupted between 2.0 and 3.6 m/kg, loosen the connecting rod nut to less than 2.0 m/kg and start again.





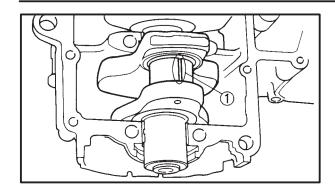

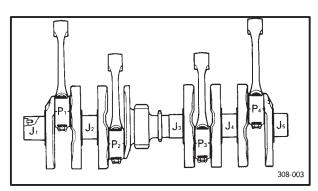

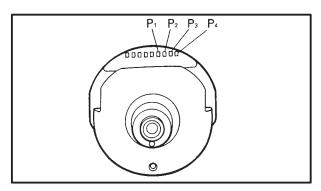

Refer to "INSTALLING THE CONNECTING RODS".



# Connecting rod nut 36 Nm (3.6 m/kg)

- f. Remove the connecting rod and big end bearings.
   Refer to "REMOVING THE CONNECTING
- RODS".
  g. Measure the compressed Plastigauge®
- width ① on the crankshaft pin.

  If the clearance is out of specification, select replacement big end bearings.
- 6. Select: big end bearings  $(P_1 \sim P_4)$

#### NOTE

- The numbers stamped into the crankshaft web and the numbers on the connecting rods are used to determine the replacement big end bearing sizes.
- C'P1" ~ "P4" refer to the bearings shown in the crankshaft illustration.

For example, if the connecting rod " $P_1$ " and the crankshaft web " $P_1$ " numbers are "4" and "1" respectively, then the bearing size for " $P_1$ " is:

Bearing size for "P<sub>1</sub>":


"P<sub>1</sub>" (connecting rod) – "P<sub>1</sub>"


(crak-kshaft) =4 – 1 = 3 (brown)

BIG END BEARING COLOR CODE		
1 Blue		
2	Black	
3	Brown	
4	Green	





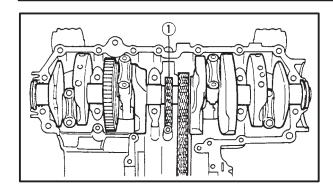

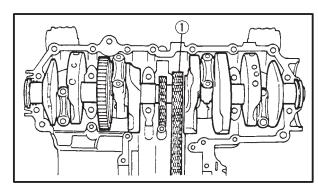

# **CHECKING THE TIMING CHAIN**

- 1. Check:
- Timing chain 1

Damage/stiffness → Replace the timing chain and camshaft sprockets as a set.

- 2. Check
  - Climing chain guide (intake side)
    Damage/wear → Replace.

FAS00400

#### **CHECKING THE HY-VO CHAIN**

- 1. Check:
- (HY-VO chain (1)

Damage/stiffness → Replace the HY-VO chain and sprockets as a set.

- 2. Check:
  - HY-VO chain guide Damage/wear → Replace.

EAS00401

# CHECKING THE BEARINGS AND OIL SEALS

- 1. Check:
  - **Dearings**

Clean and lubricate the bearings, then rotate the inner race with your finger

Rough movement → Replace.

- 2. Check:
  - **oil** seals

Damage/wear → Replace.

EAS00402

## **CHECKING THE CIRCLIPS AND WASHERS**

- 1. Check:
  - **Circlips**

Bends/damage/looseness → Replace.

**Washers** 

Bends/damage → Replace.

EAS00403

# **INSTALLING THE CONNECTING RODS**

- 1. Lubricate:
  - **Poolt** threads
  - Onut seats

(with the recommended lubricant)




Recommended lubricant Molybdenum disulfide grease

- 2. Lubricate:
  - **©**rankshaft pins
  - **Dig end bearings**
  - ©onnecting rod inner surface (with the recommended lubricant)





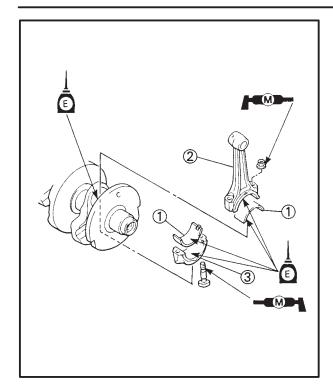



# Recommended lubricant Engine oil

#### 3. Install:

big end bearings 1

©onnecting rods ②

©onnecting rod caps ③

(onto the crankshaft pins)


#### NOTE:


Align the projections on the big end bearings with the notches in the connecting rods and connecting rod caps.

Be sure to reinstall each big end bearing in its original place.

Make sure that the "Y" marks (a) on the connecting rods face towards the left side of the crankshaft.

Make sure that the characters **(b)** on both the connecting rod and connecting rod cap are aligned.

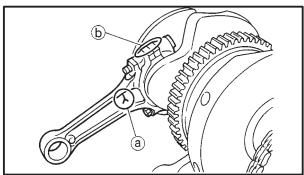

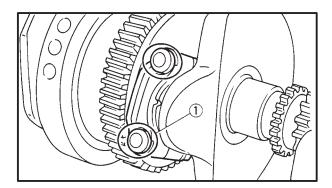

- 4. Align:
  - (with the connecting rod caps)
- 5. Tighten:

**Connecting rod nuts** 




Connecting rod nuts 36 Nm (3.6 m/kg)


# **CAUTION:**

When tightening the connecting rod nuts, be sure to use an F-type torque wrench.

Without pausing, tighten the connecting rod nuts to the specified torque. Apply continuous torque between 2.0 and 3.6 m/kg. Once you reach 2.0 m/kg DO NOT STOP TIGHTENING unit! the specified torque is reached. If the tightening is interrupted between 2.0 and 3.6 m/kg, loosen the connecting rod nut to less than 2.0 m/kg and start again.



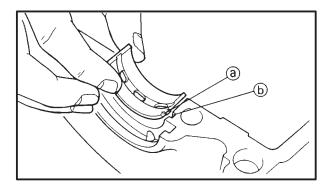

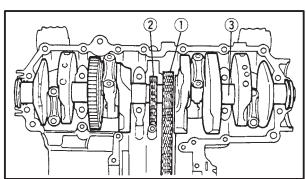

EAS00407

# **INSTALLING THE CRANKSHAFT**

1. Install:

©rankshaft journal upper bearings (into the upper crankcase)

NOTE:

Align the projections (a) on the crankshaft journal upper bearings with the notches (b) in the crankcase.

Be sure to install each crankshaft journal upper bearing in its original place.

2. Install:

①HY-VO chain ①

Jiming chain 2

(onto the crankshaft sprocket)


©rankshaft assembly ③

NOTE: -

Pass the timing chain through the timing chain cavity.


To prevent the timing chain from falling into the crankcase, fasten it with a wire.



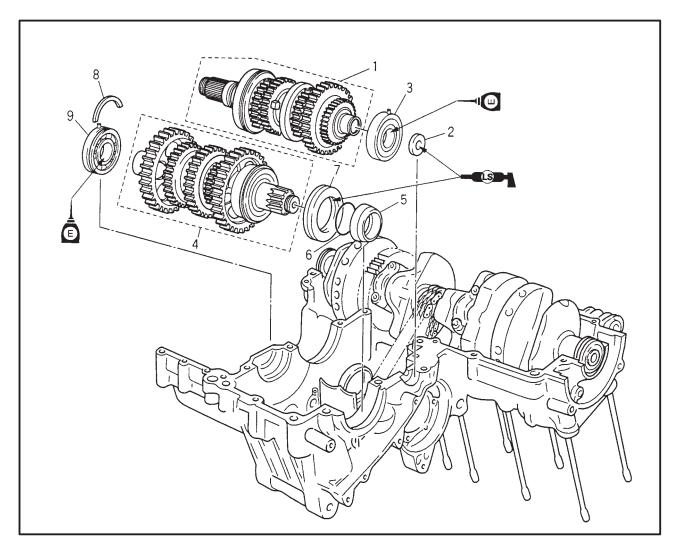


Order	Job/Part	Q'ty	Remarks
1 2	Removing the transmission, shift drum assembly, and shift forks. Crankcase Main axle assembly Oil seal	1 -	Remove the parts in the order listed.  Refer to "CRANKCASE".
3 4 5 6 7 8 9	Bearing Drive axle assembly Collar O-ring Oil seal Circlip Bearing	1 1 1 1 1 1 1 1	Refer to "INSTALLING THE TRANSMIS-SION".
			For installation, reverse the removal procedure.



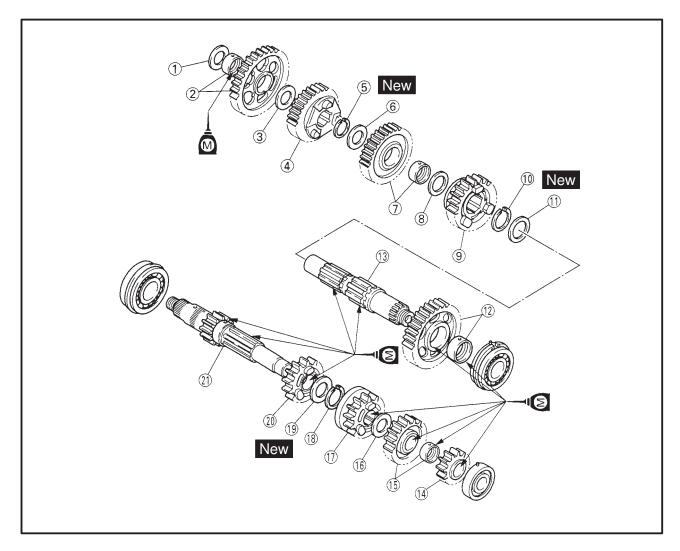


Order	Job/Part	Q'ty	Remarks
1234567899123	Disassembling the transmission Washer 1st wheel gear/Collar Washer 4th wheel gear Circlip Washer 3rd wheel gear/collar Washer 5th wheel gear Circlip Washer 2nd wheel gear/collar Drive axle	1 1/1 1 1 1 1/1 1 1 1/1 1	Disassembly the parts in the order listed.



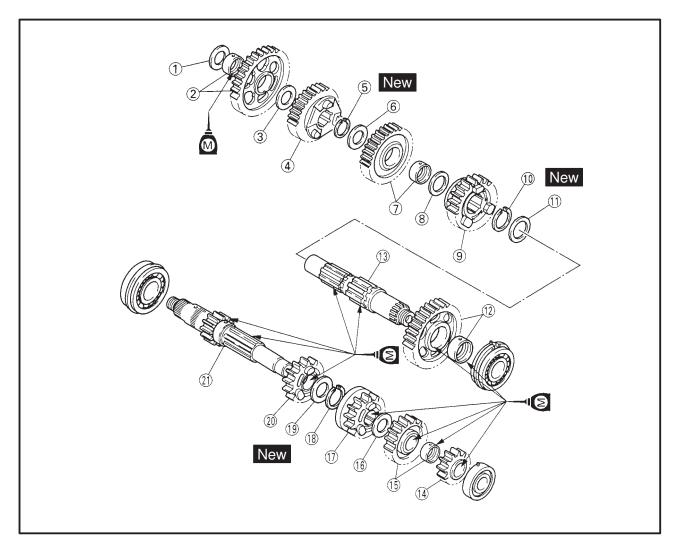


Order	Job/Part	Q'ty	Remarks
(4) (5) (6) (7) (8) (9) (2)	2nd pinion gear 5th pinion gear/collar Washer 3rd pinion gear Circlip Washer 4th pinion gear Main axle (1st pinion gear)	1 1/1 1 1 1 1 1	For assembly, reverse the disassembly procedure.

# SHIFT CAM AND SHIFT FORK

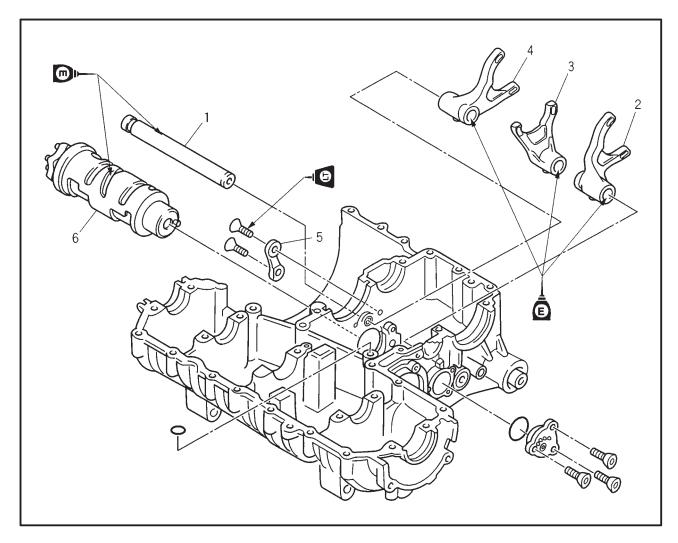

Order	Job/Part	Q'ty	Remarks
1 2 3 4 5 6	Removing the shift cam and shift fork. Crankcase Shif fork quide bar Shift fork (L) Shift fork (C) Shift fork (R) Stopper plate Shift drum	1 - 1 - 1 - 1 - 1	Remove the parts in the order listed. Refer to "CRANKCASE"  Refer to "INSTALLING THE TRANSMISSION  For installation, reverse the removal
			produre.



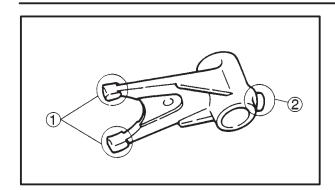

EAS00421

## **CHECKING THE SHIFT FORKS**

The following procedure applies to all of the shift forks and related components.

- 1. Check:
  - shift fork cam follower 1
  - shift fork pawl 2

Bends/damage/scoring/wear → Replace the shift fork.

- 2. Check:
  - shift fork guide bar

Roll the shift fork guide bar on a flat surface. Bends → Replace.



Do not attempt to straighten a bent shift fork guide bar.

- 3. Check:
  - \$hift fork movement

(on the shift fork guide bar)

Rough movement → Replace the shift forks and shift fork guide bar as a set.

#### **CHECKING THE SHIFT DRUM ASSEMBLY**

- 1. Check:
  - Shift drum grooves

Damage/scratches/wear → Replace the shift drum.

(shift drum segment (1)

Damage/wear → Replace.

- (3) shift drum bearing (2)
- Damage/pitting → Replace.




#### **CHECKING THE TRANSMISSION**


- 1. Measure:
  - main axle runout

(with a centering device and dial gauge 1) Out of specification -> Replace the main axle.




Main axle runout limit 0.06 mm

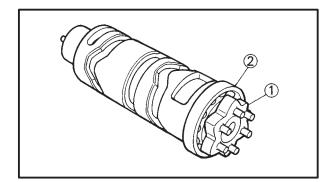


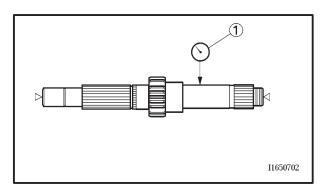








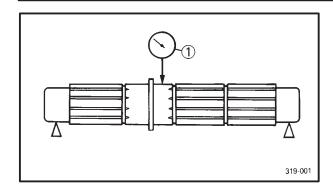

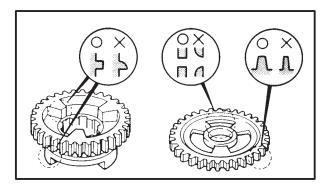

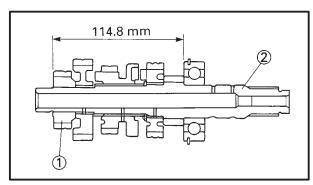

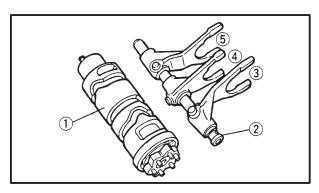

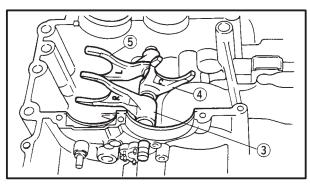

#### 2. Measure:

drive axle runout

(with a centering device and dial gauge 1) Out of specification  $\rightarrow$  Replace the drive axle.



# Drive axle runout limit 0.06 mm

#### 3. Check:

**Oransmission** gears

Blue discoloration/pitting/wear  $\rightarrow$  Replace the defective gear(-s).

Transmission gear dogs

Cracks/damage/rounded edges  $\rightarrow$  Replace the defective gear(-s).

#### 4. Check:

**Oransmission** gear engagement

(each pinion gear to its respective wheel gear)

Incorrect  $\rightarrow$  Reassemble the transmission axle assemblies.

#### NOTE: -

When reassembling the main axle, press the 2nd pinion gear ① onto it ② as shown.

#### 5. Check:

**Oransmission** gear movement

Rough movement  $\rightarrow$  Replace the defective part(-s).

## 6. Check:

**Circlips** 

Damage/bends/looseness → Replace.

#### EAS00426

# INSTALLING THE SHIFT FORKS AND SHIFT DRUM ASSEMBLY

#### 1. Install:

shift drum aseembly 1

shift fork guide bars 2

shift fork "R" 3


shift fork "C" 4


shift fork "L" (5)


#### NOTE: -

The embossed marks on the shift forks should face towards the right side of the engine and be in the following sequence: "R", "C", "L".



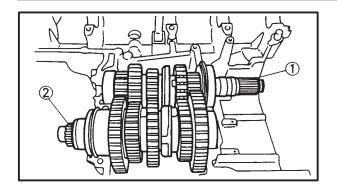

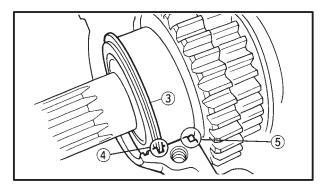

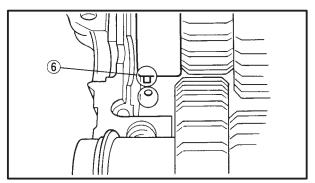

EAS00429

## **INSTALLING THE TRANSMISSION**

1. Install:

Onain axle assembly 1

Odrive axle assembly 2

NOTE:

Make sure that the drive axle bearing circlips
3 are inserted into the grooves 4 in the upper crankcase.

The drive axle bearing pin ⑤ must face towards the rear of the crankcase and the main axle bearing pin ⑥ must face towards the front of the crankcase.


2. Check:

**Oransmission** 

Rough movement → Repair.

NOTF:

Oil each gear, shaft, and bearing thoroughly.

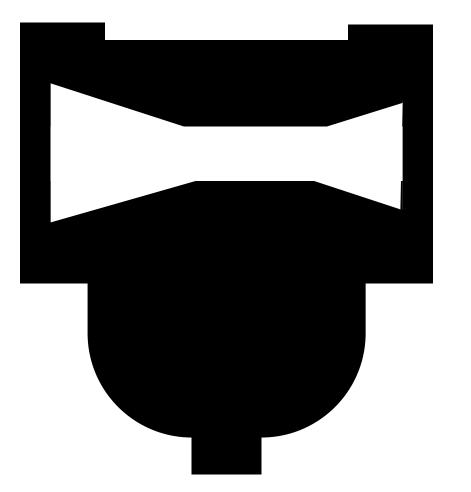

# CARB



# CHAPTER 5. CARBURETORS


CARBURETORS	5-1
CHECKING THE CARBURETORS	5-4
ASSEMBLING THE CARBURETORS	5-5
INSTALLING THE CARBURETORS	5-7
MEASURING AND ADJUSTING THE FUEL LEVEL	5-7
CHECKING AND ADJUSTING THE THROTTLE POSITION	
SENSOR	5-8
CHECKING THE FUEL COCK	5-10
CHECKING THE FUEL COCK OPERATION	5-10




EAS00481

# **CARBURETORS**

# **CARBURETORS**

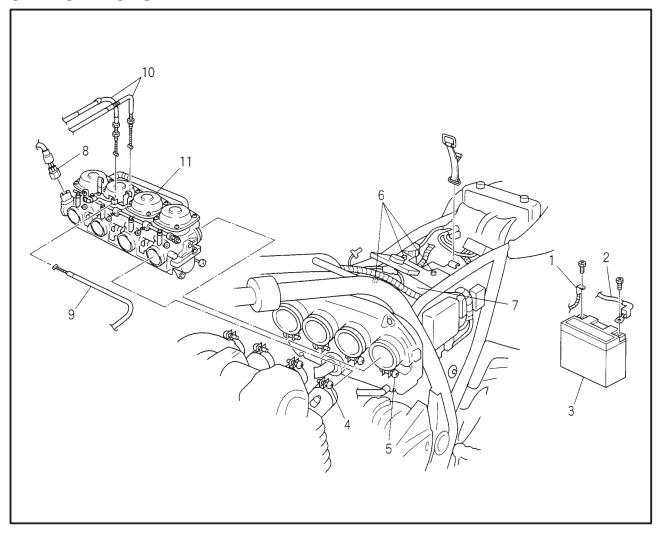


Order	Job/Part	Q'ty	Remarks
	Removing the carburetors Seat, fuel tank		Remove the parts in the order listed. Refer to "SEAT, SIDE COVER AND FUEL TANK" in Chapter 3.
1	Battery negative lead	1	·
2	Battery positive lead	1	
3	Battery	1	
4	Carburetor joint screws	4	Loosen
5	Air filter joint screws	4	Loosen
6	Bolts	3	Loosen
7	Air filter case	1	Move to rear ward
8	Throttle position sensor lead	1	Disconnect
9	Starter cable	1	
10	Throttle cables	2	
11	Carburetors	1	
			For installation, reverse the removal procedure.

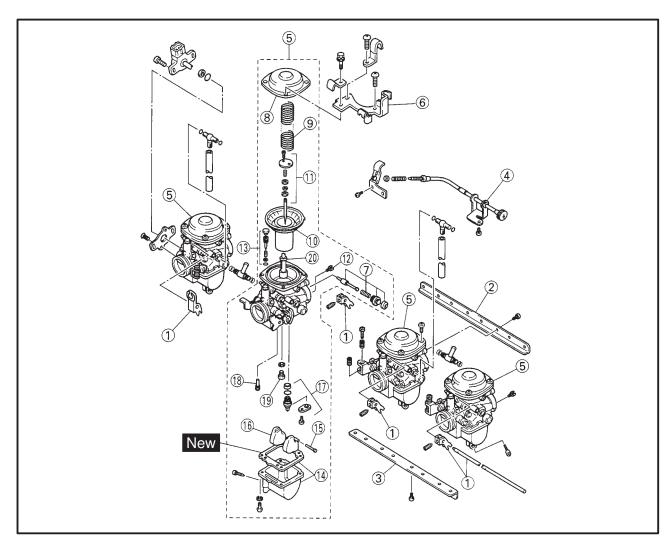

Order	Job/Part	Q'ty	Remarks
1) 2)	Disassembling the carburetor Starter shaft/Starter levers Upper bracket	1/4	NOTE:  The following procedure applies to all of the carburetors.
3456899123	Lower bracket Throttle stop screw set Carburetors Throttle cable bracket Starter plunger set Vacuum chamber cover Piston valve spring Piston valve Jet needle Pilot air jet Pilot screw	1 1 4 1 1 1 1 1 1 1	Refer to "ASSEMBLING THE CARBURE-TORS".

EAS00484

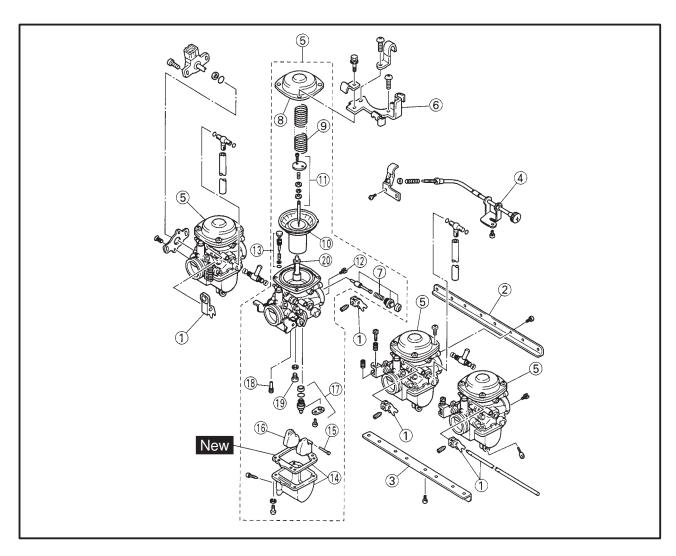

Order	Job/Part	Q'ty	Remarks
(4) (5) (6) (7) (8) (9) (9)	Float chamber Float chamber gasket Float pin Float Needle valve ass'y Pilot jet Main jet Needle jet	1/1 -	Refer to "ASSEMBLING THE CARBURE-TORS".
			For assembly, reverse the disassembly procedure.




EAS00486


## **CHECKING THE CARBURETORS**

The following procedure applies to all of the carburetors.


- 1. Check:
  - **©**arburetor body
  - **Hoat chamber**
  - Oet housing
  - Cracks/damage → Replace.
- 2. Check:
  - **Juel passages** 
    - Obstruction → Clean.

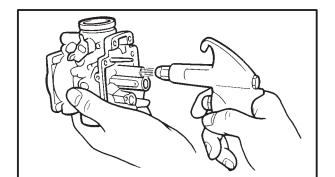


- Wash the carburetor in a petroleum-based solvent. Do not use any caustic-carburetorcleaning solution.
- b. Blow out all of the passages and jets with compressed air.

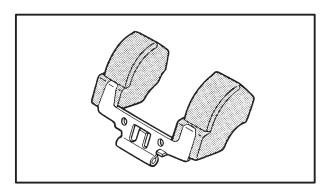


- 3. Check:
- **float chamber body** 
  - Dirt  $\rightarrow$  Clean.
- 4. Check:
  - Of the distribution of
- 5. Check:
  - **Hoat** 
    - Damage → Replace.

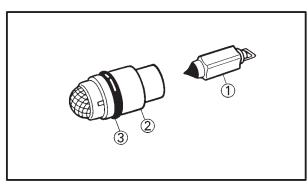

- 6. Check:
  - needle valve 1
  - needle valve seat (2)
  - Damage/obstruction/wear  $\rightarrow$  Replace the needle valve, needle valve seat and O-ring as a set.
- 7. Check:
  - **O**-ring **3** 
    - Damage/wear → Replace the needle valve, needle valve seat and O-ring as a set.
- 8. Check:
  - piston valve
  - Damage/scratches/wear→ Replace.
  - Oubber diaphragm
  - Cracks/tears → Replace.
- 9. Check:
  - Ovacuum chamber cover
  - piston valve spring
  - Oet needle holder
  - Cracks/damage → Replace.

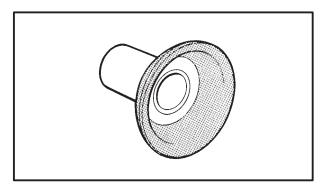



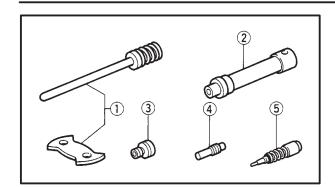

10. Check:

Oet needle kit 1

needle jet 2

Omain jet 3

pilot jet 4

pilot screw (5)

Bends/damage/wear → Replace.

Obstruction  $\rightarrow$  Clean.

Blow out the jets with compressed air.

11. Check:

**piston** valve movement

Insert the piston valve into the carburetor body and move it up and down.

Tightness  $\rightarrow$  Replace the piston valve.

12. Check:

**Juel feed pipes** 

hose joint

Cracks/damage → Replace.

Obstruction → Clean.

Blow out the pipes with compressed air.

13. Check:

(fuel feed hoses

**(fuel hoses** 

Cracks/damage/wear → Replace.

Obstruction → Clean.

Blow out the hoses with compressed air.

EAS0048


#### **ASSEMBLING THE CARBURETORS**

The following procedure applies to both of the carburetors.

## **CAUTION:**

Before assembling the carburetors, wash all of the parts in a petroleum-based solvent.

Always use a new gasket.

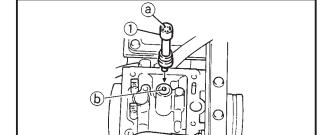

1. Install:

needle jet 1


pilot jet

Omain jet

NOTE

Align the slot ⓐ on the needle jet with the projection ⓑ on the carburetor body.



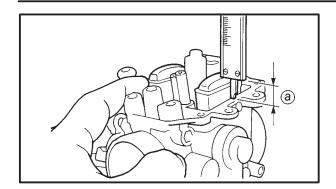

EAS00489

2. Measure:

float height (a)

Out of specification → Adjust.



Float height


 $21.3 \times 23.3 \text{ mm}$ 




Measure the distance from the mating surface of the float chamber (with the gasket removed) to the top of the float.

#### NOTE:

The float arm should rest on the needle valve without depressing it.

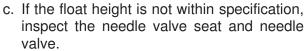

- d. If either the needle valve seat or needle valve is worn, replace them both.
- e. If both the needle valve seat and needle valve are fine, adjust the float height by bending the float tang ①.
- f. Check the float height again.

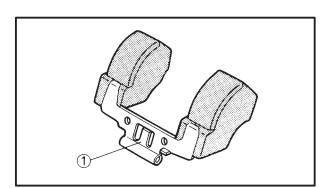

3. Install:

piston valve

piston valve spring

Ovacuum chamber cover

4. Install:

©onnecting bracket

#### NOTE

After installing the connecting bracket, check that the throttle cable lever and starter plunger link operate smoothly.



EAS00493

#### **INSTALLING THE CARBURETORS**

1. Adjust:

©arburetor synchronization Refer to "SYNCHRONIZING THE CARBU-RETORS" in chapter 3.

2. Adjust:

**engine** idling speed



Engine idling speed  $1,000 \times 1,100 \text{ r/min}$ 

Refer to "ADJUSTING THE ENGINE IDLING SPEED" in chapter 3.

3. Adjust:

Throttle cable free play



Throttle cable free play (at the flange of the throttle grip)

 $3 \times 5 \text{ mm}$ 

Refer to "ADJUSTING THE THROTTLE CABLE FREE PLAY" in chapter 3.

EAS0049

# MEASURING AND ADJUSTING THE FUEL LEVEL

1. Measure:

(Juel level (a)

Out of specification  $\rightarrow$  Adjust.



Fuel level (below the line on the float chamber)

 $3.5 \times 4.5 \text{ mm}$ 

- a. Stand the motorcycle on a level surface.
- b. Place the motorcycle on a suitable stand to ensure that the motorcycle is standing straight up.
- c. Install the fuel level gauge ① to the fuel drain pipe ②.



# Fuel level gauge 90890-01312

- d. Loosen the fuel drain screw 3.
- e. Hold the fuel level gauge vertically next to the line on the float chamber
- f. Measure the fuel level (a).

NOTE:


Fuel level readings should be equal on both sides of the carburetor assembly.

2. Adjust:

Ctuel level





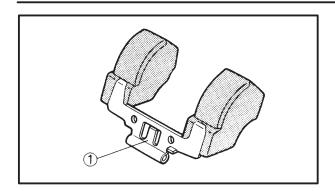

- a. Remove the carburetor assembly.
- b. Check the needle valve seat and needle valve.
- c. If either is worn, replace them as a set.
- d. If both are fine, adjust the float level by slightly bending the float tang 1.
- e. Install the carburetor assembly.
- f. Measure the fuel level again.
- g. Repeat steps (a) to (f) until the fuel level is within specification.

# CHECKING AND ADJUSTING THE THROTTLE **POSITION SENSOR**

NOTE: -

- Before adjusting the throttle position sensor, the engine idling speed should be properly ad-
- When installing the throttle position sensor, adjust its angle according to the r/min which are displayed on the tachometer.

Refer to the adjustment procedure below.



Throttle position sensor

- a. Disconnect the throttle position sensor coupler.
- b. Remove the throttle position sensor from the carburetor.
- c. Connect the pocket tester ( $\Omega \times 1$ k) to the throttle position sensor.

Tester positive lead → Blue terminal Tester negative lead → Black/Blue terminal (2)

d. Check the throttle position sensor maximum resistance.

Out of specification → Replace the throttle position sensor.





Throttle position sensor maximum resistance  $4.0 \sim 6.0 \text{ k}\Omega$  at 20°C (68°F) (Blue – Black/Blue)

- e. Install the throttle position sensor onto the carburetor.
- f. Connect the pocket tester ( $\Omega \times 1$ k) to the throttle position sensor.

Tester positive lead → Yellow ① Tester negative lead → Black/Blue ②

g. While slowly opening the throttle, check that the throttle position sensor resistance is within the specified range.

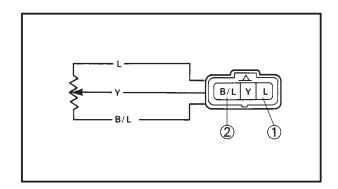

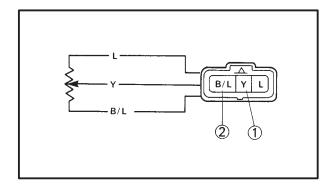



Out of specification  $\rightarrow$  Replace the throttle position sensor.



Throttle position sensor resistance 0 to 4  $\times$  6 k $\Omega$  at 20°C (68°F) (Yellow – Black/Blue)

2. Adjust:

Throttle position sensor angle

- a. Turn the main switch to "ON".
- b. Disconnect the throttle position sensor coupler.

c. Reconnect the throttle position sensor coupler.



After reconnecting the throttle position sensor coupler, the tachometer switches to the throttle position sensor adjustment mode.

- d. Loosen the throttle position sensor screws (1).
- e. Adjust the throttle position sensor angle according to the following table:

#### NOTE

The angle of the throttle position sensor is indicated by the r/min which are displayed on the tachometer.



Tachometer reading
Throttle position sensor angle

1,000 r/min 1

Too small 5,000 r/min(2)

Correct


10,000 r/min(3)


Too large

f. After adjusting the throttle position sensor angle, tighten the throttle position sensor screws.

#### **NOTE**

To exit the throttle position sensor adjustment mode, start the engine or turn the main switch to "OFF".

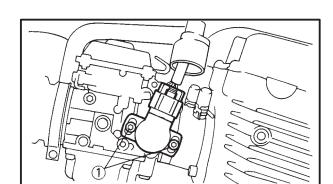

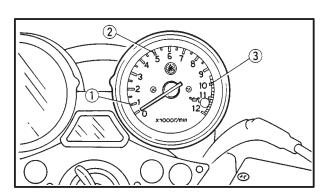





EAS00505

# **CHECKING THE FUEL COCK**

1. Check:

**Juel cock** 

 $Cracks/damage/wear \rightarrow Replace.$ 

EAS00506

# **CHECKING THE FUEL COCK OPERATION**

NOTE:

After installing the fuel cock, check its operation.


- 1. Check that the fuel cock lever is positioned to "ON" or "R".
- 2. Place a container under the end of the fuel hose.

\*\*\*\*\*\*\*\*\*\*

3. Check: 
fuel cock operation

a. Suck on the end of the vacuum hose.

Fuel flows → Fuel cock is OK Fuel does not flows → Replace the fuel cock.

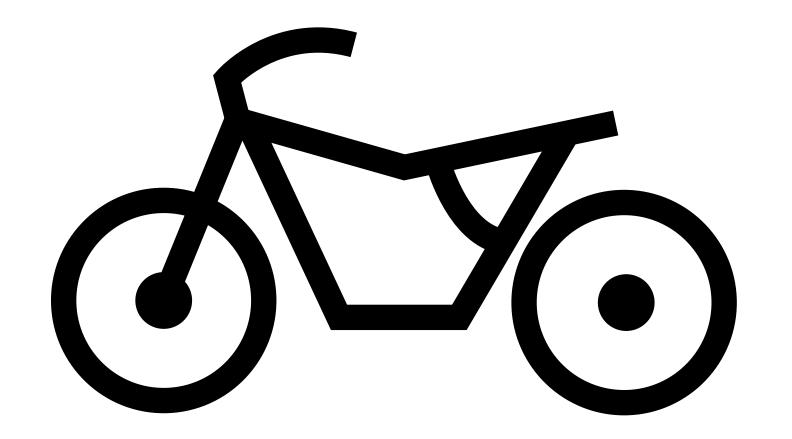


CHAS





# CHAPTER 6. CHASSIS


FRONT WHEEL AND BRAKE DISCS	. 6-1
REMOVING THE FRONT WHEEL	. 6-3
CHECKING THE FRONT WHEEL	. 6-3
CHECKING THE BRAKE DISCS	. 6-4
INSTALLING THE FRONT WHEEL	. 6-6
ADJUSTING THE FRONT WHEEL STATIC BALANCE	. 6-7
REAR WHEEL, BRAKE DISC AND REAR WHEEL SPROCKET	. 6-9
REAR WHEEL	
BRAKE DISC AND REAR WHEEL SPROCKET	. 6-10
REMOVING THE REAR WHEEL	. 6-11
CHECKING THE REAR WHEEL	. 6-11
CHECKING THE REAR WHEEL DRIVE HUB	. 6-12
CHECKING AND REPLACING THE REAR WHEEL SPROCKET	. 6-12
INSTALLING THE REAR WHEEL	
ADJUSTING THE REAR WHEEL STATIC BALANCE	. 6-13
FRONT AND REAR BRAKES	. 6-14
FRONT BRAKE PADS	. 6-14
REAR BRAKE PADS	
REPLACING THE FRONT BRAKE PADS	
REPLACING THE REAR BRAKE PADS	
FRONT BRAKE MASTER CYLINDER	. 6-20
REAR BRAKE MASTER CYLINDER	. 6-22
DISASSEMBLING THE FRONT BRAKE MASTER CYLINDER	. 6-24
DISASSEMBLING THE REAR BRAKE MASTER CYLINDER	. 6-24
CHECKING THE FRONT AND REAR BRAKE MASTER	
CYLINDERS	. 6-25
ASSEMBLING AND INSTALLING THE FRONT BRAKE	
MASTER CYLINDERS	
ASSEMBLING THE REAR BRAKE MASTER CYLINDER	
FRONT BRAKE CALIPER	
REAR BRAKE CALIPER	
DISASSEMBLING THE FRONT BRAKE CALIPERS	
DISASSEMBLING THE REAR BRAKE CALIPER	
CHECKING THE FRONT AND REAR BRAKE CALIPERS	. 6-36
ASSEMBLING AND INSTALLING THE FRONT BRAKE	
CALIPERS	. 6-36
ASSEMBLING AND INSTALLING THE BEAR BRAKE CALIPER	6-30

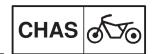

FRONT FORK	
REMOVING THE FRONT FORK LEGS	
DISASSEMBLING THE FRONT FORK LEGS	
CHECKING THE FRONT FORK LEGS	. 6-46
ASSEMBLING THE FRONT FORK LEGS	. 6-47
INSTALLING THE FRONT FORK LEGS	. 6-50
HANDLEBAR	. 6-51
REMOVING THE HANDLEBAR	. 6-53
CHECKING THE HANDLEBAR	. 6-53
INSTALLING THE HANDLEBAR	. 6-54
STEERING HEAD	
LOWER BRACKET	
REMOVING THE LOWER BRACKET	
CHECKING THE STEERING HEAD	. 6-59
INSTALLING THE STEERING HEAD	. 6-60
REAR SHOCK ABSORBER, SWINGARM AND DRIVE CHAIN	. 6-61
HANDLING THE REAR SHOCK ABSORBER AND	
GAS CYLINDER	. 6-63
DISPOSING OF A REAR SHOCK ABSORBER AND	
GAS CYLINDER	. 6-63
REMOVING THE SWINGARM	. 6-64
CHECKING THE REAR SHOCK ABSORBER ASSEMBLY AND	
GAS CYLINDER	
CHECKING THE SWINGARM	. 6-65
CHECKING THE DRIVE CHAIN	6-66




# CHASSIS FRONT WHEEL AND BRAKE DISCS

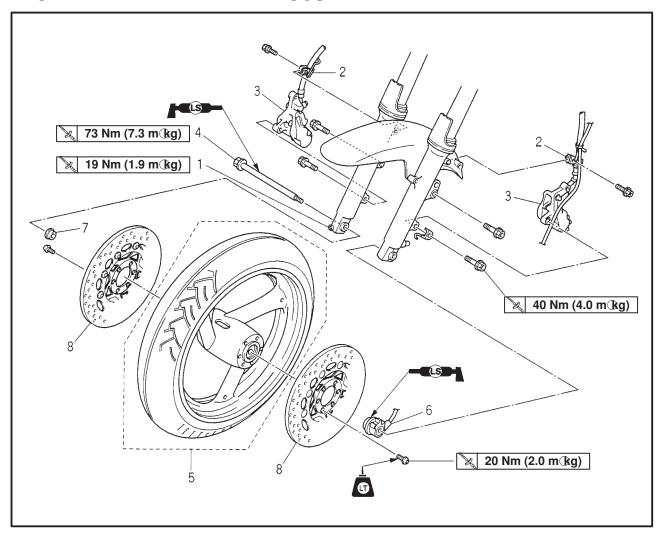

Order	Job/Part	Q'ty	Remarks
	Removing the front wheel and brake discs		Remove the parts in the order listed.  NOTE:  Place the motorcycle on a suitable stand so that the front wheel is elevated.
1 2 3 4 5 6 7 8	Wheel axle pinch bolt Brake hose holder (left/right) Caliper (left/right) Wheel axle Front wheel Speedometer gear unit Collar Brake disc (left/right)	1 1/1 1/1- 1 1 1 - 1 1/1	Refer to "REMOVING/INSTALLING THE FRONT WHEEL".  For installation, reverse the removal procedure.

EAS00518

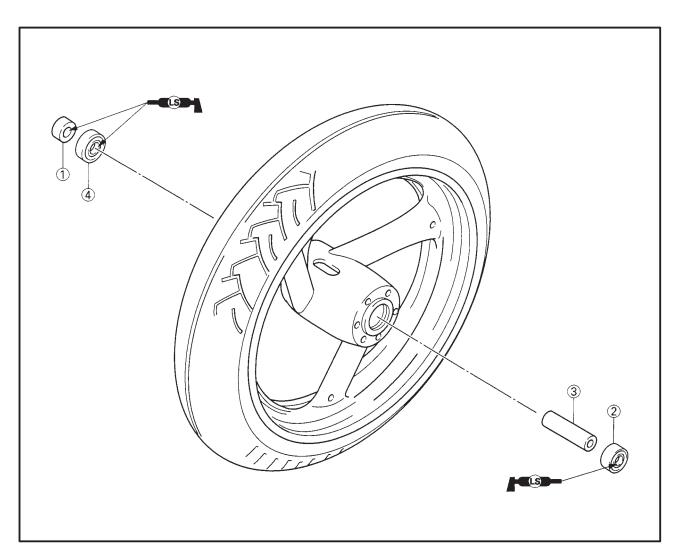

Order	Job/Part	Q'ty	Remarks
1 2 3 4	Disassembling the front wheel. Oil seal Bearing Spacer Bearing	1 1 1 1	Disassembly the parts in the order listed.  For assembly, reverse the disassembly procedure.



FAS0052

#### REMOVING THE FRONT WHEEL

1. Stand the motorcycle on a level surface.

# **A** WARNING

Securely support the motorcycle so that there is no danger of it falling over.

## NOTE: -

Place the motorcycle on a suitable stand so that the front wheel is elevated.



speedometer cable (1)

3. Remove:

Obrake calipers 2 (left and right)

#### NOTE

Do not squeeze the brake lever when removing the brake calipers.

#### 4. Loosen:

pinch bolt (front wheel axle) (1)

Front wheel axle (2)

#### 5. Elevate:

**front** wheel

#### NOTE: -

Place the motorcycle on a suitable stand so that the front wheel is elevated.

#### EAS00525

## **CHECKING THE FRONT WHEEL**

#### 1. Check:

Wheel axle

Roll the wheel axle on a flat surface.

Bends  $\rightarrow$  Replace.

# **A** WARNING

Do not attempt to straighten a bent wheel axle.



**Tire** 

**Front wheel** 

Damage/wear → Replace.


Refer to "CHECKING THE TIRES" and "CHECKING THE WHEELS" in chapter 3.


# 3. Measure:


(front wheel radial runout 1)

Front wheel lateral runout (2)


Over the specified limits  $\rightarrow$  Replace.

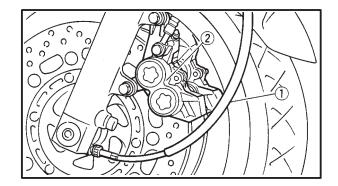


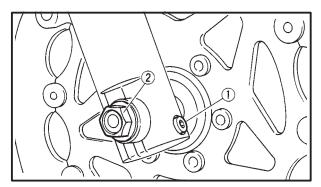


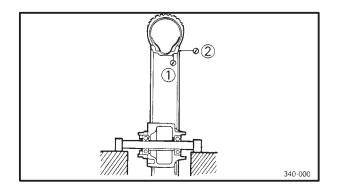




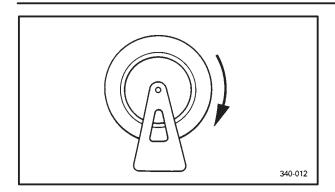

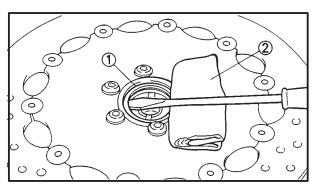

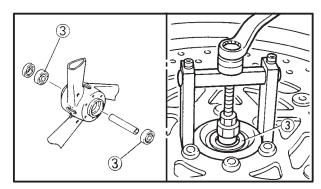

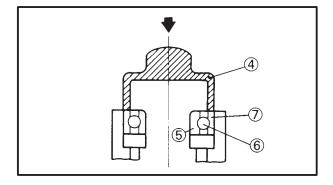



Front wheel radial runout limit 1.0 mm

Front wheel lateral runout limit 0.5 mm

- 4. Check:
  - Wheel bearings

Front wheel turns roughly or is loose → Replace the wheel bearings.

**oil** seals

Damage/wear → Replace.

- 5. Replace:
  - Wheel bearings (New)
  - (il seals (New)

# a. Clean the outside of the front wheel hub.

- b. Remove the oil seals (1) with a flat-head screwdriver.

#### NOTE: -

To prevent damaging the wheel, place a rag 2 between the screwdriver and the wheel surface.

- c. Remove the wheel bearings 3 with a general bearing puller.
- d. Install the new wheel bearings and oil seals in the reverse order of disassembly.

## **CAUTION:**

Do not contact the wheel bearing center race 5 or balls 6. Contact should be made only with the outer race 7.

#### NOTE: -

Use a socket (4) that matches the diameter of the wheel bearing outer race and oil seal.

#### **CHECKING THE BRAKE DISCS**

The following procedure applies to all of the brake discs.

- 1. Check:
- Obrake disc

Damage/galling → Replace.

- 2. Measure:
  - Obrake disc deflection

Out of specification → Correct the brake disc deflection or replace the brake disc.





Brake disc deflection limit (maximum)

Front: 0.2 mm Rear: 0.15 mm

- a. Place the motorcycle on a suitable stand so that the wheel is elevated.
- Before measuring the front brake disc deflection, turn the handlebar to the left or right to ensure that the front wheel is stationary.
- c. Remove the brake caliper.
- d. Hold the dial gauge at a right angle against the brake disc surface.
- e. Measure the deflection 2  $\times$  3 mm below the edge of the brake disc.



Obrake disc thickness

Measure the brake disc thickness at a few different locations.

Out of specification  $\rightarrow$  Replace.



Brake disc thickness limit (minimum)

Front: 4.5 mm Rear: 4.5 mm



Obrake disc deflection

a. Remove the brake disc.

\*\*\*\*\*\*\*

- b. Rotate the brake disc by one bolt hole.
- c. Install the brake disc.


NOTE: -

Tighten the brake disc bolts in stages and in a crisscross pattern.



Brake disc bolt 20 Nm (2.0 m/kg) LOCTITE®

- d. Measure the brake disc deflection.
- e. If out of specification, repeat the adjustment steps until the brake disc deflection is within specification.
- f. If the brake disc deflection cannot be brought within specification, replace the brake disc.

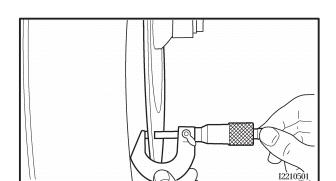



EAS00544

#### **INSTALLING THE FRONT WHEEL**

The following procedure applies to both brake discs.

#### 1. Lubricate:

Wheel axle

**oil** seal lips



Recommended lubricant Lithium soap base grease

#### 2. Install:

Obrake disc 1

#### NOTE: -

- Apply LOCTITE® 648 to the threads of the brake disc bolts.
- Tighten the brake disc bolts in stages and in a crisscross pattern.

#### 3. Install:

speedometer gear unit

#### NOTE

Make sure that the speedometer gear unit and the wheel hub are installed with the two projections (a) meshed into the two slots (b) respectively.

#### 4. Install:

Front wheel

#### NOTE: -

Make sure that the slot ⓐ in the speedometer gear unit fits over the stopper ⓑ on the outer tube.

## 5. Tighten:


- Wheel axle 1
- Wheel axle pinch bolt 2





Wheel axle 73 Nm (7.3 m⋅kg) Wheel axle pinch bolt 19 Nm (1.9 m⋅kg)


## **CAUTION:**

Before tightening the wheel axle nut, push down hard on the handlebar several times and check if the front fork rebounds smoothly.

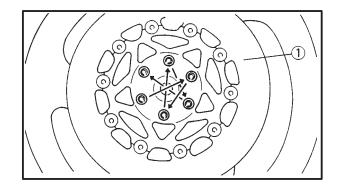

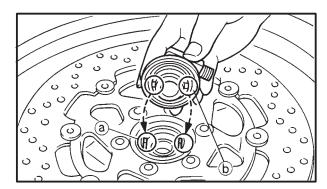

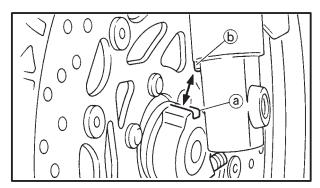

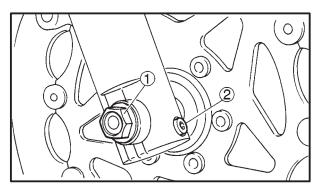

6. Install:

**O**brake caliper



Brake caliper bolt 40 Nm (4.0 m⋅ g)

# **A** WARNING

Make sure that the brake hose is routed properly.

EAS00549

# ADJUSTING THE FRONT WHEEL STATIC BALANCE

NOTE: -

- After replacing the tire, wheel or both, the front wheel static balance should be adjusted.
- Adjust the front wheel static balance with the brake discs installed.
- 1. Remove:

Dalancing weight(-s)


NOTE:


Place the front wheel on a suitable balancing stand.

2. Find:

Front wheel's heavy spot


- a. Spin the front wheel.
- b. When the front wheel stops, put an "X<sub>1</sub>" mark at the bottom of the wheel.
- c. Turn the front wheel 90 so that the " $X_1$ " mark is positioned as shown.
- d. Release the front wheel.
- e. When the wheel stops, put an "X<sub>2</sub>" mark at the bottom of the wheel.
- Repeat steps (b) through (d) several times until all the marks come to rest at the same spot.
- g. The spot where all the marks come to rest is the front wheel's heavy spot "X".

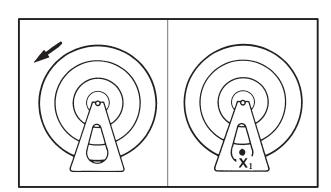


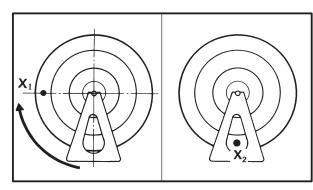


### FRONT WHEEL AND BRAKE DISCS



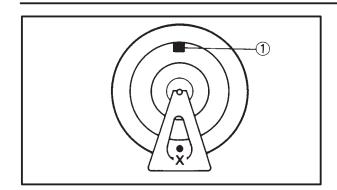

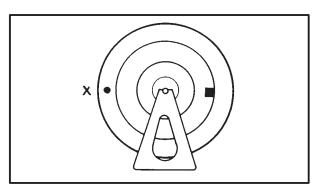

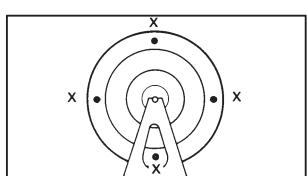

a. Install a balancing weight ① onto the rim exactly opposite the heavy spot "X".

NOTE: -

Start with the lightest weight.

- b. Turn the front wheel 90° so that the heavy spot is positioned as shown.
- c. If the heavy spot does not stay in that position, install a heavier weight.
- d. Repeat steps (b) and (c) until the front wheel is balanced.

4. Check:


(front wheel static balance)

- a. Turn the front wheel and make sure that it stays at each position shown.
- b. If the front wheel does not remain stationary at all of the positions, rebalance it.



EAS0055


# REAR WHEEL, BRAKE DISC AND REAR WHEEL SPROCKET REAR WHEEL

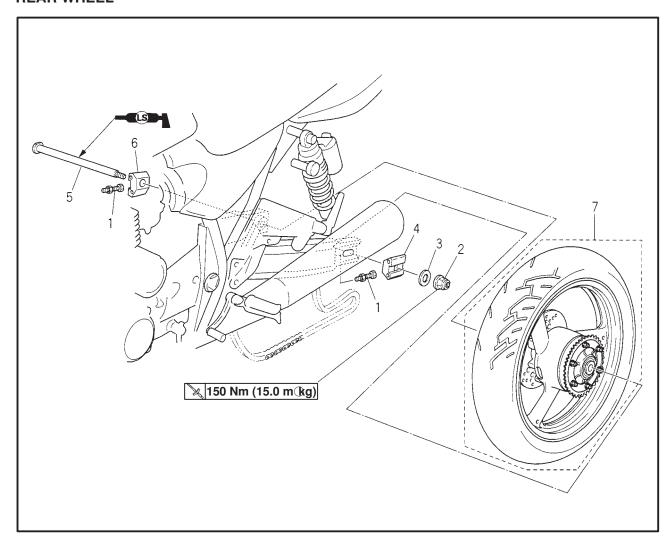

Order	Job/Part	Q'ty	Remarks
	Removing the rear wheel		Remove the parts in the order listed.  NOTE:  Place the motorcycle on a suitable stand
			so that the rear wheel is elevated.
1 2 3 4 5 6 7	Chain adjusters Rear wheel axle nut Plate washer Chain puller (left) Wheel axle Chain Puller (right) Rear wheel	2 1 - 1 1 1 1 - 1	Refer to "REMOVING/INSTALLING THE REAR WHEEL".
			For installation, reverse the removal procedure.



#### **BRAKE DISC AND REAR WHEEL SPROCKET**

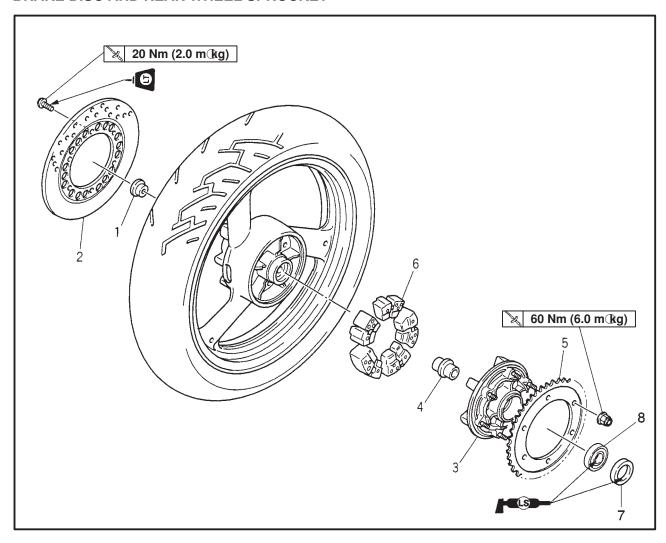

Order	Job/Part	Q'ty	Remarks
	Removing the brake disc and rear wheel sprocket		Remove the parts in the order listed.
1	Collar	1	
2	Brake disc	1	
3	Clutch hub	1	
4	Collar	1	
5	Rear wheel sprocket	1	
6	Clutch dampers	5	
7	Oil seal	1	
8	Bearing	1	
			For installation, the removal procedure.

EAS0056

#### **REMOVING THE REAR WHEEL**

1. Stand the motorcycle on a level surface.



Securely support the motorcycle so that there is no danger of it falling over.

NOTE: -

Place the motorcycle on a suitable stand so that the rear wheel is elevated.

2. Loosen:

adjusting bolt 1

Oocknut 2

3. Remove:

(wheel axle nut (3)


Wheel axle (4)


**Pear wheel** 

(7) ght collar (5)

NOTE: -

Push the rear wheel forward and remove the drive chain from the rear wheel sprocket.

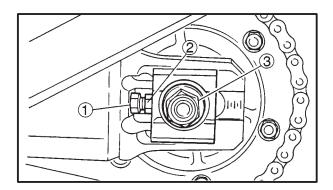

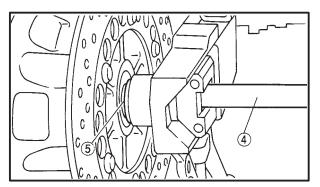

EAS00565

#### **CHECKING THE REAR WHEEL**

- 1. Check:
  - Wheel axle
  - ©ear wheel
  - Wheel bearings
  - **oil** seals

Refer to "FRONT WHEEL".

- 2. Check:
  - **Tire**
  - (rear wheel

Damage/wear → Replace.

Refer to "INSPECTING THE TIRES" and "INSPECTING THE WHEELS" in chapter 3.

- 3. Measure:
  - Crear wheel radial runout
- Crear wheel lateral runout

Refer to "FRONT WHEEL".



FAS00567

#### CHECKING THE REAR WHEEL DRIVE HUB


1. Check:

Gear wheel drive hub

Cracks/damage → Replace.

Tear wheel dive hub dampers

Damage/wear → Replace.

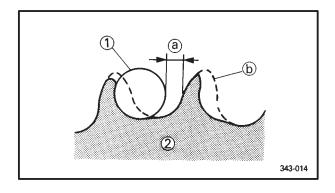

FAS00568

## CHECKING AND REPLACING THE REAR WHEEL SPROCKET

1. Check:

Tear wheel sprocket

More than 1/4 tooth ⓐ wear  $\rightarrow$  Replace the rear wheel sprocket.

Bent teeth  $\rightarrow$  Replace the rear wheel sprocket.

- (b) Correct
- 1 Drive chain roller
- 2 Rear wheel sprocket
- 2. Replace:

rear wheel sprocket

- a. Remove the self-locking nuts and the rear wheel sprocket.
- b. Clean the rear wheel drive hub with a clean cloth, especially the surfaces that contact the sprocket.
- c. Install the new rear wheel sprocket.



Rear wheel sprocket self-locking nut 60 Nm (6.0 m/kg)

NOTE: -

Tighten the self-locking nuts in stages and in a crisscross pattern.



EAS00572

#### **INSTALLING THE REAR WHEEL**

- 1. Lubricate:
  - Wheel axle
  - Wheel bearings
  - **oil** seal lips



Recommended lubricant Lithium soap base grease

2. Tighten:

Wheel axle nut



Wheel axle nut 150 Nm (15.0 m⋅kg)

EAS00575

## ADJUSTING THE REAR WHEEL STATIC BALANCE


NOTE: -

- After replacing the tire, wheel or both, the rear wheel static balance should be adjusted.
- Adjust the rear wheel static balance with the brake disc and rear wheel drive hub installed.
- 1. Adjust:
  - The static balance Refer to "FRONT WHEEL".



EAS0057

# FRONT AND REAR BRAKES FRONT BRAKE PADS

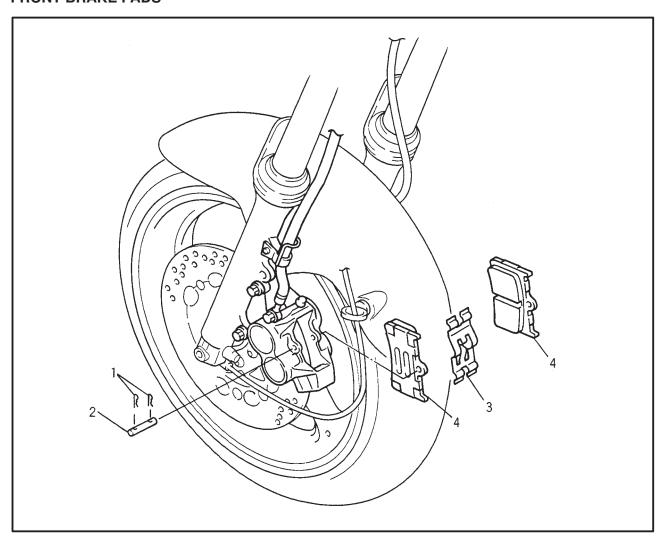


Order	Job/Part	Q'ty	Remarks
1 2 3 4	Removing the front brake pads Clip Pad pin Pad support Brake pad	4 - 2 2 4 -	Remove the parts in the order listed.  Refer to "REPLACING THE FRONT BRAKE PADS".  For installation, reverse the removal procedure.



EAS00578

#### **REAR BRAKE PADS**

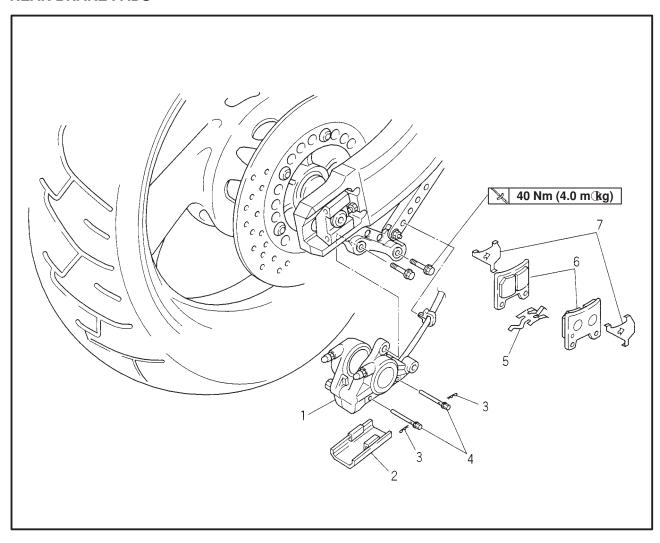

Order	Job/Part	Q'ty	Remarks
1 2 3 4 5 6 7	Removing the rear brake pads Caliper Cover Clip Pad pin Pad spring Brake pad Caliper shim	1 - 1 2 2 1 2 2 -	Remove the parts in the order listed.  Refer to "REPLACING THE REAR BRAKE PADS".  For installation, reverse the removal
1 2 3 4 5	Removing the rear brake pads Caliper Cover Clip Pad pin Pad spring Brake pad	1 - 1 2 2 1 2 1	Remove the parts in the order listed.  Refer to "REPLACING THE REAR BRAKE PADS".

CHAS 656

EAS00579

#### CAUTION:


Disc brake components rarely require disassembly.


Therefore, always follow these preventive measures:

- Never disassemble brake components unless absolutely necessary.
- Of any connection on the hydraulic brake system is disconnected, the entire brake system must be disassembled, drained, cleaned, properly filled, and bled after reassembly.
- Never use solvents on internal brake components.
- Use only clean or new brake fluid for cleaning brake components.
- Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt fluid immediately.
- Avoid brake fluid coming into contact with the eyes as it can cause serious injury.

First aid for brake fluid entering the eyes:

Flush with water for 15 minutes and get immediate medical attention.

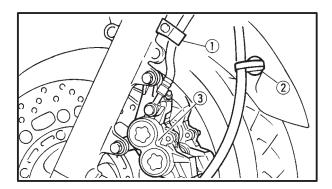

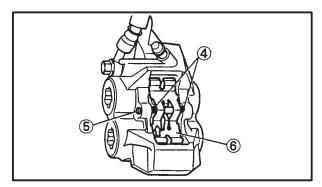

EAS00582


#### REPLACING THE FRONT BRAKE PADS

The following procedure applies to both brake calipers.

NOTE:


When replacing the brake pads, it is not necessary to disconnect the brake hose or disassemble the brake caliper.

- 1. Remove:
  - Obrake hose holder (1)
  - speedometer cable guide 2
  - (brake caliper (3)
- 2. Remove:
  - (brake pad clips 4)
  - (brake pad pin (5)
- (b) brake pad spring (6)

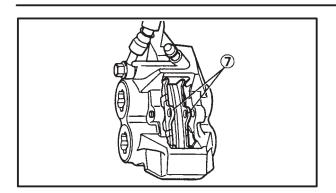

3. Remove:

(b) rake pads (7)

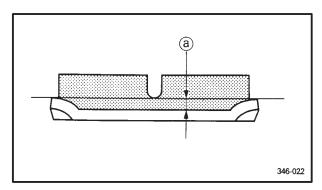

#### 4. Measure:

Out of specification → Replace the brake pads as a set.




Brake pad wear limit 0.5 mm

#### 5. Install:

- Obrake pads
- Obrake pad spring

#### NOTE: -

Always install new brake pads, and a brake pad spring as a set.

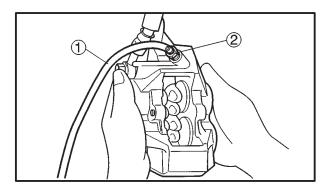

- bleed screw ②. Put the other end of the hose into an open container.b. Loosen the bleed screw and push the brake
- Loosen the bleed screw and push the brake caliper pistons into the brake caliper with your finger.

a. Connect a clear plastic hose 1 tightly to the

c. Tighten the bleed screw.




## Bleed screw 6 Nm (0.6 m/kg)

d. Install new brake pads and a new brake pad spring.

#### NOTE: -

The arrow ⓐ on the brake pad spring must point in the direction of disc rotation.

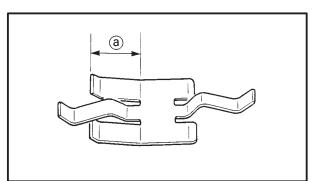



#### 6. Install:

- Obrake pad pins
- Obrake pad clips
- **O**brake caliper



Brake caliper bolt 40 Nm (4.0 m⋅kg)

#### 7. Check:

Obrake fluid level


Below the minimum level mark ⓐ → Add the recommended brake fluid to the proper level. Refer to "CHECKING THE BRAKE FLUID LEVEL" in chapter 3.

#### 8. Check:

**O**brake lever operation

Soft or spongy feeling  $\rightarrow$  Bleed the brake system.

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.

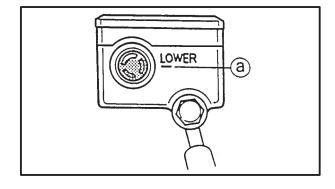



#### REPLACING THE REAR BRAKE PADS

#### NOTE: -

When replacing the brake pads, it is not necessary to disconnect the brake hose or disassemble the brake caliper.




#### 1. Remove:

Obrake caliper (1)



- (brake pad cover (1)
- Obrake pad clips 2
- (brake pad pins (3)
- Obrake pad spring 4
- 3. Remove:
  - (b) (5)


(along with the brake pad shims)

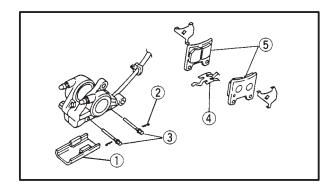

#### 4. Measure:

Obrake pad wear limit (a)

Out of specification  $\rightarrow$  Replace the brake pads as a set.

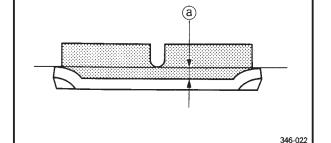





Brake pad wear limit 0.5 mm

- 5. Install:
  - Obrake pad shims
  - (onto the brake pads)
  - **b**rake pads
  - **O**brake pad spring

#### NOTE: -

Always install new brake pads, brake pad shims, and a brake pad spring as a set.

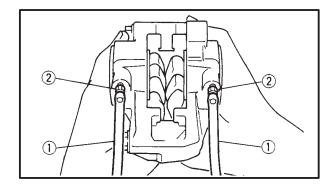

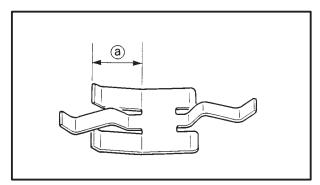

a. Connect a clear plastic hose ① tightly to the bleed screw ②. Put the other end of the hose into an open container.

- b. Loosen the bleed screw and push the brake caliper pistons into the brake caliper with your finger.
- c. Tighten the bleed screw.



## Bleed screw 6 Nm (0.6 m/kg)

- d. Install new brake pad shims onto the new brake pads.
- e. Install new brake pads and a new brake pad spring.

#### NOTE: -

The longer tangs (a) on the brake pad spring must point in the direction of disc rotation.

#### 6. Install:

- Obrake pad pins
- Obrake pad clips
- Obrake pad cover
- **O**brake caliper



#### Brake caliper bolt 40 Nm (4.0 m/kg)

#### 7. Check:

Obrake fluid level


Below the minimum level mark  $\textcircled{a} \rightarrow \mathsf{Add}$  the recommended brake fluid to the proper level. Refer to "CHECKING THE BRAKE FLUID LEVEL" in chapter 3.

#### 8. Check:

Obrake lever operation

Soft or spongy feeling  $\rightarrow$  Bleed the brake system.


Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.

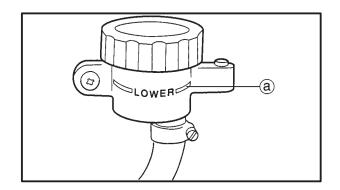




EAS00586

#### FRONT BRAKE MASTER CYLINDER

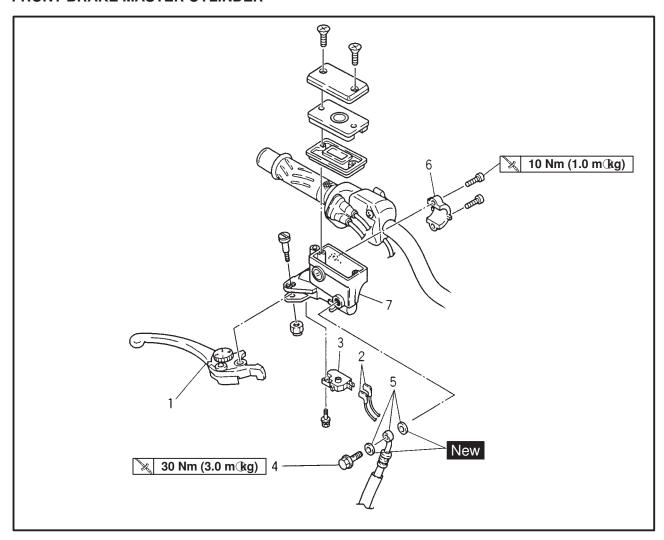

Order	Job/Part	Q'ty	Remarks
1 2 3 4 5 6 7	Removing the front brake master cylinder Brake fluid  Brake lever Brake switch lead Front brake switch Union bolt Copper washers/Brake hose Master cylinder bracket Master cylinder	1 2 1 1 - 2/1 1 1 -	Remove the parts in the order listed. Drain  Refer to "DISASSEMBLING/ASSEMBLING AND INSTALLING THE REAR BRAKE MASTER CYLINDER".  For installation, reverse the removal procedure.

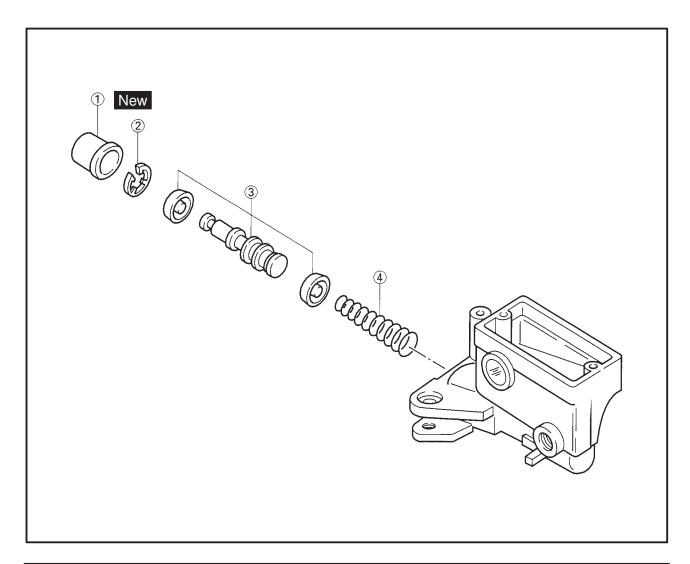


Order	Job/Part	Q'ty	Remarks
1 2 3 4	Disassembling the front brake master cylinder Master cylinder boot Circlip Master cylinder kit Spring	1 1 1	Disassembly the parts in the order listed.  For assembly, reverse the disassembly procedure.




EAS00586

#### **REAR BRAKE MASTER CYLINDER**

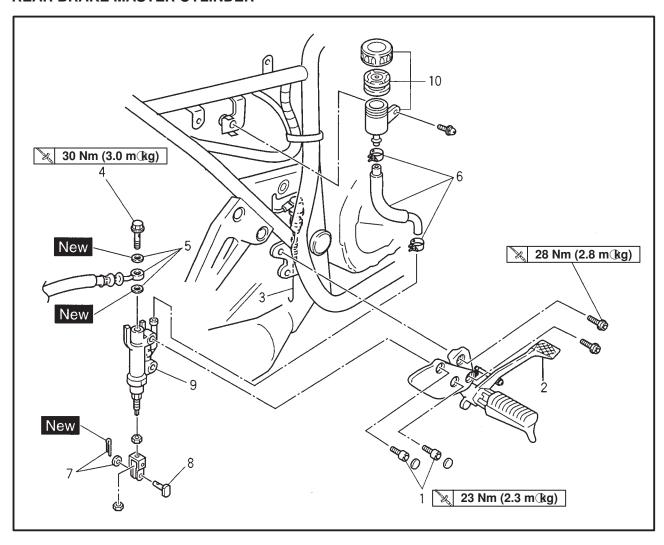

Order	Job/Part	Q'ty	Remarks
	Removing the rear brake master		Remove the parts in the order listed.
	cylinder		
	Brake fluid		Drain
1	Bolts	2	
2	Brake pedal	1	
3	Brake switch	1	
4	Union bolt	1 -	
5	Copper washers/brake hose	2/1	
6	Clip/reservoir hose	2/1	Refer to "DISASSEMBLING/ASSEM-
7	Cotter pin/copper washer	1/1	BLING THE REAR BRAKE MASTER
8	Pin	1	CYLINDER".
9	Master cylinder ass'y	1	
10	Reservoir tank	1 -	
			For installation, reverse removal procedure.

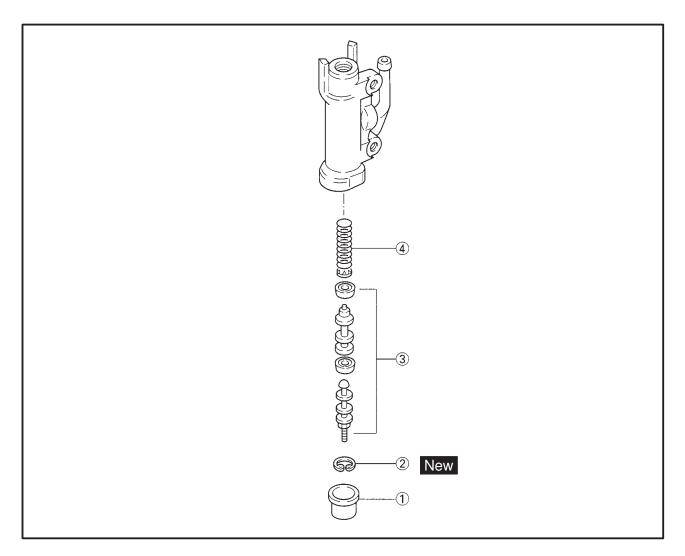

Order	Job/Part	Q'ty	Remarks
① ② ③ ④	Disassembling the rear brake master cylinder Master cylinder boot Circlip Master cylinder kit Spring	1 1 1 1	Disassembly the parts in the order listed.  For assembly, reverse the disassembly procedure.



EAS00588

## DISASSEMBLING THE FRONT BRAKE MASTER CYLINDER

NOTE: -

Before disassembling the front brake master cylinder, drain the brake fluid from the entire brake system.



Tear view mirror (right)

Obrake lever (1)

2. Disconnect:

(from the brake switch)

3. Remove:


Ounion bolt 3

© opper washers (4)

(brake hose (5)

NOTE: \_

To collect any remaining brake fluid, place a container under the master cylinder and the end of the brake hose.

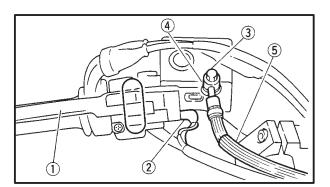


EAS00589

## DISASSEMBLING THE REAR BRAKE MASTER CYLINDER

NOTE: -

Before disassembling the rear brake master cylinder, drain the brake fluid from the entire brake system.

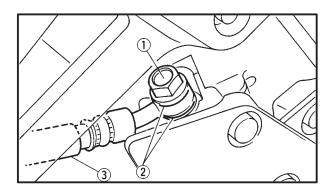

#### 1. Remove:

Qunion bolt (1)


© opper washers ②

(brake hose (3)

#### NOTE: -

To collect any remaining brake fluid, place a container under the master cylinder and the end of the brake hose.



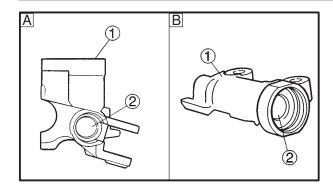


EAS00592


#### CHECKING THE FRONT AND REAR BRAKE **MASTER CYLINDERS**

The following procedure applies to the both of the brake master cylinders.


- 1. Check:
  - Obrake master cylinder (1) Damage/scratches/wear → Replace.
  - Obrake fluid delivery passages (2) (brake master cylinder body) Obstruction → Blow out with compressed air.
- A Front
- **B** Rear

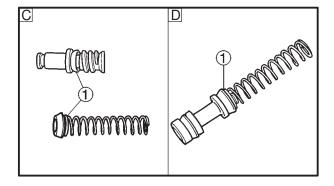

- 2. Check:
- Obrake master cylinder kit 1 Damage/scratches/wear → Replace.
- C Front
- D Rear

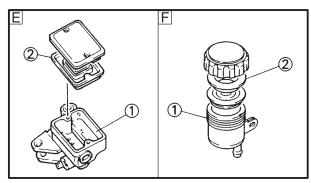

- 3. Check:
- Front brake master cylinder reservoir (1) Cracks/damage → Replace.
- Front brake mater cylinder reservoir diaphragm 2
  - Damage/wear → Replace.
- (Pear brake fluid reservoir (1)
- Cracks/damage → Replace.
- Dear brake fluid reservoir diaphragm 2
- Cracks/damage → Replace.
- E Front
- F Rear
- 4. Check:
  - Obrake hoses (1)
  - Cracks/damage/wear → Replace.

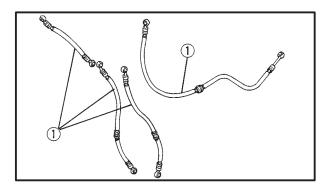





EAS00598

ASSEMBLING AND INSTALLING THE FRONT BRAKE MASTER CYLINDER

#### **A** WARNING

- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components.

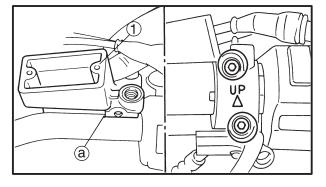

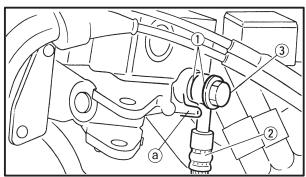



## Recommended brake fluid DOT 4

1. Install:

Obrake master cylinder (1)

#### NOTE:

- Onstall the brake master cylinder holder with the "UP" mark facing up.
- Align the end of the brake master cylinder holder with the punch mark (a) on the handlebar.
- First, tighten the upper bolt, then the lower bolt.



## Brake master cylinder bolt 10 Nm (1.0 m/kg)

2. Install:

© copper washers (New) (1)

(brake hose 2)

Qunion bolt (3)



Union bolt 30 Nm (3.0 m/kg)

### **A** WARNING

Proper brake hose routing is essential to insure safe motorcycle operation. Refer to "CABLE ROUTING".

#### **CAUTION:**

When installing the brake hose onto the brake master cylinder make sure that the brake pipe touches the projection (a) as shown.

#### NOTE: -

Turn the handlebar to the left and to the right to make sure that the brake hose does not touch other parts (e.g., wire harness, cables, leads). Correct if necessary.



#### 3. Fill:

Orake master cylinder reservoir (with the specified amount of the recommended brake fluid)



Recommended brake fluid DOT 4

### **A** WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

#### **CAUTION:**

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

#### 4. Bleed:

Obrake system

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.

#### 5. Check:

Obrake fluid level


Below the minimum level mark ⓐ → Add the recommended brake fluid to the proper level. Refer to "CHECKING THE BRAKE FLUID LEVEL" in chapter 3.

#### 6. Check:


**brake** lever operation

Soft or spongy feeling  $\rightarrow$  Bleed the brake system.

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.

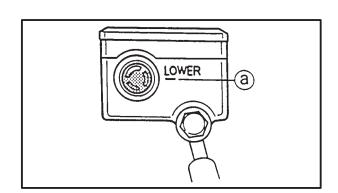



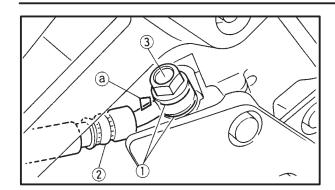

EAS00610

## ASSEMBLING THE REAR BRAKE MASTER CYLINDER

- 1. Install:
  - ©opper washers (New) ①
  - (brake hose (2)



Union bolt ③ 30 Nm (3.0 m⋅kg)

#### **A** WARNING

Proper brake hose routing is essential to insure safe motorcycle operation. Refer to "CABLE ROUTING".

#### **CAUTION:**

When installing the brake hose onto the brake master cylinder make sure that the brake pipe touches the projection (a) as shown.

2. Fill:

Obrake fluid reservoir



Recommended brake fluid DOT 4


### **A** WARNING


- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

### CAUTION:

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.



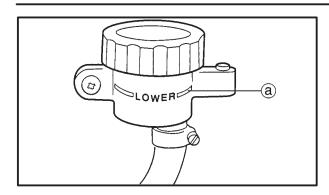

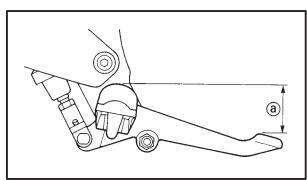

#### 3. Bleed:

Obrake system

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.

#### 4. Check:

Obrake fluid level

Below the minimum level mark  $\textcircled{a} \rightarrow \mathsf{Add}$  the recommended brake fluid to the proper level. Refer to "CHECKING THE BRAKE FLUID LEVEL" in chapter 3.

#### 5. Adjust:

Drake pedal position (a)
Refer to "ADJUSTING THE REAR BRAKE" in chapter 3.



Brake pedal position (below the top of the rider footrest) ⓐ 45 mm


#### 6. Adjust:

Pear brake light operation timing Refer to "ADJUSTING THE REAR BRAKE LIGHT SWITCH" in chapter 3.




EAS00613


#### FRONT BRAKE CALIPER

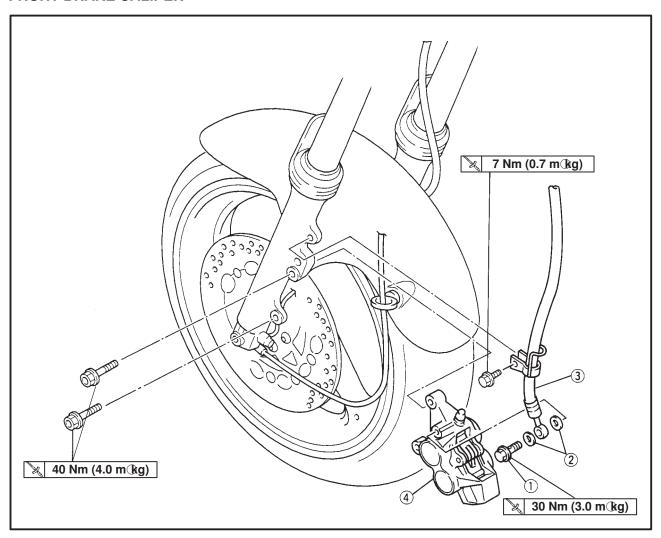

Order	Job/Part	Q'ty	Remarks
1 2 3 4	Removing the front brake calipers Brake fluid Union bolts Copper washers Brake hoses Caliper ass'y	2 - 4 2 2 -	Remove the parts in the order listed. Drain  Refer to "DISASSEMBLING/ ASSEMBLING AND INSTALLING THE FRONT BRAKE CALIPERS".  For installation, reverse the removal procedure.

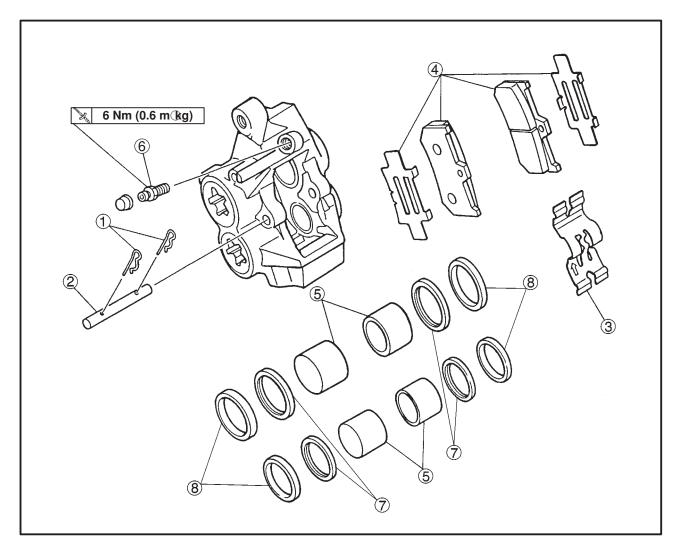


Order	Job/Part	Q'ty	Remarks
12345678	Disassembling the front brake calipers. The following procedure applies to both of the front brake calipers. Clips Pad pin Pad spring Brake pads/shims Caliper pistons Bleed screw Dust seals Piston seals	2 1 1 2/2 4 1 - 4 4 -	Disassembly the parts in the order listed.  Refer to "DISASSEMBLING THE FRONT BRAKE CALIPERS".  For assembly, reverse the disassembly procedure.

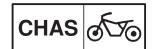


ESA00616

#### **REAR BRAKE CALIPER**

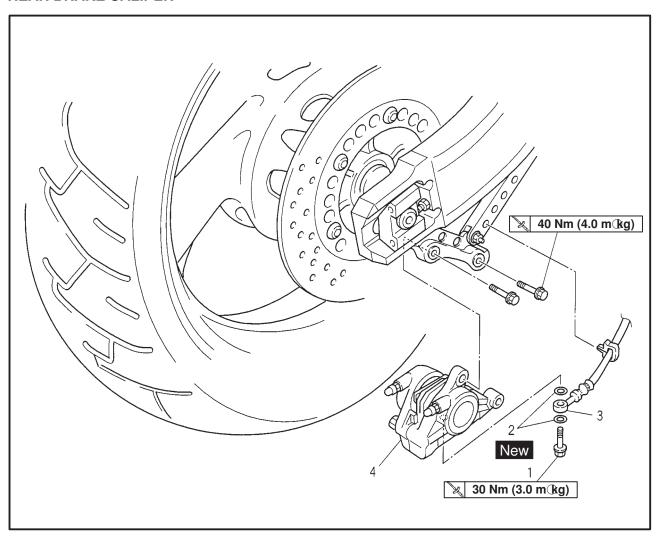

Order	Job/Part	Q'ty	Remarks
1 2 3 4	Removing the rear brake caliper Brake fluid Union bolt Copper washers Brake hose Caliper ass'y	1 - 2 1 1 -	Remove the parts in the order listed. Drain  Refer to "DISASSEMBLING/ ASSEMBLING AND INSTALLING THE REAR BRAKE CALIPER".  For installation, reverse the removal procedure.

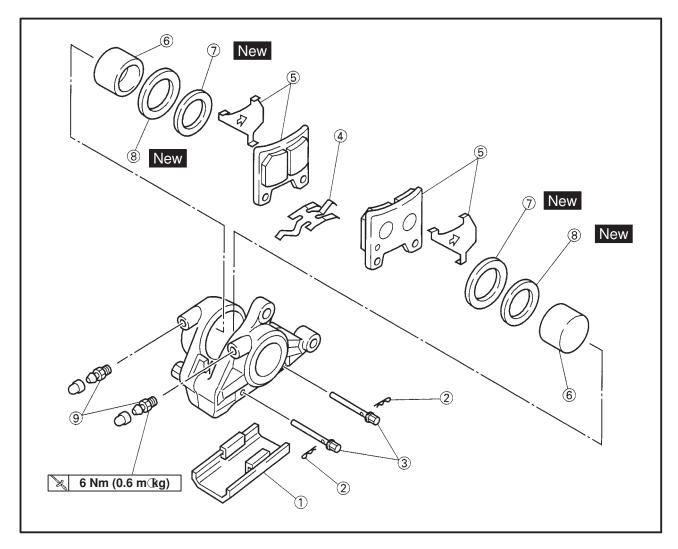

Order	Job/Part	Q'ty	Remarks
	Disassembling the rear brake caliper		Disassembly the parts in the order listed.
1	Cover	1	
2	Clips	2	
3	Pad pins	2	
4	Pad support	1	
5	Brake pads/shims	2/2	
6	Caliper pistons	2 -	Refer to "DISASSEMBLING THE REAR
7	Dust seals	2	BRAKE CALIPER."
8	Piston seals	2 -	DOMANE CALIFEN.
9	Bleed screws	2	
			For assembly, reverse the disassembly procedure.

EAS00625

#### DISASSEMBLING THE FRONT BRAKE CAL-IPERS

The following procedure applies to both of the brake calipers.

NOTE: -

Before disassembling either brake caliper, drain the brake fluid from the entire brake system.



Qunion bolt (1)

© opper washers ②

Obrake hose


NOTE: -


Put the end of the brake hose into a container and pump out the brake fluid carefully.




Obrake caliper pistons (1)

Obrake caliper piston seals (2)

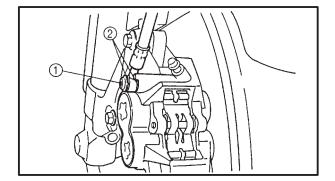

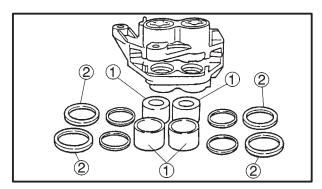

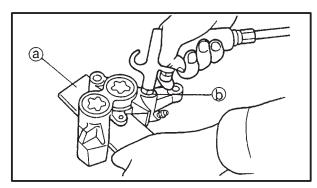

- a. Secure the right side brake caliper pistons with a piece of wood ⓐ.
- b. Blow compressed air into the brake hose joint opening **(b)** to force out the left side pistons from the brake caliper.
- c. Remove the brake caliper piston seals.
- d. Repeat the previous steps to force out the right side pistons from the brake caliper.

### **A** WARNING


- Never try to pry out the brake caliper pistons.
- Do not loosen the bolts.

EAS00629

DISASSEMBLING THE REAR BRAKE CAL-IPER

NOTE: -

Before disassembling the brake caliper, drain the brake fluid from the entire brake system.

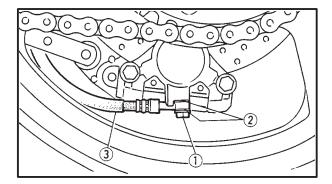

1. Remove:


Ounion bolt 1

© opper washers ②

Obrake hose ③

NOTE: -


Put the end of the brake hose into a container and pump out the brake fluid carefully.

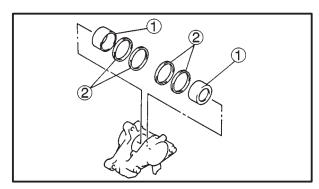

2. Remove:

Obrake caliper pistons (1)

(b)rake caliper piston seals (2)

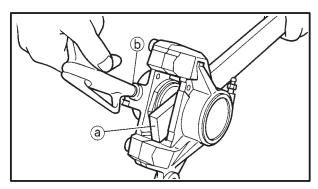

- a. Secure the right side brake caliper pistons with a piece of wood (a).
- b. Blow compressed air into the brake hose joint opening **(b)** to force out the left side pistons from the brake caliper.

### **A** WARNING

Never try to pry out the brake caliper pistons.

Do not loosen the bolts.


- c. Remove the brake caliper piston seals.
- d. Repeat the previous steps to force out the right side pistons from the brake caliper.




EAS00633

## CHECKING THE FRONT AND REAR BRAKE CALIPERS

Recommended brake component replacement schedule				
Brake pads	If necessary			
Piston seals	Every two years			
Brake hoses	Every two years			
Brake fluid	Every two years and whenever the brake is disassembled.			

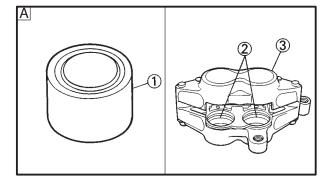

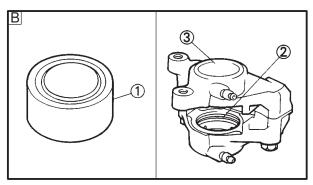

#### 1. Check:

- Obrake caliper pistons (1)
  - Rust/scratches/wear  $\rightarrow$  Replace the brake caliper.
- (b) brake caliper cylinders (2)
  - Scratches/wear  $\rightarrow$  Replace the brake caliper.
- (brake calipers 3)
- Cracks/damage → Replace.
- Orake fluid delivery passages
  - (brake caliper body)
  - Obstruction  $\rightarrow$  Blow out with compressed air.

### **A** WARNING

Whenever a brake caliper is disassembled, replace the brake caliper piston seals.

- A Front
- B Rear

EAS00638

## ASSEMBLING AND INSTALLING THE FRONT BRAKE CALIPERS

The following procedure applies to both of the brake calipers.

### **A** WARNING

Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.



- Never use solvents on internal brake components as they will cause the piston seals to swell and distort.
- Whenever a brake caliper is disassembled, replace the brake caliper piston seals.



## Recommended brake fluid DOT 4

- 1. Install:
- Obrake caliper (1)
- (temporarily)
- ©opper washers (New)
- (brake hose (2)
- Ounion bolt (3)



(a)

Union bolt 30 Nm (3.0 m⋅kg)

### **A** WARNING

Proper brake hose routing is essential to insure safe motorcycle operation. Refer to "CABLE ROUTING".

#### CAUTION:

When installing the brake hose onto the brake caliper ①, make sure that the brake pipe ② touches the projection ⑤ on the brake caliper.

- 2. Remove:
  - **O**brake caliper
- 3. Install:
  - Obrake pads
  - Obrake pad springs
  - Obrake caliper retaining bolt
  - Obake caliper
  - Obrake hose holder

Refer to "REPLACING THE BRAKE PADS".



Brake caliper bolt 40 Nm (4.0 m⋅ g)



Brake hose holder bolt 7 Nm (0.7 m⋅kg)

- 4. Fill:
  - Obrake master cylinder reservoir (with the specified amount of the recommended brake fluid)





Recommended brake fluid DOT 4

#### **A** WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

#### **CAUTION:**

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

#### 5. Bleed:

Obrake system

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.

#### 6. Check:

Obrake fluid level


Below the minimum level mark ⓐ → Add the recommended brake fluid to the proper level. Refer to "CHECKING THE BRAKE FLUID LEVEL" in chapter 3.

#### 7. Check:

Obrake lever operation

Soft or spongy feeling  $\rightarrow$  Bleed the brake system.

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.

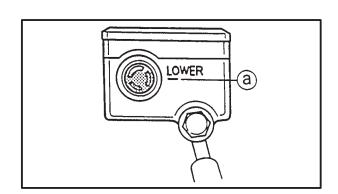



EAS00642

ASSEMBLING AND INSTALLING THE REAR BRAKE CALIPER

#### **A** WARNING

- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components as they will cause the piston seals to swell and distort.
- Whenever a brake caliper is disassembled, replace the brake caliper piston seals.



Recommended brake fluid DOT 4

#### 1. Install:

- Obrake caliper (1)
- (temporarily)
- ©opper washers New
- (brake hose (2)
- Ounion bolt ③

30 Nm (3.0 m kg)



Proper brake hose routing is essential to insure safe motorcycle operation. Refer to "CABLE ROUTING".


#### **CAUTION:**

When installing the brake hose onto the brake caliper ①, make sure that the brake pipe ⓐ touches the projection ⓑ on the brake caliper.

- 2. Remove:
  - **O**brake caliper
- 3. Install:
  - Obrake pads
  - Obrake pad springs
  - Obrake caliper
    Obrake hose holder

40 Nm (4.0 m/kg)
7 Nm (7.0 m/kg)

Refer to "REPLACING THE REAR BRAKE PADS".

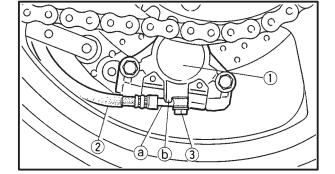

#### 4. Fill:

Orake fluid reservoir (with the specified amount of the recommended brake fluid)



Recommended brake fluid DOT 4

#### **▲** WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake fluid reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

#### CAUTION:

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

#### 5. Bleed:


Obrake system

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.

#### 6. Check:

**O**brake fluid level

Below the minimum level mark ⓐ → Add the recommended brake fluid to the proper level. Refer to "CHECKING THE BRAKE FLUID LEVEL" in chapter 3.

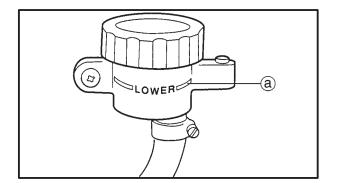

#### 7. Check:


Obrake pedal operation

Soft or spongy feeling  $\rightarrow$  Bleed the brake system.


Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.

EASON64


### **FRONT FORK**

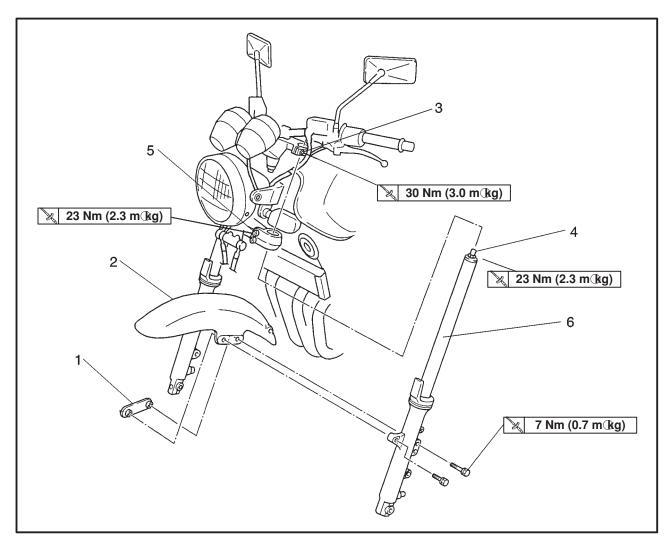

Order	Job/Part	Q'ty	Remarks
1 2 3 4 5 6	Removing the front fork Front wheel Brake calipers Brackets Front fender Bolts (upper bracket) Cap bolts Bolts (lower bracket) Front fork (left/right)	2 1 2 - 2 4 - 1/1	Remove the parts in the order listed. Refer to "FRONT WHEEL AND BRAKE DISCS".  Refer to "REMOVING/INSTALLING THE FRONT FORK LEGS".  For installation, reverse the removal procedure.

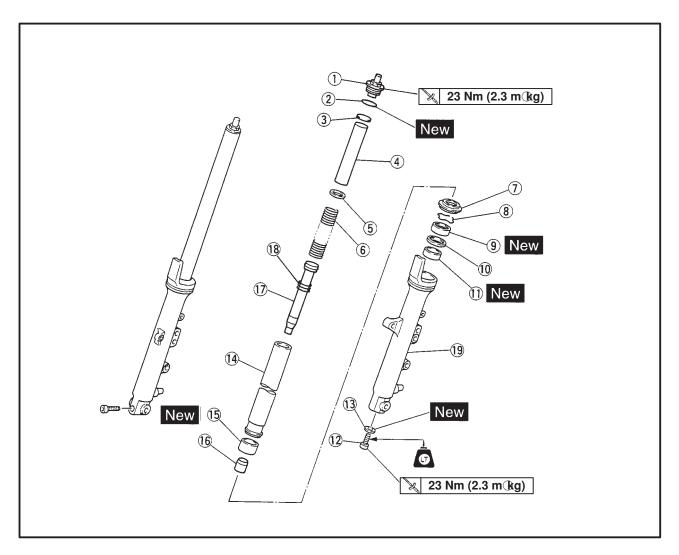

Order	Job/Part	Q'ty	Remarks
	Disassembling the front fork Cap bolts O-rings Plates Spacers Spring seats Fork springs Dust seals Oil seal clips Oil seals Seal spacers Outer tube bushings Bolts (damper rod) Gaskets	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	Disassembly the parts in the order listed.  Refer to "DISASSEMBLING/ ASSEMBLING THE FRONT FORK LEGS".

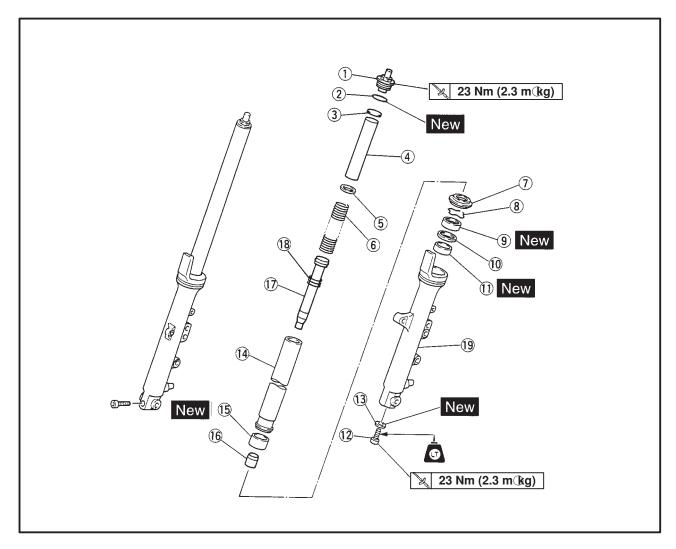

Order	Job/Part	Q'ty	Remarks
	Inner tubes Inner tube bushings Oil flow stoppers Damper rods Damper rod springs Outer tubes	2 2 2 2 2 -	Refer to "DISASSEMBLING/ ASSEMBLING THE FRONT FORK LEGS".  For assembly, reverse the disassembly procedure.

EAS00649

### **REMOVING THE FRONT FORK LEGS**

The following procedure applies to both of the front fork legs.


1. Stand the motorcycle on a level surface.




Securely support the motorcycle so that there is no danger of it falling over.

NOTE: -

Place the motorcycle on a suitable stand so that the front wheel is elevated.

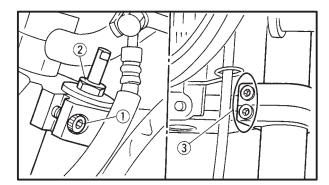

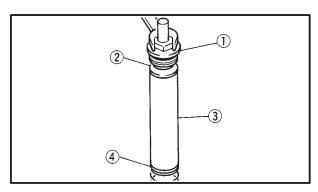

2. Loosen:

Oupper bracket pinch bolt (1)

©ap bolt ②

Oower bracket pinch bolt 3

### **A** WARNING

Before loosening the upper and lower bracket pinch bolts, support the front fork leg.

3. Remove:

**Front fork leg** 

EAS00653

### **DISASSEMBLING THE FRONT FORK LEGS**

The following procedure applies to both of the front fork legs.

1. Loosen the spring preload adjuster fully.

2. Remove:

cap bolt 1

plate 2

spacer 3


spring seat 4


**Spring** 

3. Drain

**Fork oil** 



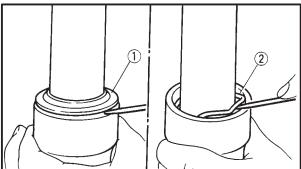

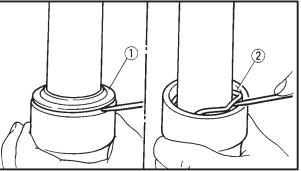

4. Remove:


(dust seal (1)

oil seal clip 2

(with a flat-head screwdriver)

### CAUTION:

Do not scratch the inner tube.

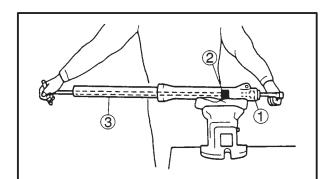

5. Remove:


damper rod bolt (1)

### NOTE: -

While holding the damper rod with the damper rod holder 2 and T-handle 3, loosen the damper rod bolt.



Damper rod holder (30 mm) 90890-01327 **T-Handle** 90890-01326

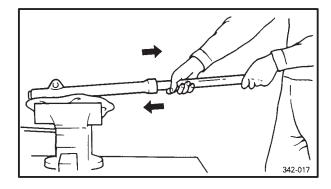

6. Remove:


Onner tube


- a. Hold the front fork leg horizontally.
- b. Securely clamp the brake caliper bracket in a vise with soft jaws.
- c. Separate the inner tube from the outer tube by pulling the inner tube forcefully but carefully.


### **CAUTION:**

- Excessive force will damage the oil seal and bushing. A damaged oil seal or bushing must be replaced.
- Avoid bottoming the inner tube into the outer tube during the above procedure, as the oil flow stopper will be damaged.



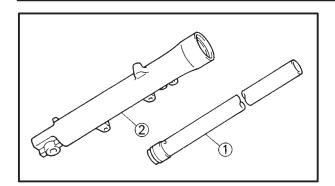

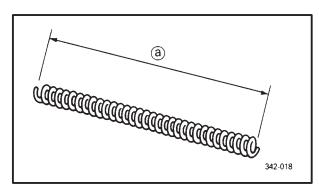

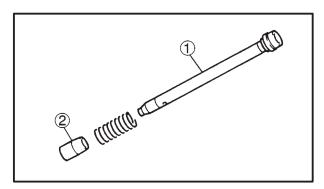

EAS00657

### **CHECKING THE FRONT FORK LEGS**

The following procedure applies to both of the front fork legs.

1. Check:

Onner tube (1)

Outer tube 2

Bends/damage/scratches → Replace.

### **A** WARNING

Do not attempt to straighten a bent inner tube as this may dangerously weaken it.

2. Measure:

spring free length (a)

Over the specified limit  $\rightarrow$  Replace.



Spring free length limit 395 mm

3. Check:

damper rod 1

Damage/wear → Replace.


Obstruction  $\rightarrow$  Blow out all of the oil passages with compressed air.

Damage → Replace.

### **CAUTION:**

The front fork leg has a built-in damper adjusting rod and a very sophisticated internal construction, which are particularly sensitive to foreign material.

When disassembling and assembling the front fork leg, do not allow any foreign material to enter the front fork.

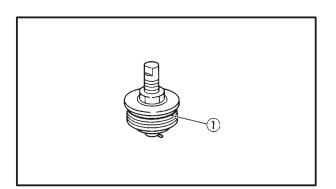

4. Check:

©ap bolt O-ring ①

Damage/wear → Replace.

EB703703

### ASSEMBLING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.

### **A** WARNING

- Make sure that the oil levels in both front fork legs are equal.
- Uneven oil levels can result in poor handling and a loss of stability.

#### NOTE: -

- When assembling the front fork leg, be sure to replace the following parts:
  - -inner tube bushing
  - -outer tube bushing
  - -oil seal
  - -dust seal
- Before assembling the front fork leg, make sure that all of the components are clean.



damper rod 1

### **CAUTION:**

Allow the damper rod to slide slowly down the inner tube ② until it protrudes from the bottom of the inner tube. Be careful not to damage the inner tube.

2. Lubricate:

Onner tube's outer surface



Recommended lubricant Yamaha fork and shock oil 10W or equivalent

3. Tighten:

damper rod bolt 1




Damper rod bolt 30 Nm (3.0 m⋅kg) LOCTITE®


NOTE: .

While holding the damper rod with the damper rod holder ② and T-handle ③, tighten the damper rod bolt.





Damper rod holder (30 mm) 90890-01327 T-handle 90890-01326

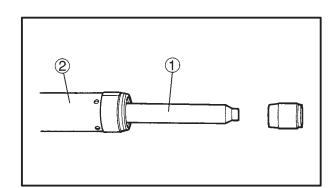


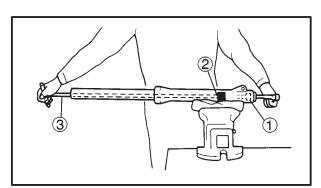




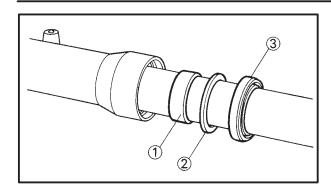

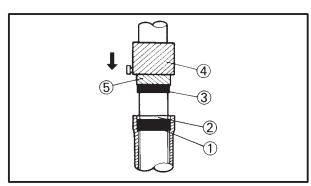

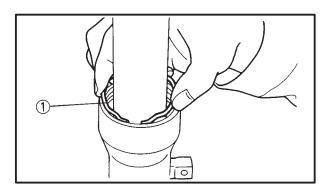

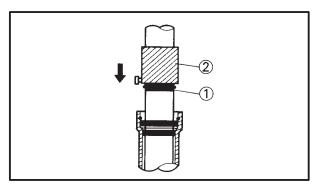

4. Install:

Outer tube bushing 1

(seal spacer 2)

(3) oil seal

(with the fork seal driver weight 4 and adapter 5)



Fork seal driver weight 90890-01367 Adapter 90890-01374

### **CAUTION:**

Make sure that the numbered side of the oil seal faces up.

### NOTE: —

Before installing the oil seal, apply lithium soap base grease onto its lips.

Apply fork oil onto the outer surface of the inner tube.

### 5. Install:

#### NOTE:

Adjust the oil seal clip so that it fits into the outer tube groove.

### 6. Install:

dust seal (1)

(with the fork seal driver weight) 2



- 7. Fully compress the front fork leg.
- 8. Fill:


Gront fork leg (with the specified amount of the recommended fork oil)



Quantity (each front fork leg) 538 cm<sup>3</sup> Recommended oil Fork oil 10w or equivalent

### **CAUTION:**

- Be sure to use the recommended fork oil. Other oils may have an adverse effect on front fork performance.
- When disassembling and assembling the front fork leg, do not allow any foreign material to enter the front fork.

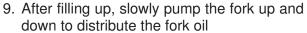

10. Measure:

(1) (a)

Out of specfication → Adjust.



### Oil level:

137 mm

(from the top of the inner tube fully compressed and without the fork spring)



#### NOTE: -

Hold the fork in an upright position.

11. Install:


**Fork spring** 


spring seat 1

spacer 2

(plate 3)


cap bolt 4

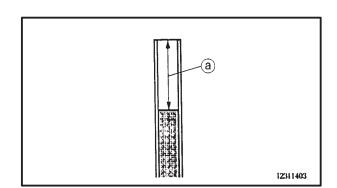


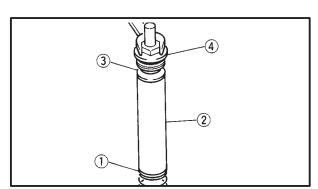

### NOTE: -

- Onstall the fork spring with its smaller pitch upward.
- Before installing the cap bolt, apply grease to the O-ring.
- Temporarily tighten the cap bolt.

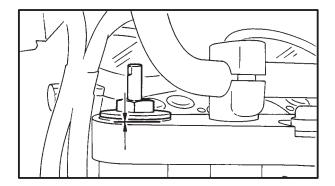

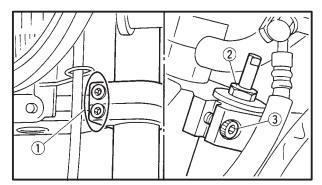

#### EAS0066

### **INSTALLING THE FRONT FORK LEGS**

The following procedure applies to both of the front fork legs.

#### 1. Install:

**Front fork leg** 

Temporarily tighten the upper and lower bracket pinch bolts.

#### NOTE: -

Make sure that the inner fork tube is flush with the top of the upper bracket.

### 2. Tighten:

Ower bracket pinch bolt 1

cap bolt 2

Oupper bracket pinch bolt 3



Lower bracket pinch bolt 23 Nm (2.3 m/kg) Cap bolt 23 Nm (2.3 m/kg) Upper bracket pinch bolt 30 Nm (3.0 m/kg)

### **A** WARNING


Make sure that the brake hoses are routed properly.

### 3. Adjust:


©spring preload adjusters (left and right)
Refer to "ADJUSTING THE FRONT FORK
LEGS" in chapter 3.



## HANDLEBAR

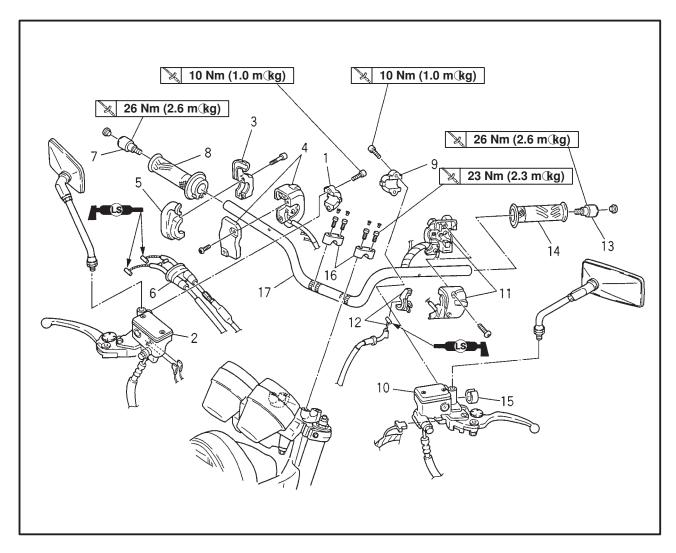

Order	Job/Part	Q'ty	Remarks
1 2 3 4 5 6 7 8 9 10 11	Removing the handlebar Master cylinder bracket Master cylinder (front brake) Throttle cable housing Handlebar switch (right) Throttle cable housing Throttle cables Grip end (right) Throttle grip Master cylinder bracket Master cylinder (clutch) Handlebar switch (left) Starter lever/Starter cable	1 1 1 - 1 1 - 2 1 - 1 1 - 1 1 -	Remove the parts in the order listed.  Refer to "REMOVING/INSTALLING THE HANDLEBAR".  Refer to "INSTALLING THE HANDLEBAR".
13	Grip end (left)	1	Refer to "INSTALLING THE HANDLEBAR".

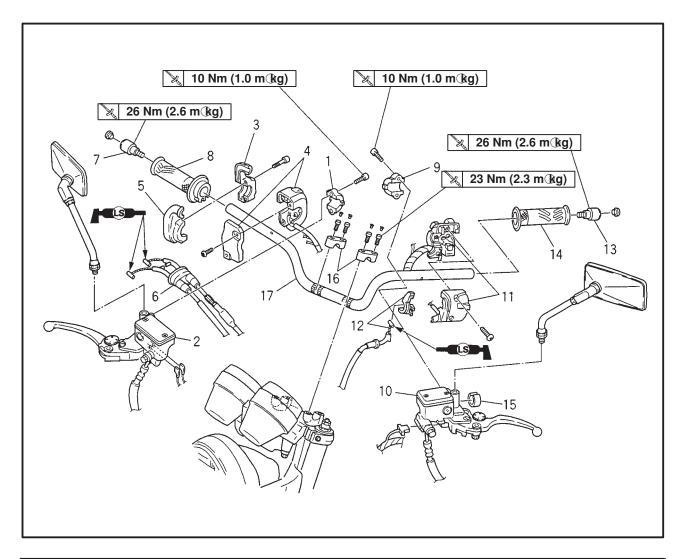

Order	Job/Part	Q'ty	Remarks
14 15 16 17	Handlebar grip Collar Upper handlebar holders Handlebar		Refer to "REMOVING THE HANDLEBAR".  Refer to "INSTALLING THE HANDLEBAR".  For installation, reverse the removal procedure.


EAS00666

### REMOVING THE HANDLEBAR

1. Stand the motorcycle on a level surface.



Securely support the motorcycle so that there is no danger of it falling over.

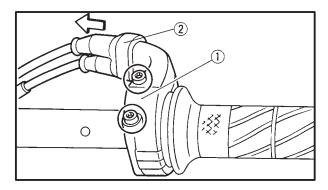


2. Remove:

Throttle cable housing 1

NOTE:

While removing the throttle cable housing, pull back the rubber cover ②.

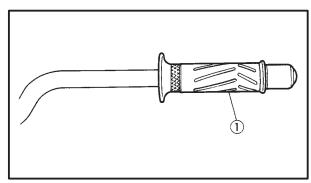


3. Remove:

nandlebar grip (left) 1

NOTE:

Blow compressed air between the handlebar and the handlebar grip, and gradually push the grip off the handlebar.

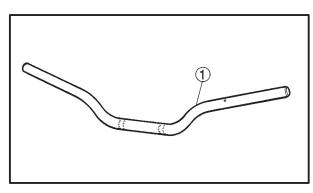

EAS00668

### **CHECKING THE HANDLEBAR**

1. Stand the motorcycle on a level surface.

**A** WARNING

Securely support the motorcycle so that there is no danger of it falling over.

2. Check:

(handlebar (1)

Bends/cracks/damage → Replace.

**A** WARNING

Do not attempt to straighten a bent handlebar as this may dangerously weaken it.

### **HANDLEBAR**

3. Install:

Chandlebar grip

- a. Apply a light coat of rubber adhesive onto the left end of the handlebar.
- b. Slide the handlebar grip over the left end of the handlebar.
- c. Wipe off any excess rubber adhesive with a clean rag.



Do not touch the handlebar grip until the rubber adhesive has fully dried.


EAS00671


### **INSTALLING THE HANDLEBAR**

1. Stand the motorcycle on a level surface.

### **A** WARNING

Securely support the motorcycle so that there is no danger of it falling over.

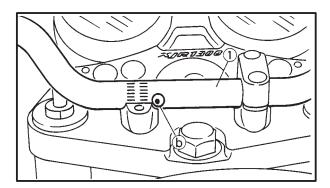

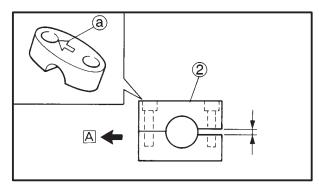

2. Install:

Onandlebar 1

Oupper handlebar holders (2)



Upper handlebar holder bolt 23 Nm (2.3 m⋅kg)

### **CAUTION:**

First, tighten the bolts on the front side of the handlebar holder, then on the rear side.

Turn the handlebar all the way to the left and right. If there is any contact with the fuel tank, adjust the handlebar position.


### NOTE: —

The upper handlebar holders should be installed with the arrows a facing forward  $\overleftarrow{A}$ .

Align the match marks **b** on the handlebar with the upper surface of the lower handlebar holders.

### THE HANDLEBAR



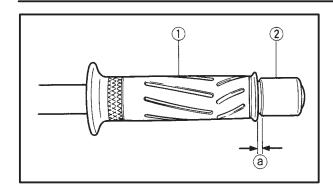


3. Install:

Onandlebar grip 1

Oeft grip end 2

NOTE: -

There should be 1  $\times$  3 mm of clearance ⓐ between the handlebar grip and the left grip end.

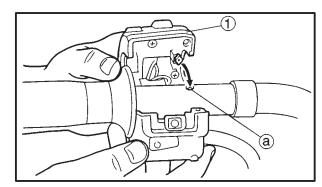


4. Install:

Oeft handlebar switch (1)

NOTE:

Align the pin on the left handlebar switch with the hole (a) in the handlebar.

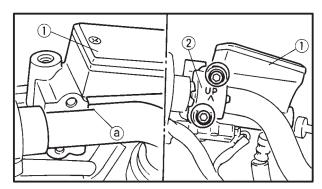


5. Install:

Onaster cylinder (clutch) 1

Omaster cylinder bracket (2)

NOTE: -

Align the mating surfaces of the master cylinder with the punch mark a on the handlebar.

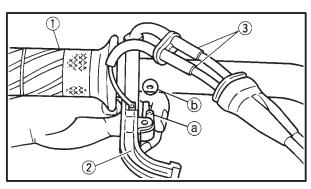

6. Install:

Throttle grip 1

Throttle cable housing (2)

Throttle cables 3

NOTE

Apply a thin coat of lithium soap base grease onto the inside of the throttle grip and install it onto the handlebar.



Make sure that the pin a on the throttle cable housing is aligned with the hole b in the handlebar.


7. Install:

(right grip end (1)

(2) gight handlebar switch


### **A** WARNING


Make sure that the throttle grip operates smoothly.

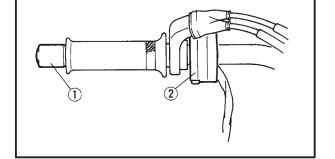

### THE HANDLEBAR



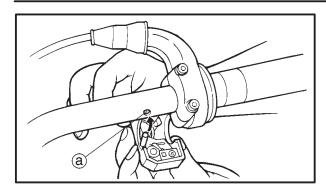

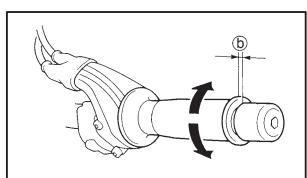

### NOTE: ——

- Align the pin on the right handlebar switch with the hole (a) in the handlebar.
- There should be  $1 \times 3$  mm of clearance b between the throttle grip and the right grip end.
- 8. Install:

master cylinder ass'y (front brake)

- 9. Adjust:
  - Othrottle cable free play Refer to "ADJUSTING THE THROTTLE CABLE FREE PLAY" in chapter 3.



Throttle cable free play (at the flange of the throttle grip)


 $3 \times 5 \text{ mm}$ 

### **STEERING HEAD**




EAS00676

### STEERING HEAD LOWER BRACKET

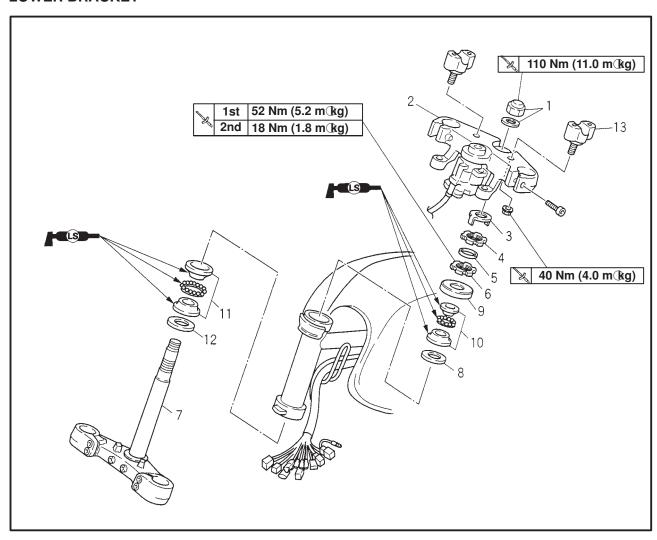

Order	Job/Part	Q'ty	Remarks
1 2 3 4 5 6 7 8 9	Removing the lower bracket Front wheel  Front fork Handlebar Steering stem nut/Washer Upper bracket Lock washer Upper ring nut Rubber washer Lower ring nut Lower bracket Rubber seal Bearing cover Bearing	1/1- 1 1 - 1 - 1 1 - 1	Remove the parts in the order listed. Refer to "FRONT WHEEL AND BRAKE DISCS". Refer to "FRONT FORK". Refer to "HANDLEBAR".  Refer to "INSTALLING THE STEERING HEAD".  Refer to "REMOVING THE LOWER BRACKET/INSTALLING THE STEERING HEAD".

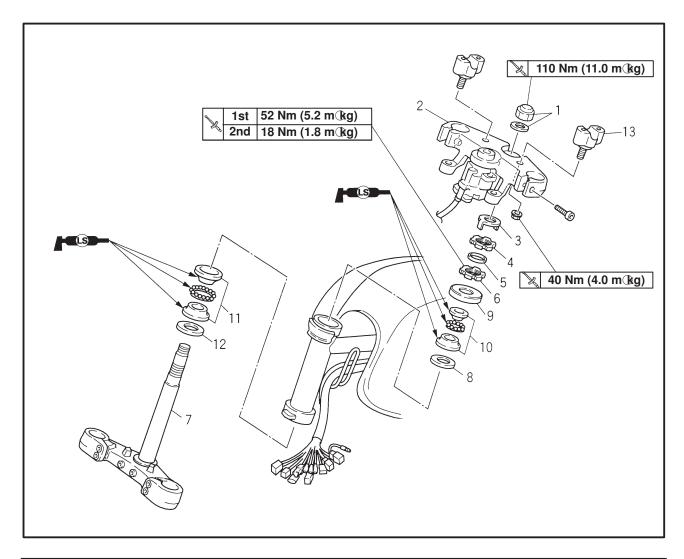

Order	Job/Part	Q'ty	Remarks
11 12 13	Bearing Dust seal Lower handlebar holders	1 1 2	For installation, reverse the removal procedure.

### STEERING HEAD



EAS00679

### **REMOVING THE LOWER BRACKET**

1. Stand the motorcycle on a level surface.



Securely support the motorcycle so that there is no danger of it falling over.

2. Remove:

Oupper ring nut 1

Oower ring nut 2




Hold the lower ring nut with the exhaust and steering nut wrench, then remove the upper ring nut with the ring nut wrench.



Exhaust and steering nut wrench 90890-01268 Ring nut wrench 90890-01403

### **A** WARNING

Securely support the lower bracket so that there is no danger of it falling.

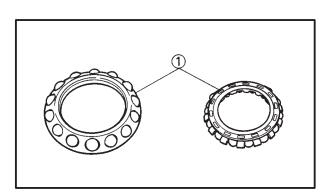

(2)

EAS00682

### **CHECKING THE STEERING HEAD**

1. Wash:

**Dearing** balls

Dearing races



Recommended cleaning solvent Kerosine

2. Check:

(bearing balls (1)

Damage/pitting → Replace.


3. Replace:


bearing balls


©bearing races

### STEERING HEAD



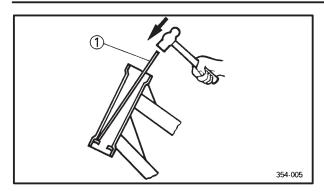

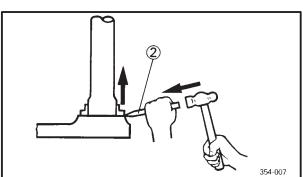

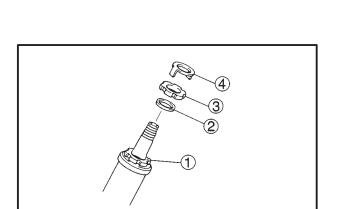

- a. Remove the bearing races from the steering head pipe with a long rod (1) and hammer.
- b. Remove the bearing race from the lower bracket with a floor chisel ② and hammer.
- c. Install a new dust seal and new bearing races.

### **CAUTION:**

If the bearing race is not installed properly, the steering head pipe could be damaged.

#### NOTE: -

- Always replace the bearing balls and bearing races as a set.
- Whenever the steering head is disassembled, replace the dust seal.

#### 4. Check:

- Oupper bracket
- Oower bracket

(along with the steering stem)

Bends/cracks/damage → Replace.

EAS00683

### **INSTALLING THE STEERING HEAD**

### 1. Lubricate:

- Oupper bearing
- Oower bearing
- **Dearing** races



### Recommended lubricant Lithium soap base grease

### 2. Install:

- Oower ring nut 1
- Oubber washer 2
- Oupper ring nut 3
- Oock washer 4

Refer to "INSPECTING THE STEERING HEAD" in chapter 3.

#### 3. Install:

- Oupper bracket
- Steering stem nut

#### NOTE: -

Temporarily tighten the steering stem nut.


### 4. Install:

- **Front fork legs** 
  - Refer to "FRONT FORK".


#### NOTE

Temporarily tighten the upper and lower bracket pinch bolts.

# REAR SHOCK ABSORBER, SWINGARM AND DRIVE CHAIN

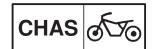


### REAR SHOCK ABSORBER, SWINGARM AND DRIVE CHAIN

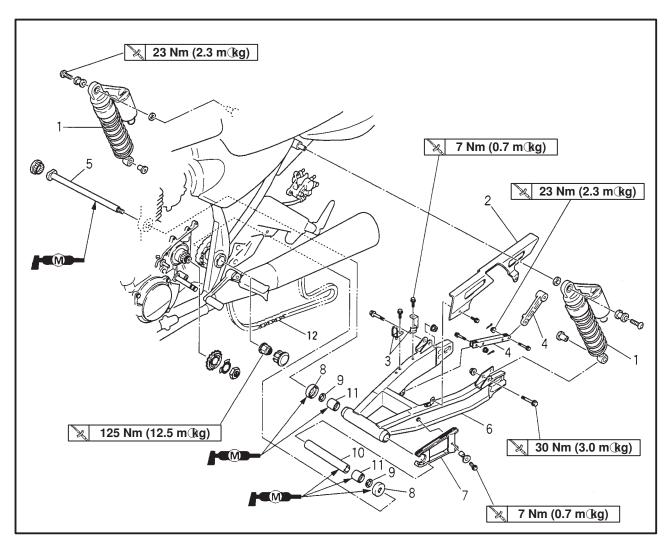

Order	Job/Part	Q'ty	Remarks
	Removing the rear shock absorber,		Remove the parts in the order listed.
	swingarm and drive chain. Rear wheel		Refer to "REAR WHEEL, BRAKEDISC AND REAR WHEEL SPROCKET".
	Drive sprocket		Refer to "ENGINE" in chapter 4.
1	Rear shock absorber (left/right)	1	•
2	Chain case	1	
3	Brake hose holders	2	
4	Tension bar/Caliper bracket	1/1	
5	Pivot shaft	1	
6	Swingarm	1	Refer to "REMOVING THE SWINGARM".
7	Drive chain guide	1	
8	Dust covers	2	
9	Washers	2	
10	Bush	1	

# REAR SHOCK ABSORBER, SWINGARM AND DRIVE CHAIN

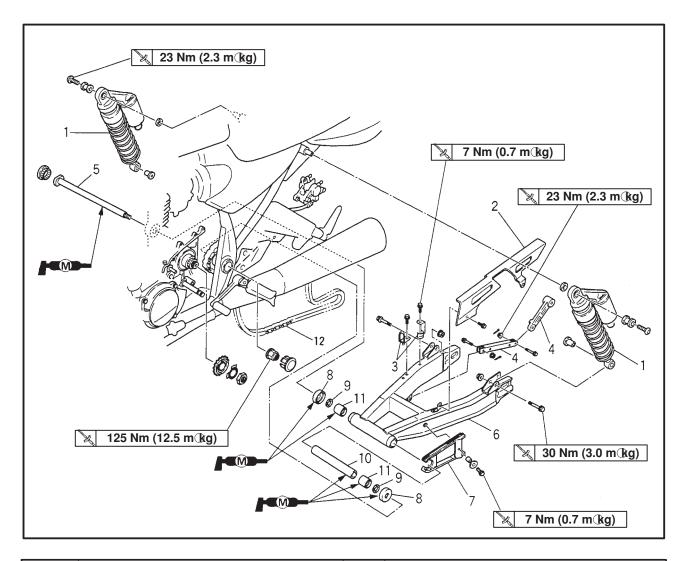

Order	Job/Part	Q'ty	Remarks
11 12	Bearings Drive chain	2	For installation, reverse the removal procedure.

### REAR SHOCK ABSORBER, SWINGARMAND DRIVE CHAIN




FAS0068

HANDLING THE REAR SHOCK ABSORBER AND GAS CYLINDER

### **A** WARNING

This rear shock absorber and gas cylinder contain highly compressed nitrogen gas. Before handling the rear shock absorber or gas cylinder, read and make sure you understand the following information. The manufacturer cannot be held responsible for property damage or personal injury that may result from improper handling of the rear shock absorber and gas cylinder.

- Do not tamper or attempt to open the rear shock absorber or gas cylinder.
- Do not subject the rear shock absorber or gas cylinder to an open flame or any other source of high heat. High heat can cause an explosion due to excessive gas pressure.
- Do not deform or damage the rear shock absorber or gas cylinder in any way. If the rear shock absorber, gas cylinder or both are damaged, damping performance will suffer.

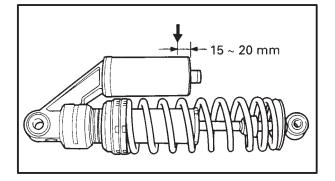

EAS00689

### DISPOSING OF A REAR SHOCK ABSORB-ER AND GAS CYLINDER


a. Gas pressure must be released before disposing of a rear shock absorber and gas cylinder. To release the gas pressure, drill a  $2 \times 3$  mm hole through the gas cylinder at a point  $15 \times 20$  mm from its end as shown.

### **WARNING**

Wear eye protection to prevent eye damage from released gas or metal chips.

### REAR SHOCK ABSORBER, SWINGARMAND DRIVE CHAIN



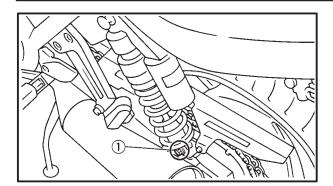

EAS00703

#### REMOVING THE SWINGARM

1. Stand the motorcycle on a level surface.

### **A** WARNING

Securely support the motorcycle so that there is no danger of it falling over.

### NOTE: -


Place the motorcycle on a suitable stand so that the rear wheel is elevated.

#### 2. Remove:

The ar shock absorber assembly lower bolt 1

#### NOTE

When removing the rear shock absorber assembly lower bolt, hold the swingarm so that it does not drop down.

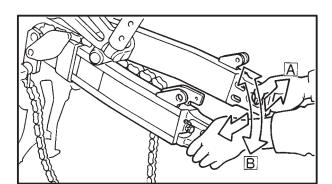

3. Check:

swingarm side play

**Swingarm vertical movement** 

a. Check the tightening torque of the pivot shaft nut.



### Pivot shaft nut 125 Nm (12.5 m/kg)

- b. Check the swingarm side play A by moving the swingarm from side to side.
- c. If the swingarm side play is out of specification, check the spacers, bearings, washers, and dust covers.




Swingarm side play (at the en of the swingarm)
0 mm

d. Check the swingarm vertical movement B by moving the swingarm up and down. If swingarm vertical movement is not smooth of if there is binding, check the spacers, bearings, washers, and dust covers.

### REAR SHOCK ABSORBER, SWINGARM AND DRIVE CHAIN



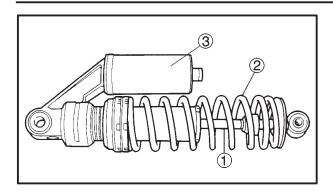

EAS0069

## CHECKING THE REAR SHOCK ABSORBER ASSEMBLY AND GAS CYLINDER

- 1. Check:
  - Oear shock absorber rod 1

Bends/damage  $\rightarrow$  Replace the rear shock absorber assembly.

Gear shock absorber

Gas leaks/oil leaks → Replace the rear shock absorber assembly.

spring (2)

Damage/wear → Replace the rear shock absorber assembly.

gas cylinder 3

Damage/gas leaks → Replace.

**D**ushings


Damage/wear → Replace.

**dust seals** 

Damage/wear → Replace.

**Poolts** 

Bends/damage/wear → Replace.

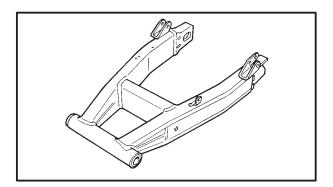


EAS00707

### **CHECKING THE SWINGARM**

- 1. Check:
  - **Swingarm**

Bends/cracks/damage → Replace.

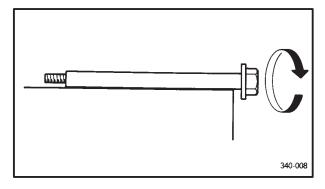

- 2. Check:
  - pivot shaft

Roll the pivot shaft on a flat surface.

Bends → Replace.

### **A** WARNING

Do not attempt to straighten a bent pivot shaft.


- 3. Wash:
  - pivot shaft
  - **dust covers**
  - **Spacer**
  - **Washers**
  - **Dearings**





Recommended cleaning solvent Kerosine


### REAR SHOCK ABSORBER, SWINGARM AND DRIVE CHAIN



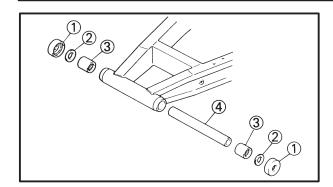

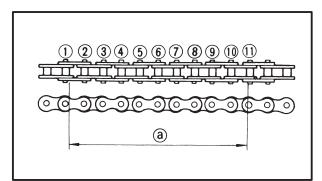

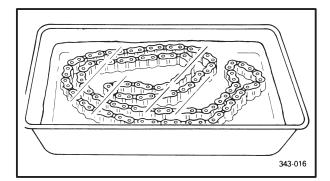

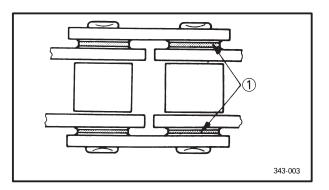

#### 4. Check:

(dust covers (1)

washers 2

Damage/Wear → Replace.

©bearings 3

Damage/Pitting → Replace.

(bush 4)

Damage/Scratches → Replace.

EAS00709

### **CHECKING THE DRIVE CHAIN**

1. Measure:

Out of specification → Replace the drive chain.



Ten-link drive chain section limit (maximum)
150 mm

### NOTE: \_

While measuring the ten-link section, push down on the drive chain to increase its tension.

Measure the length between drive chain roller 1 and 1 as shown.

Perform this measurement at two or three different places.

### 2. Check:

drive chain

Stiffness → Clean and lubricate or replace.

3. Clean:

drive chain

### a. Wipe the drive chain with a clean cloth.


- b. Put the drive chain in kerosine and remove any remaining dirt.
- c. Remove the drive chain from the kerosine and completely dry it.

### **CAUTION:**

This motorcycle has a drive chain with small rubber O-rings ① between the drive chain side plates. Never use high-pressure water or air, steam, gasoline, certain solvents (e.g., benzine), or a coarse brush to clean the drive chain. High-pressure methods could force dirt or water into the drive chain's internals, and solvents will deteriorate the O-rings. A coarse brush can also damage the O-rings. Therefore, use only kerosine to clean the drive chain.

### REAR SHOCK ABSORBER, SWINGARM AND DRIVE CHAIN



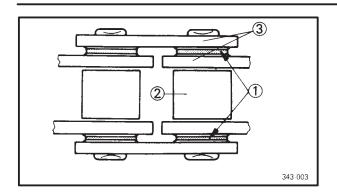

4. Check:

①-rings ①

Damage → Replace the drive chain.

Odrive chain rollers (2)

Damage/wear → Replace the drive chain.

Odrive chain side plates 3

Damage/wear → Replace the drive chain. Cracks → Replace the drive chain and make sure that the battery breather hose is properly routed away from the drive chain and below the swingarm.

5. Lubricate:

drive chain



Recommended lubricant Engine oil or chain lubricant suitable for O-ring chains

6. Check:

**drive** sprocket

Tear wheel sprocket


More than 1/4 tooth ⓐ wear  $\rightarrow$  Replace the drive chain sprockets as a set.


Bent teeth  $\rightarrow$  Replace the drive chain sprockets as a set.

(b) Correct

(1) Drive chain roller

(2) Drive chain sprocket

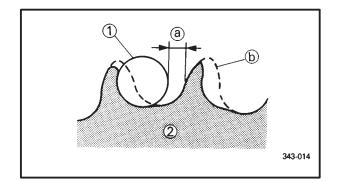

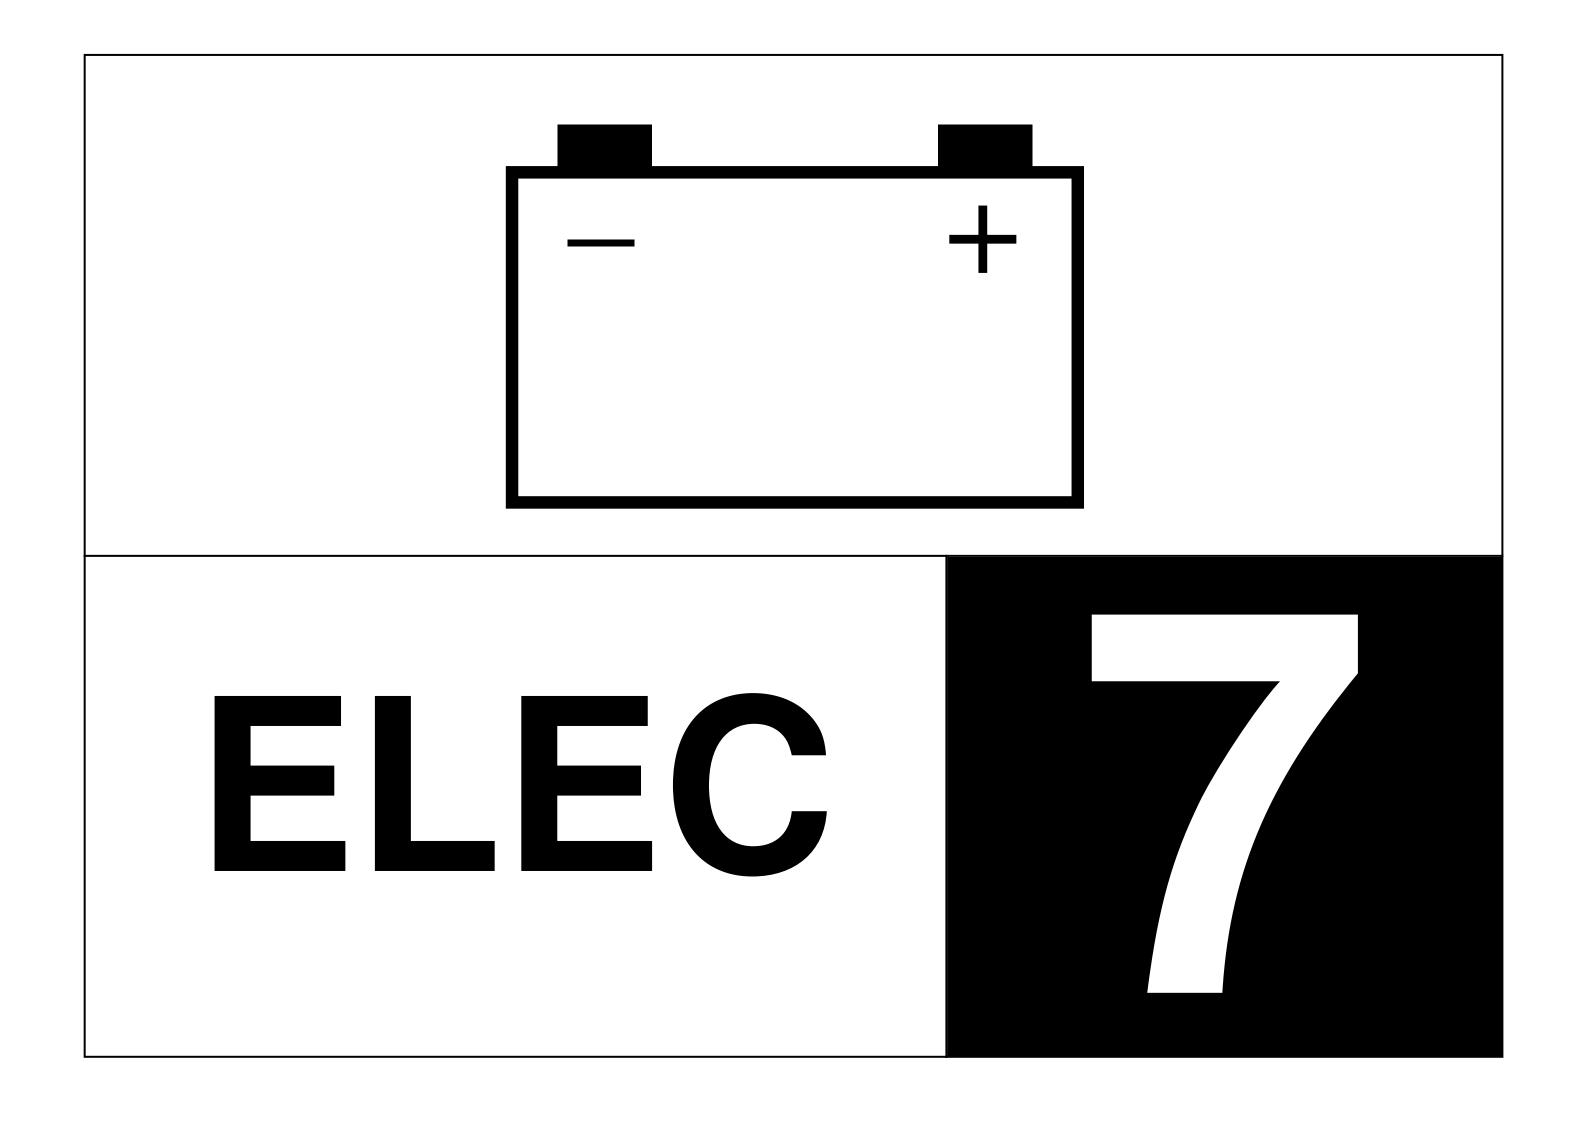



# CHAPTER 7. ELECTRICAL

ELECTRICAL COMPONENTS	7-1
SWITCHES CHECKING SWITCH CONTINUITY	
CHECKING THE SWITCHES	7-3
CHECKING THE BULBS AND BULB SOCKETS  TYPES OF BULBS  CHECKING THE CONDITION OF THE BULBS  CHECKING THE CONDITION OF THE BULB SOCKETS	7-5 7-5
IGNITION SYSTEM  CIRCUIT DIAGRAM  TROUBLESHOOTING	7-8
ELECTRIC STARTING SYSTEM  CIRCUIT DIAGRAM  STARTING CIRCUIT CUTOFF SYSTEM OPERATION  TROUBLESHOOTING  STARTER MOTOR	7-13 7-14 7-15
CHARGING SYSTEM  CIRCUIT DIAGRAM  TROUBLESHOOTING  A.C. GENERATOR	7-22 7-23
LIGHTING SYSTEM  CIRCUIT DIAGRAM  TROUBLESHOOTING  CHECKING THE LIGHTING SYSTEM	7-27 7-28
SIGNALING SYSTEM  CIRCUIT DIAGRAM  TROUBLESHOOTING  CHECKING THE SIGNALING SYSTEM	7-32 7-33
SELF-DIAGNOSIS	7-41 7-42

### **ELECTRICAL COMPONENTS**



EAS00729


### **ELECTRICAL**

### **ELECTRICAL COMPONENTS**

- 1 Main switch
- 2 Fuel sender3 Starter relay
- Starting circuit cutoff relayBattery
- 6 Oil level relay7 Flasher relay8 Ignitior unit


- 9 Neutral switch
- (10) Sidestand switch


- 11) Rear brake switch
- 12 Oil level switch
- 13 Horns
- 14 Ignition coils

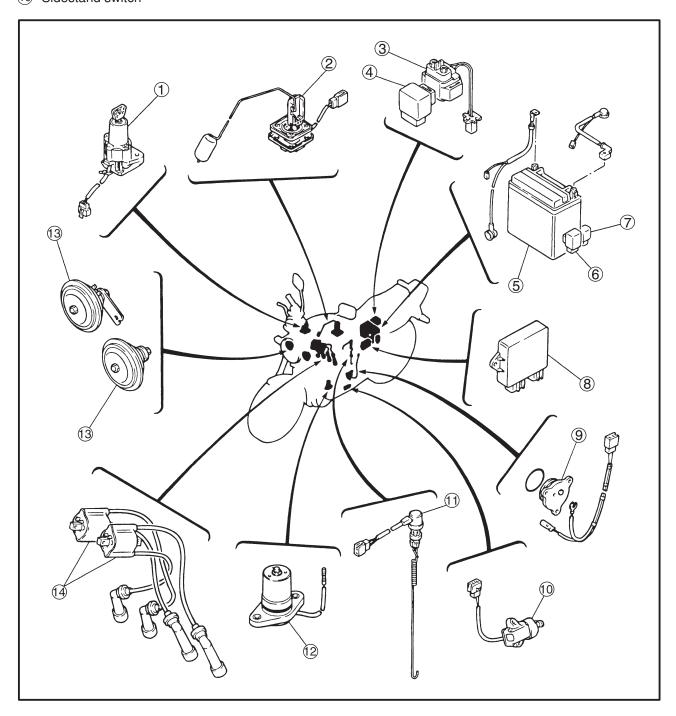

### **SWITCHES**



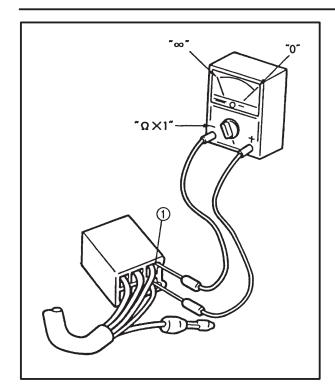

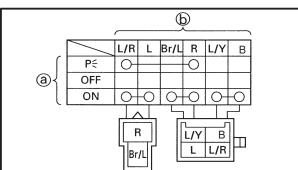

EAS0010

## SWITCHES CHECKING SWITCH CONTINUITY

Check each switch for continuity with the pocket tester. If the continuity reading is incorrect, check the wiring connections and if necessary, replace the switch.

### **CAUTION:**

Never insert the tester probes into the coupler terminal slots ①. Always insert the probes from the opposite end of the coupler, taking care not to loosen or damage the leads.



## Pocket tester 90890-03112

### NOTE: -

- Before checking for continuity, set the pocket tester to "0" and to the " $\Omega \times 1$ " range.
- When checking for continuity, switch back and forth between the switch positions a few times.

The terminal connections for switches (e.g., main switch, engine stop switch) are shown in an illustration similar to the one on the left.

The switch positions ⓐ are shown in the far left column and the switch lead colors ⓑ are shown in the top row in the switch illustration.

### NOTE: -

"O indicates a continuity of electricity between switch terminals (i.e., a closed circuit at the respective switch position).

## The example illustration on the left shows that:

There is continuity between blue/red and red when the switch is set to "P≤".

There is continuity between blue/red and blue, between brown/blue and red, and between blue/yellow and black when the switch is set to "ON".

### **CHECKING THE SWITCHES**



EAS00731


### **CHECKING THE SWITCHES**

Check each switch for damage or wear, proper connections, and also for continuity between the terminals. Refer to "CHECKING SWITCH CONTINUITY".

Damage/wear → Repair or replace the switch.

Improperly connected → Properly connect.

Incorrect continuity reading → Replace the switch.

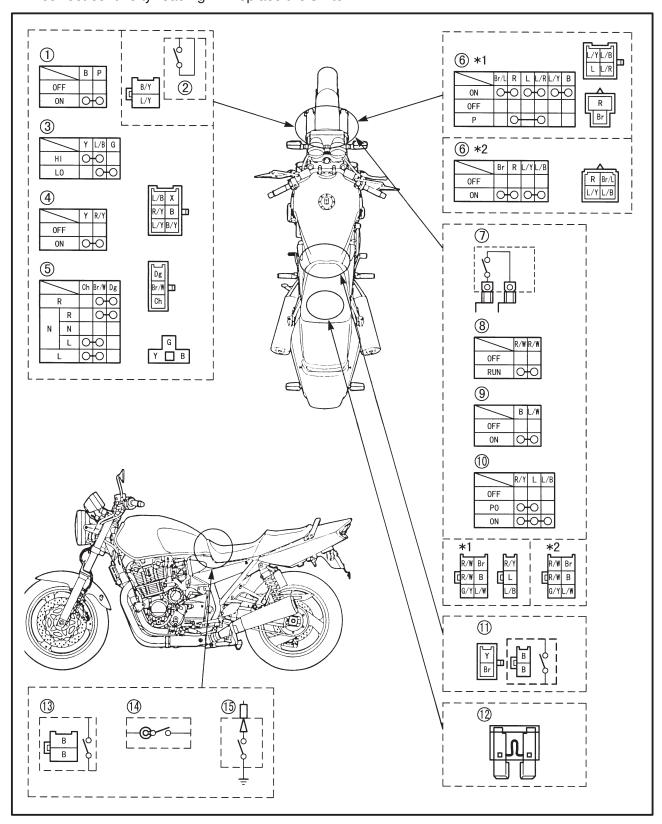

### **CHECKING THE SWITCHES**



- 1 Horn switch
  2 Clutch switch
  3 Dimmer switch
  4 Pass switch
  5 Turn signal switch
  6 Main switch
  7 Front brake switch
  8 Engine stop switch
- 9 Start switch
- 10 Lights switch (for Europe)11 Rear brake switch
- 12 Fuse
- 13 Side stand switch
- 14 Neutral switch
- (15) Oil level switch
- \*1: for Europe \*2: for AUS

### CHECKING THE BULBS AND BULB SOCKETS




EAS00732


## CHECKING THE BULBS AND BULB SOCKETS

Check each bulb and bulb socket for damage or wear, proper connections, and also for continuity between the terminals.

Damage/wear → Repair or replace the bulb, bulb socket or both.

Improperly connected  $\rightarrow$  Properly connect. Incorrect continuity reading  $\rightarrow$  Repair or replace the bulb, bulb socket or both.

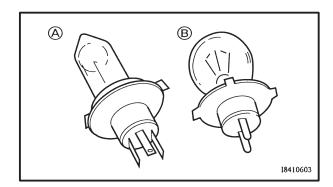

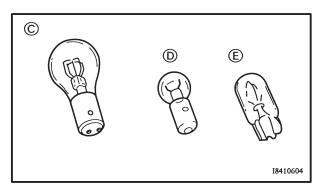

#### TYPES OF BULBS

The bulbs used on this motorcycle are shown in the illustration on the left.

- Bulbs (A) and (B) are used for headlights and usually use a bulb holder which must be detached before removing the bulb. The majority of these bulbs can be removed from their respective socket by turning them counterclockwise.
- Bulb © is used for turn signal and tail/brake lights and can be removed from the socket by pushing and turning the bulb counterclockwise.
- Bulbs D and E are used for meter and indicator lights and can be removed from their respective socket by carefully pulling them out.

## CHECKING THE CONDITION OF THE BULBS

The following procedure applies to all of the bulbs.

1. Remove:

### CHECKING THE BULBS AND BULB SOCKETS


ELEC - +

### **A** WARNING

Since the headlight bulb gets extremely hot, keep flammable products and your hands away from the bulb until it has cooled down.

### **CAUTION:**

- Be sure to hold the socket firmly when removing the bulb. Never pull the lead, otherwise it may be pulled out of the terminal in the coupler.
- Avoid touching the glass part of the headlight bulb to keep it free from oil, otherwise the transparency of the glass, the life of the bulb and the luminous flux will be adversely affected. If the headlight bulb gets soiled, thoroughly clean it with a cloth moistened with alcohol or lacquer thinner.

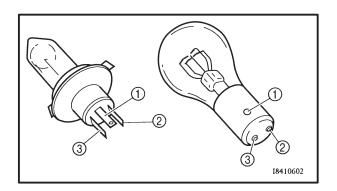

#### 2. Check:

Dult (for continuity)(with the pocket tester)No continuity → Replace.



Pocket tester 90890-03112

### NOTE: \_

Before checking for continuity, set the pocket tester to "0" and to the " $\Omega \times 1$ " range.

- a. Connect the tester positive probe to terminal 

  1 and the tester negative probe to terminal
  - (2), and check the continuity.
- b. Connect the tester positive probe to terminal
  - 1 and the tester negative probe to terminal
  - (3), and check the continuity.
- c. If either of the readings indicate no continuity, replace the bulb.

### CHECKING THE BULBS AND BULB SOCKETS



## CHECKING THE CONDITION OF THE BULB SOCKETS

The following procedure applies to all of the bulb sockets.

1. Check:

Dulb socket (for continuity)(with the pocket tester)No continuity → Replace.



Pocket tester 90890-03112

### NOTE: -

Check each bulb socket for continuity in the same manner as described in the bulb section; however, note the following.

- a. Install a good bulb into the bulb socket.
- b. Connect the pocket tester probes to the respective leads of the bulb socket.
- c. Check the bulb socket for continuity.


  If any of the readings indicate no continuity, replace the bulb socket.

### **IGNITION SYSTEM**



EAS00735

## IGNITION SYSTEM CIRCUIT DIAGRAM

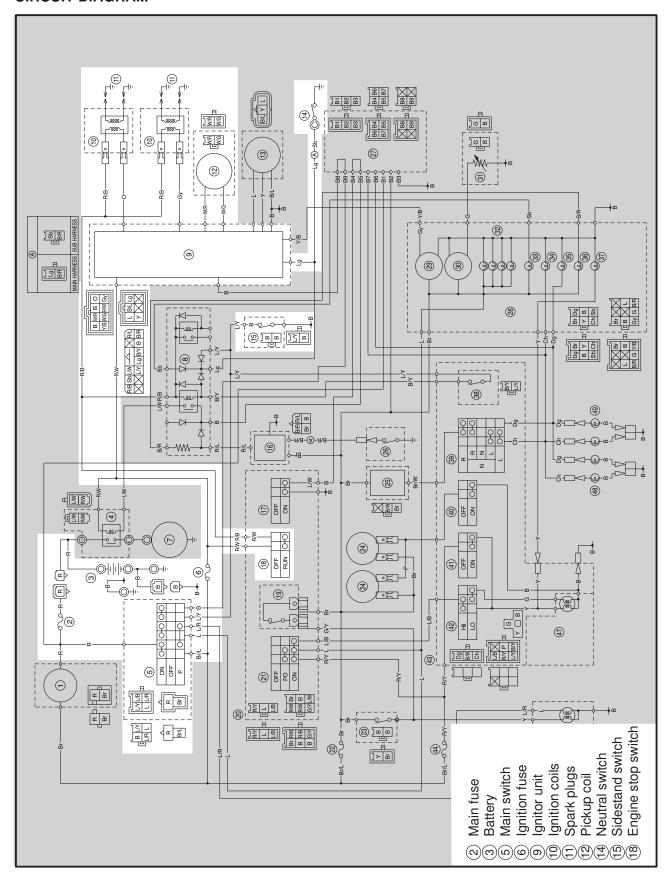

### **IGNITION SYSTEM**



FAS00737

#### **TROUBLESHOOTING**

The ignition system fails to operate (no spark or intermittent spark).

### Check:

- 1. main and ignition fuses
- 2. battery
- 3. spark plugs
- 4. ignition spark gap
- 5. spark plug cap resistance
- 6. ignition coil resistance
- 7. pickup coil resistance
- 8. main switch
- 9. engine stop switch
- 10. neutral switch
- 11. sidestand switch
- 12. wiring (of the entire ignition system)

### NOTE: -

Before troubleshooting, remove the following part(-s):

- 1) seat
- 2) fuel tank
- 3) headlight unit
- 4) side cover (left)
- Troubleshoot with the following special tool(-s).



Ignition checker 90890-06754 Pocket tester 90890-03112

EAS00738

1. Main and ignition fuses

Check the main and ignition fuses for continuity.

Refer to "CHECKING THE FUSES" in chapter 3.

Are the main and ignition fuses OK?



YES



NO

Replace the fuse(-s).

EAS00739

### 2. Battery

©heck the condition of the battery.

Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.



Min. open-circuit voltage 12.8 V or more at 20°C

Os the battery OK?





NO

Clean the battery terminals.

Recharge or replace the battery.

EAS00741

### 3. Spark plugs

The following procedure applies to all of the spark plugs.

- Theck the condition of the spark plug.
- Check the spark plug type.
- Measure the spark plug gap.

Refer to "CHECKING THE SPARK PLUGS" in chapter 3.



Standard spark plug DPR 8EA-9 (NGK) X24EPR-U9 (DENSO) Spark plug gap 0.8 ~ 0.9 mm

Os the spark plug in good condition, is it of the correct type, and its gap within specification?





Re-gap or replace the spark plug.

### **IGNITION SYSTEM**




FAS00743

### 4. Ignition spark gap

The following procedure applies to all of the spark plugs.

- Disconnect the spark plug cap from the spark plug.
- Connect the ignition checker (1) as shown.
- 2 Spark plug cap
- Set the main switch to "ON".
- Measure the ignition spark gap (a).
- Crank the engine by pushing the start switch and gradually increase the spark gap until a misfire occurs.

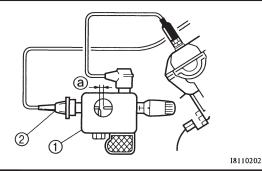



## Min. ignition spark gap 6 mm

Os there a spark and is the spark gap within specification?



NO



YES


The ignition system is OK.

EAS00745

### 5. Spark plug cap resistance

The following procedure applies to all of the spark plug caps.

- Disconnect the spark plug cap from the spark plug.
- Connect the pocket tester ( $\Omega \times 1k$ ) to the spark plug cap as shown.
- Measure the spark plug cap resistance.

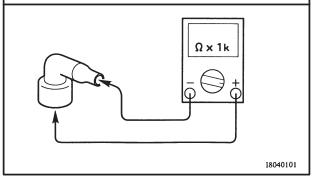



## Spark plug cap resistance 10 kΩ at 20°C

Os the spark plug cap OK?





NO

Replace the spark plug cap.


EAS00747

### 6. Ignition coil resistance

The following procedure applies to all of the ignition coils.

- Disconnect the ignition coil connectors from the ignition coil terminals.
- Connect the pocket tester ( $\Omega \times 1$ ) to the ignition coil as shown.

Tester positive probe → red/black Tester negative probe → orange (gray)

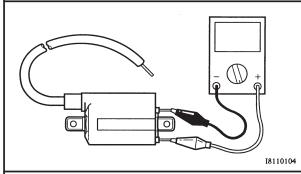

Measure the primary coil resistance.



## Primary coil resistance 1.9 $\sim$ 2.9 $\Omega$ at 20°C

- Connect the pocket tester ( $\Omega \times 1k$ ) to the ignition coil as shown.
- Measure the secondary coil resistance.

Tester positive probe →


spark plug lead (1)

Tester negative probe →

spark plug lead (2)

### **IGNITION SYSTEM**



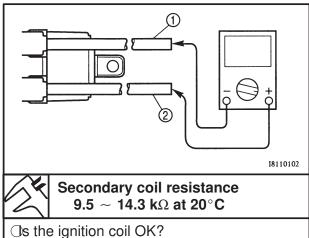

gnition coil OK?

YES


NO

Replace the ignition coil.

EAS00748

- 7. Pickup coil resistance
- Disconnect the pickup coil coupler from the wire harness.
- Connect the pocket tester ( $\Omega \times 100$ ) to the pickup coil terminal.

Tester positive probe  $\rightarrow$  white/red ① Tester negative probe  $\rightarrow$  white/green ②

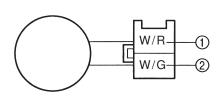

Measure the pickup coil resistance.



Pickup coil resistance 248  $\sim$  372  $\Omega$  at 20 $^{\circ}$ C (between white/red and white/green)

Os the pickup coil OK?





Replace the pickup coil.


EAS00749

8. Main switch

©heck the main switch for continuity.

Refer to "CHECKING THE SWITCHES".

Os the main switch OK?

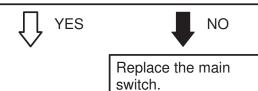


EAS00750

9. Engine stop switch

Check the engine stop switch for continuity. Refer to "CHECKING THE SWITCHES".


Os the engine stop switch OK?

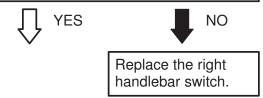

EAS00751

10. Neutral switch


Check the neutral switch for continuity. Refer to "CHECKING THE SWITCHES". Os the neutral switch OK?

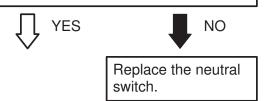

EAS0075

11. Sidestand switch

©heck the sidestand switch for continuity. Refer to "CHECKING THE SWITCHES". Os the sidestand switch OK?

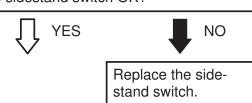

## **IGNITION SYSTEM**



EAS00754

### 13. Wiring

©heck the entire ignition system's wiring. Refer to "CIRCUIT DIAGRAM".

Os the ignition system's wiring properly connected and without defects?



NO




Properly connect or repair the ignition system's wiring.

Replace the ignitor unit.




EAS00755

# ELECTRIC STARTING SYSTEM CIRCUIT DIAGRAM

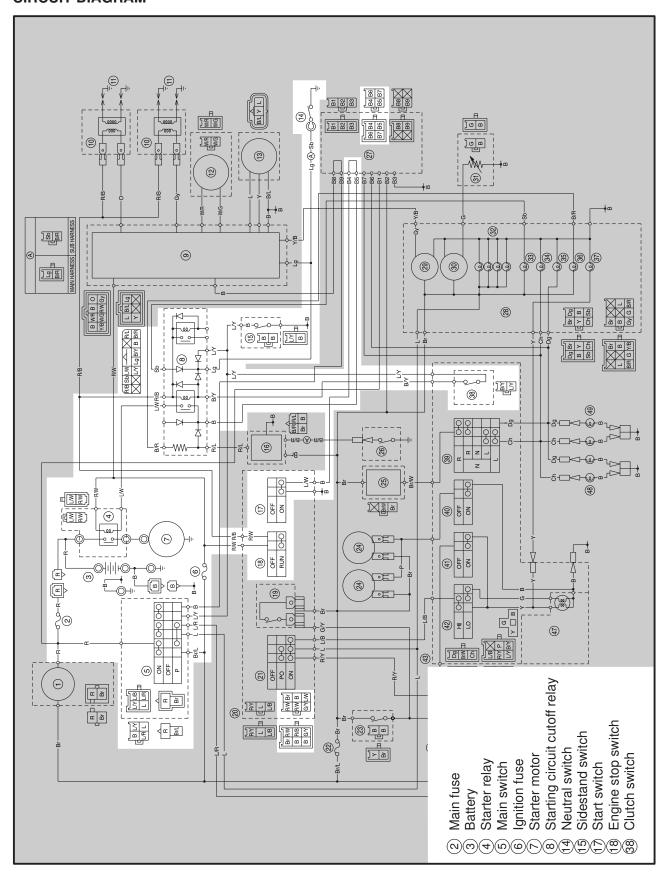



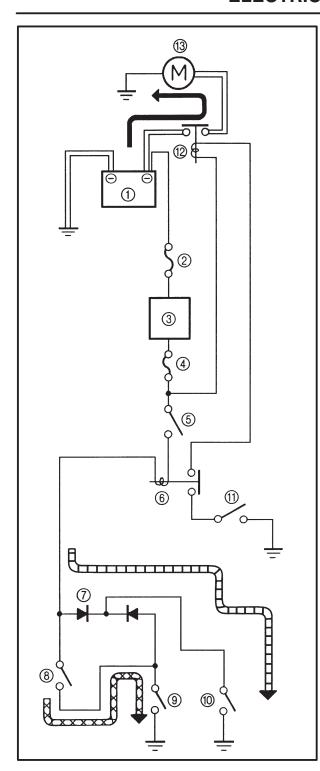

EAS00756

### STARTING CIRCUIT CUTOFF SYSTEM **OPERATION**

If the engine stop switch is set to "()" and the main switch is set to "ON" (both switches are closed), the starter motor can only operate if at least one of the following conditions is met:

- The transmission is in neutral (the neutral switch is closed).
- The clutch lever is pulled to the handlebar (the clutch switch is closed) and the sidestand is up (the sidestand switch is closed).

The starting circuit cutoff relay prevents the starter motor from operating when neither of these conditions has been met. In this instance, the starting circuit cutoff relay is open so current cannot reach the starter motor. When at least one of the above conditions has been met the starting circuit cutoff relay is closed and the engine can be started by pressing the start switch.



WHEN THE TRANSMISSION IS IN **NEUTRAL** 



WHEN THE SIDESTAND IS UP AND THE CLUTCH LEVER IS PULLED TO THE HANDLEBAR

- (1) Battery
- (2) Main fuse
- (3) Main switch
- (4) Ignition fuse
- (5) Engine stop switch
- (6) Starting circuit cutoff relay
- (7) Diode
- (8) Clutch switch
- (9) Sidestand switch
- 10 Neutral switch
- (11) Start switch
- 12 Starter relay
- (13) Starter motor



EAS00757

### **TROUBLESHOOTING**

### The starter motor fails to turn.

### Check:

- 1. main and ignition fuses
- 2. battery
- 3. starter motor
- 4. starting circuit cutoff relay
- 5. diode
- 6. starter relay
- 7. main switch
- 8. engine stop switch
- 9. neutral switch
- 10. sidestand switch
- 11. clutch switch
- 12. start switch
- 13. wiring (of the entire starting system)

### NOTE: -

Before, troubleshooting, remove the following part(-s):

- 1) seat
- 2) fuel tank
- 3) headlight unit
- Troubleshoot with the following special tool(-s).



# Pocket tester 90890-03112

EAS0073

1. Main and ignition fuses

Check the main and ignition fuses for continuity

Refer to "CHECKING THE FUSES" in chapter 3

Are the main and ignition fuses OK?





Replace the fuse(-s).

EAS00739

### 2. Battery

©heck the condition of the battery.

Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.



Open-circuit voltage 12.8 V or more at 20°C

Os the battery OK?






©lean the battery terminals.

Recharge or replace the battery.

EAS00758

### 3. Starter motor

Connect the battery positive terminal 1 and starter motor lead 2 with a jumper lead 3.

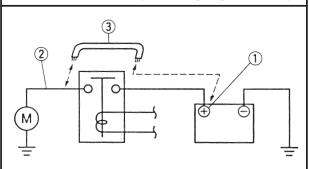

# **A** WARNING

A wire that is used as a jumper lead must have at least the same capacity of the battery lead, otherwise the jumper lead may burn.

This check is likely to produce sparks, therefore make sure that no flammable gas or fluid is in the vicinity.

Does the starter motor turn?





Repair or replace the starter motor.

ELEC - +

EAS00759

### 4. Starting circuit cutoff relay


Disconnect the relay unit from the coupler.

Connect the pocket tester ( $\Omega \times 1$ ) and battery (12 V) to the relay unit terminals as shown.

Battery positive terminal  $\rightarrow$  red/black ① Battery negative terminal  $\rightarrow$ 

black/yellow (2)

Tester positive probe → blue/white ③ Tester negative probe → black ④

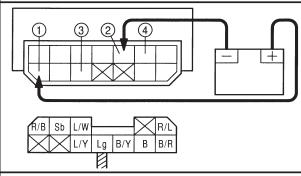

Does the starting circuit cutoff relay have continuity between black and blue/white?





NO

Replace the relay unit.

FAS00760

### 5. Diode

Disconnect the starting circuit cutoff relay from the coupler.

Connect the pocket tester ( $\Omega \times 1$ ) to the starting circuit cutoff relay terminals as shown.

Measure the starting circuit cutoff relay for continuity as follows.

black/yellow (2)


Tester positive probe → light green ①

Tester negative probe →

Continuity

Tester positive probe →
black/yellow②
Tester negative probe →
light green ①

No continuity

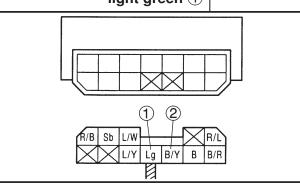

### NOTE: -

When you switch the "-" and "+" leads of the digital pocket tester the readings in the above chart will be reversed.

Are the tester readings correct?





Replace the relay unit.



EAS00761


### 6. Starter relay

Disconnect the starter relay from the coupler. Connect the pocket tester ( $\Omega \times 1$ ) and battery (12 V) to the starter relay coupler as shown.

Battery positive terminal  $\rightarrow$  red/white ① Battery negative terminal  $\rightarrow$ 

blue/white (2)

Tester positive probe → red ③
Tester negative probe → black ④

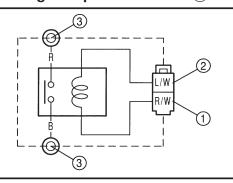

Does the starter relay have continuity between red and black?





Replace the starter relay.

EAS00749

### 7. Main switch

Check the main switch for continuity.

Refer to "CHECKING THE SWITCHES".

Os the main switch OK?





Replace the main switch.

-AS00750

### 8. Engine stop switch

©heck the engine stop switch for continuity. Refer to "CHECKING THE SWITCHES". Os the engine stop switch OK?





Replace the right handlebar switch.

EAS0075

### 9. Neutral switch

©heck the neutral switch for continuity.

Refer to "CHECKING THE SWITCHES".

Os the neutral switch OK?





Replace the neutral switch.

EAS00752

### 10. Sidestand switch

©heck the sidestand switch for continuity. Refer to "CHECKING THE SWITCHES". Os the sidestand switch OK?





Replace the sidestand switch.

EAS00763

### 11. Clutch switch

©heck the clutch switch for continuity.

Refer to "CHECKING THE SWITCHES".

Os the clutch switch OK?






NO

Replace the clutch switch.



EAS00764

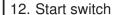

©heck the start switch for continuity. Refer to "CHECKING THE SWITCHES".

Os the start switch OK?



YES



Replace the right handlebar switch.

EAS00766

### 13. Wiring

Theck the entire starting system's wiring. Refer to "CIRCUIT DIAGRAM".

Os the starting system's wiring properly connected and without defects?



NO




YES

Properly connect or repair the starting system's wiring.

The starting system circuit is OK.


ELEC - +


## STARTER MOTOR

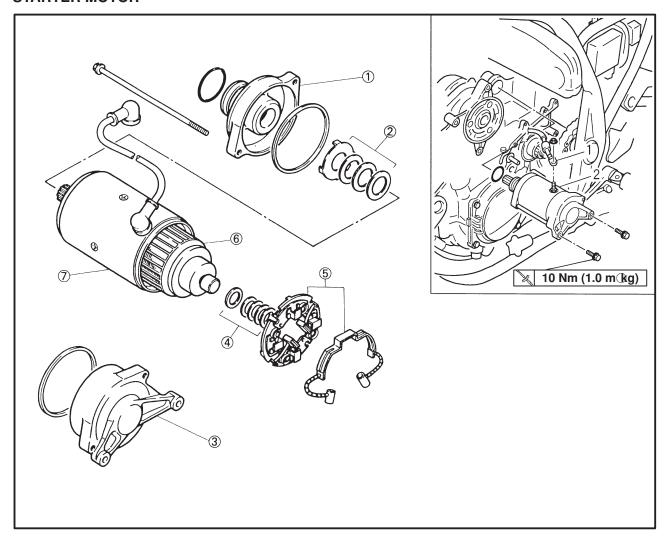

Order	Job/Part	Q'ty	Remarks
1 2	Removing the starter motor Starter motor lead Starter motor assembly	1	Remove the parts in the order listed.  For installation, reverse the removal procedure.
1234567	Disassembling the starter motor Starter motor front cover Washer set Starter motor rear cover washer set Brush holder/brush Armature assembly Starter motor yoke	1 1 1 1/1 1/1	Disassembly the pats in the order listed.  For assembly, reverse the disassembly procedure



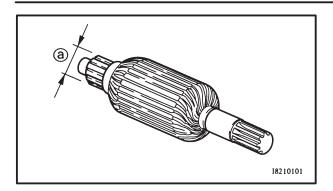

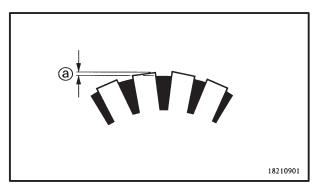

EAS00769

### **Checking The Starter Motor**

1. Check:

**C**ommutator

Dirt → Clean with 600 grit sandpaper.

2. Measure:

commutator diameter (a)

Out of specification  $\rightarrow$  Replace the starter motor.



# Min. commutator diameter 27 mm

### 3. Measure:

mica undercut (a)


Out of specification  $\rightarrow$  Scrape the mica to the proper measurement with a hacksaw blade which has been grounded to fit the commutator.



### Mica undercut 0.7 mm

### NOTE: -

The mica must be undercut to ensure proper operation of the commutator.

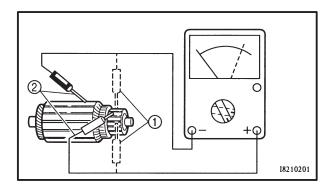

### 4. Measure:

armature assembly resistances (commutator and insulation)

Out of specification  $\rightarrow$  Replace the starter motor.

a. Measure the armature assembly resistances with the pocket tester.




Pocket tester 90890-03112



Armature assembly Commutator resistance ①  $0.025 \sim 0.035~\Omega$  at  $20^{\circ}$ C Insulation resistance ② Above 1 M $\Omega$  at  $20^{\circ}$ C

b. If any resistance is out of specification, replace the starter motor.



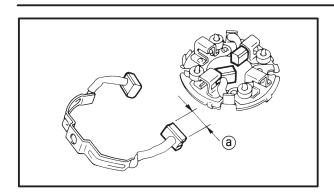


### 5. Measure:

**(brush length (a)** 

Out of specification  $\rightarrow$  Replace the brushes as a set.



Min. brush length 5 mm

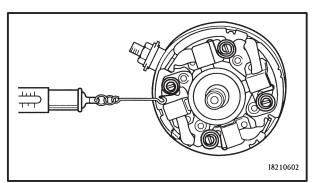

### 6. Measure:

**O**brush spring force

Out of specification  $\rightarrow$  Replace the brush springs as a set.



**Brush spring force** 

 $7.65 \sim 10.01 \text{ N} (0.780 \sim 1.021 \text{ kg})$ 

### 7. Check:


gear teeth

Damage/wear → Replace the gear.

### 8. Check:

**oil** seal

 $\label{eq:defective_part} \mbox{Damage/wear} \ \rightarrow \ \mbox{Replace the defective} \\ \mbox{part(-s)}.$ 

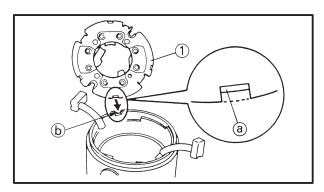

### EAS00772


### **Assembling The Starter Motor**

1. Install:

Obrush holder (1)

NOTE:

Align the tab (a) on the brush holder with the slot (b) in the starter motor rear cover.

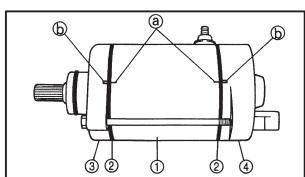

### 2. Install:

starter motor yoke 1

①-rings ② New

starter motor front cover 3


starter motor rear cover 4

**O**polts

🗽 5 Nm (0.5 m(kg)


### NOTE: -

Align the match marks (a) on the starter motor yoke with the match marks (b) on the front and rear covers.

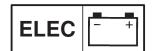

B804000

# CHARGING SYSTEM CIRCUIT DIAGRAM

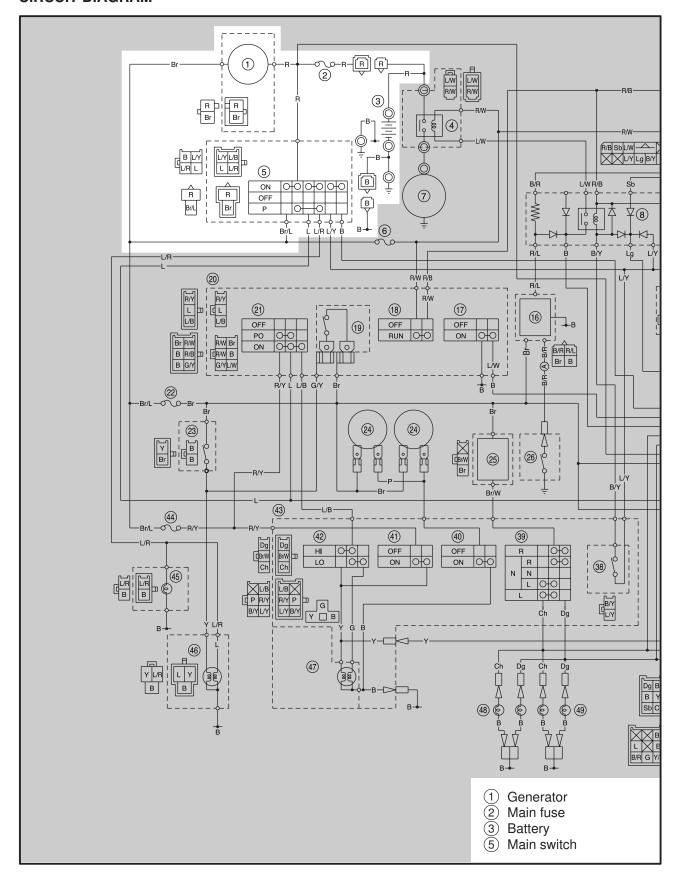



EAS00774

### **TROUBLESHOOTING**

### The battery is not being charged.

### Check:

- 1. main fuse
- 2. battery
- 3. charging voltage
- 4. startor coil assembly resistance
- 5. brush check
- 6. field coil resistance
- 7. main switch
- 8. wiring (of the entire charging system)

### NOTE:

- Before troubleshooting, remove the following part(-s):
- 1) seat
- 2) fuel tank
- 3) headlight unit
- Troubleshoot with the following special tool(-s).



Engine tachometer 90890-03113 Pocket tester 90890-03112

EAS00738

### 1. Main fuse

©heck the main fuse for continuity. Refer to "CHECKING THE FUSES" in chapter 3.

Os the main fuse OK?



YES



NO

Replace the fuse.

EAS00739

### 2. Battery

©heck the condition of the battery.

Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.



Open-circuit voltage 12.8 V or more at 20°C

Os the battery OK?





NO

©lean the battery terminals.

Recharge or replace the battery.

EAS00775

### 3. Charging voltage


Connect the engine tachometer to the spark plug lead of cylinder #1.

Connect the pocket tester (DC 20 V) to the battery as shown.

### Tester positive probe →

 $\mbox{ battery positive terminal } \label{eq:battery positive} \mbox{ Tester negative probe } \rightarrow$ 

battery negative terminal

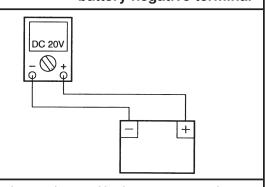

Start the engine and let it run at approximately 5,000 r/min.

Measure the charging voltage.



Charging voltage 14 V at 5,000 r/min

NOTE: -

Make sure that the battery is fully charged.

Os the charging voltage within specification?



NO



The charging circuit is OK.

EAS0077


4. Stator coil assembly resistances

Remove the generator cover.

Connect the pocket tester ( $\Omega \times 1$ ) to the stator coil assembly coupler as shown.

Tester positive probe  $\rightarrow$  white ① Tester negative probe  $\rightarrow$  black ②

Tester positive probe  $\rightarrow$  white ① Tester negative probe  $\rightarrow$  black ③

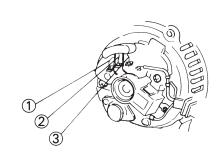

Omeasure the stator coil assembly resistances.



Stator coil resistance 0.19  $\sim$  0.21  $\Omega$  at 20°C

Os the stator coil assembly OK?



YES




NO

Replace the stator coil assembly.

AS00777

5. Brush check

Remove the brush holder (1).

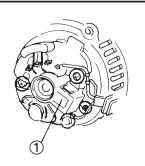

Theck the brush spring.

Measure the overall length of brushes.



**Brush spring force** 

 $5.10 \sim 5.69$  N (0.52  $\sim$  0.58 kg) Brush overall length <wear limit> 13.7 mm <4.7 mm>


Are the brush spring and brush OK?





NO

Replace the brushes and brush spring as a set

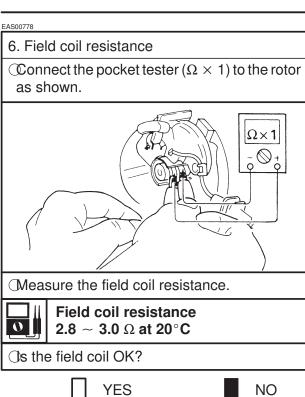

EAS00749

### 7. Main switch

- Theck the mian switch for continuity.

  Refer to "CHECKING THE SWITCHES".
- Os the main switch OK?





Replace the field coil.

NO

Replace the main switch.

EAS00779

### 8. Wiring

- Check the wiring connections of the entire charging system.
- Refer to "CIRCUIT DIAGRAM".
- Os the charging system's wiring properly connected and without defects?




NO



Properly connect or repair the charging system's wiring.

Replace the rectifier.

### **A.C. GENERATOR**

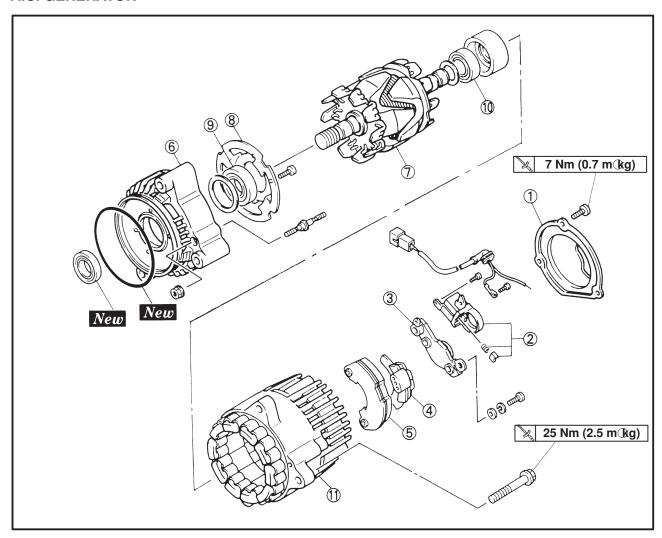


Order	Job/Part	Q'ty	Remarks
12345678991	Disassembling the A.C. Generator Cover Brush holder Regulator Rectifier cover Rectifier Rear cover Rotor assembly Bearing cover Bearing Bearing Stator assembly	1 1 1 1 1 1 1 1 1	For assembly, reverse the disassembly procedure.



EAS00780

# LIGHTING SYSTEM CIRCUIT DIAGRAM

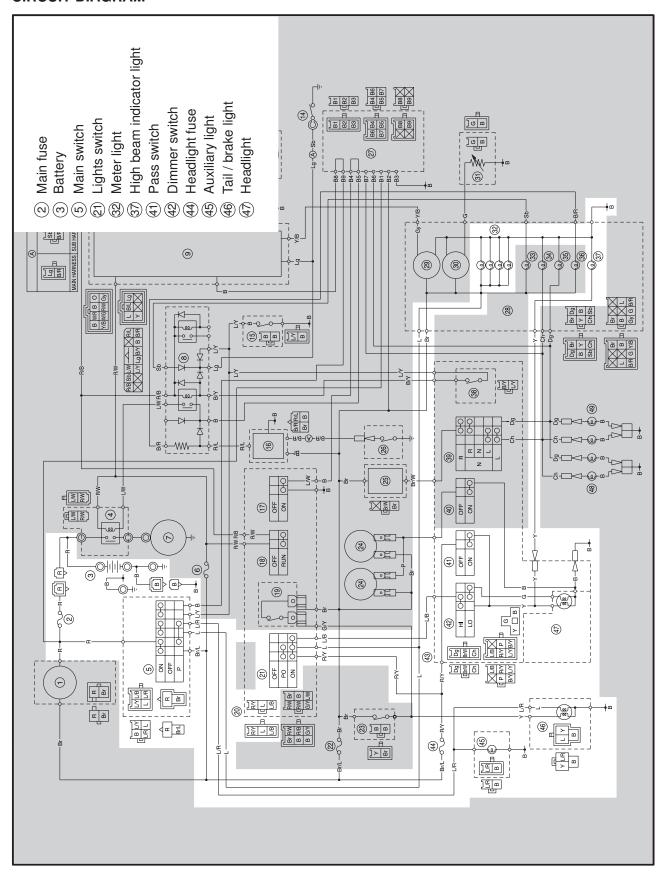



EAS00781

### **TROUBLESHOOTING**

Any of the following fail to light: headlight, high beam indicator light, taillight, auxiliary light (for Europe) or meter light.

### Check:

- 1. main, and headlight fuses
- 2. battery
- 3. main switch
- 4. lights switch (for Europe)
- 5. dimmer switch
- 6. pass switch
- 7. wiring (of the entire charging system)

### NOTE:

Before troubleshooting, remove the following part(-s):

- 1) seat
- 2) fuel tank
- 3) headlight unit
- Troubleshoot with the following special tool(-s).



Pocket tester 90890-03112

### EAS00738

- 1. Main, and headlight fuses
- Check the main, and headlight fuses for continuity.

Refer to "CHECKING THE FUSES" in chapter 3.

Are the main, and headlight fuses OK?



YES



Replace the fuse(-s).

EAS00739

### 2. Battery

©heck the condition of the battery.

Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.



Open-circuit voltage 12.8 V or more at 20°C

Os the battery OK?





NO

©lean the battery terminals.

Recharge or replace the battery.

EAS0074

### 3. Main switch

Check the main switch for continuity.

Refer to "CHECKING THE SWITCHES".

Os the main switch OK?



YES



NO

Replace the main switch.

EAS00783

### 4. Lights switch (for Europe)

©heck the lights switch for continuity.

Refer to "CHECKING THE SWITCHES".

Os the lights switch OK?





switch.

The lights switch is faulty. Replace the right handlebar



EAS00784

### 5. Dimmer switch

Check the dimmer switch for continuity. Refer to "CHECKING THE SWITCHES".

Os the dimmer switch OK?





The dimmer switch is faulty. Replace the left handlebar switch.

EAS00786

### 6. Pass switch

Check the pass switch for continuity.

Refer to "CHECKING THE SWITCHES".

Os the pass switch OK?



YES



NO

The pass switch is faulty. Replace the left hadlebar switch.

EAS00787

### 7. Wiring

Check the entire lighting system's wiring. Refer to "CIRCUIT DIAGRAM".

Os the lighting system's wiring properly connected and without defects?



YES



NO

Check the condition of each of the lighting system's circuits. Refer to "CHECK-ING THE LIGHTING SYSTEM".

Properly connect or repair the lighting system's wiring.

EAS00788

### **CHECKING THE LIGHTING SYSTEM**

1. The headlight and the high beam indicator light fail to come on.

### 1. Headlight bulb and socket

Check the headlight bulb and socket for continuity.

Refer to "CHECKING THE BULBS AND BULB SOCKETS".

Are the headlight bulb and socket OK?






Replace the headlight bulb, socket or both.

### 2. Voltage

Connect the pocket tester (DC 20 V) to the headlight and high beam indicator light couplers as shown.

AWhen the dimmer switch is set to " O" BWhen the dimmer switch is set to " O"

Headlight coupler (wire harness side)

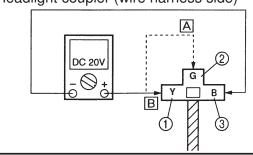



### Headlight


Tester positive probe  $\rightarrow$ 

yellow (1) or green (2)

Tester negative probe → black ③ High beam indicator light

Tester positive probe → yellow ④

Tester negative probe → black (5)

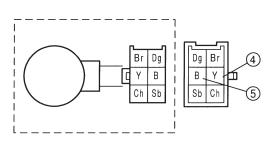

Set the main switch to "ON".

- Set the light switch to " T- ".
- Set the dimmer switch to " €O " or " ≣O ".
- Measure the voltage (12 V) of yellow (green)
- 2 on the headlight coupler (headlight side).
- Os the voltage within specification?






This circuit is OK.

The wiring circuit from the main switch to the headlight coupler is faulty and must be repaired.

### 2. Voltage

Connect the pocket tester (20 V) to the meter assembly coupler (wire harness side) as shown.

Tester positive probe → blue ①
Tester negative probe → black ②

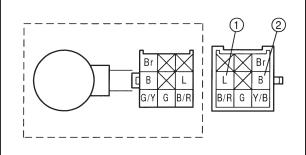

Set the main switch to "ON".

Set the light switch to " ≥D 0 € " or " - T. ".

Measure the voltage (12 V) of blue ① on the meter assembly coupler (wire harness side). Os the voltage within specification?





This circuit is OK.

The wiring circuit from the main switch to the meter assembly coupler is faulty and must be repaired.

# 2. A meter light fails to come on.

- 1. Meter light bulb and socket.
- Check the meter light bulb and socket for continuity.

Refer to "CHECKING THE BULBS AND BULB SOCKETS".

Are the meter light bulb and socket OK?





Replace the meter light bulb, socket or both.

### 3. A tail/brake light fails to come on.

- Tail/brake light bulb and socket
- Theck the tail/brake light bulb and socket for continuity.

Refer to "CHECKING THE BULBS AND BULB SOCKETS".

Are the tail/brake light bulb and socket OK?






Replace the tail/ brake light bulb, socket or both.

### 2. Voltage

Connect the pocket tester (DC 20 V) to the tail/brake light coupler (wire harness side) as shown.

Tester positive probe → blue/red (1) Tester negative probe → black ②

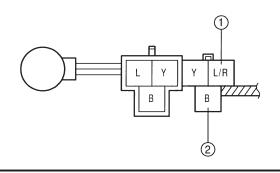

Set the main switch to "ON".

- Set the light switch to " ₹D 0 € " or " -\$\tilde{\pi} = ".
- Measure the voltage (12 V) of blue/red (1) on the tail/brake light coupler (wire harness
- Os the voltage within specification?





This circuit is OK.

The wiring circuit from the main switch to the tail/brake light coupler is faulty and must be repaired.

- 4. The auxiliary light fails to come on. (for Europe)
- 1. Auxiliary light bulb and socket
- Theck the auxiliary light bulb and socket for continuity.

Refer to "CHECKING THE BULBS AND BULB SOCKETS".

Are the auxiliary light bulb and socket OK?






Replace the auxiliary light bulb, socket or both.

### 2. Voltage

Connect the pocket tester (DC 20 V) to the auxiliary light couplers (wire harness side) as shown.

Tester positive probe → blue/red (1) Tester negative probe → black ②

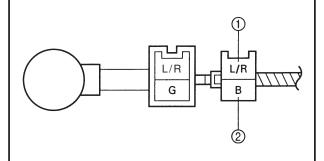

Set the main switch to "ON".

- Set the light switch to "≥D D T or "-.".
- Measure the voltage (12 V) of blue/red (1) on the auxiliary light couplers (wire harness side).
- Os the voltage within specification?





NO


This circuit is OK.

The wiring circuit from the main switch to the auxiliary light connectors is faulty and must be repaired.



EAS0079

# SIGNALING SYSTEM CIRCUIT DIAGRAM

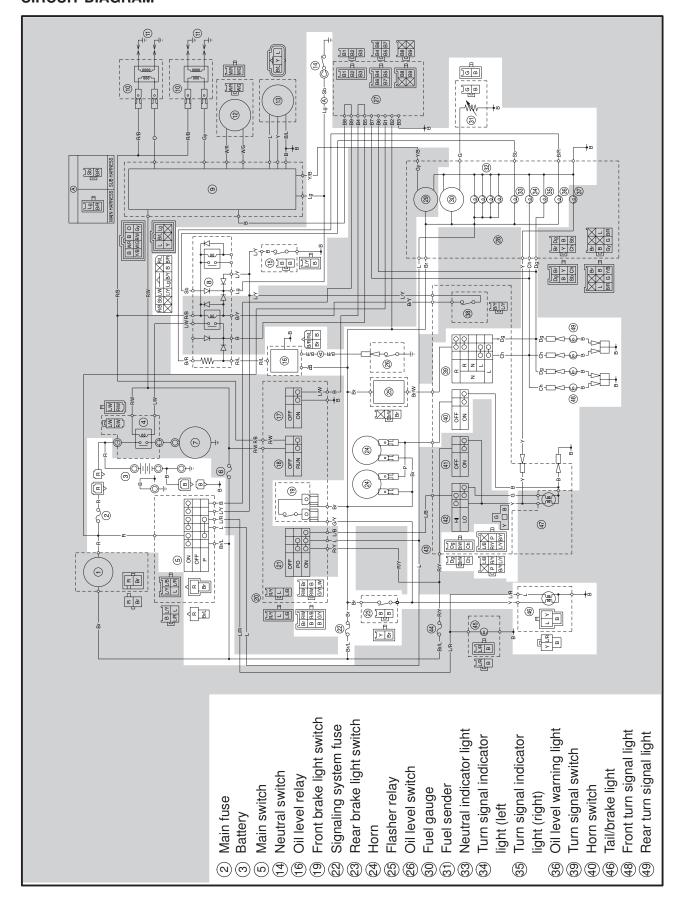



EB806010

### **TROUBLESHOOTING**

Any of the following fail to light: turn signal light, brake light or an indicator light. The horn fails to sound.

### Check:

- 1. main and signaling system fuses
- 2. battery
- 3. main switch
- 4. wiring (of the entire signaling system)

### NOTE:

- Before troubleshooting, remove the following part(-s):
- 1) seats
- 2) fuel tank
- 3) headlight unit
- Troubleshoot with the following special tool(-s).



# Pocket tester 90890-03112

EAS00738

- 1. Main and signaling system fuses
- Check the main and signaling system fuses for continuity.

Refer to "CHECKING AND CHANGING THE FUSES" in chapter 3.

Are the main and signaling system fuses OK?





Replace the fuse(-s).

EAS00739

### 2. Battery

©heck the condition of the battery. Refer to "CHECKING THE BATTERY" in chapter 3.



Open-circuit voltage 12.8 V or more at 20°C

Os the battery OK?





NO

©lean the battery terminals.

Recharge or replace the battery.

EAS00749

### 3. Main switch

©heck the main switch for continuity.

Refer to "CHECKING THE SWITCHES".

Os the main switch OK?





NO

Replace the main switch.

EAS00795

### 4. Wiring

Check the entire signaling system's wiring. Refer to "CIRCUIT DIAGRAM".

Os the signaling system's wiring properly connected and without defects?





NO

Check the condition of each of the signaling system's circuits. Refer to "CHECKING THE SIGNALING SYSTEM".

Properly connect or repair the signaling system's wiring.

ELEC - +

EAS00796

### CHECKING THE SIGNALING SYSTEM

1. The horn fails to sound.

### 1. Horn switch

- Check the horn switch for continuity.

  Refer to "CHECKING THE SWITCHES".
- Os the horn switch OK?






Replace the left handlebar switch.

### 2. Voltage

Connect the pocket tester (DC 20 V) to the horn connector at the horn terminal as shown.

Tester positive probe → brown ①
Tester negative probe → ground

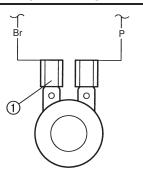

- Set the main switch to "ON".
- Measure the voltage (12 V) of brown at the horn terminal.
- Os the voltage within specification?






NO

The wiring circuit from the main switch to the horn connector is faulty and must be repaired.

### 3. Horn

- Disconnect the black connector at the horn terminal.
- Connect a jumper lead 1 to the horn terminal and ground the jumper lead.
- Set the main switch to "ON".
- Does the horn sound?

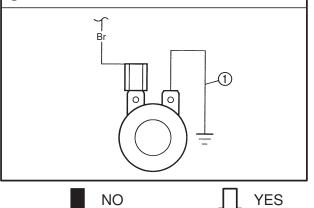


The horn is OK.

### 4. Voltage

Connect the pocket tester (DC 20 V) to the horn connector at the black terminal as shown.

**Tester positive probe** → **black** ① **Tester negative probe** → **ground** 

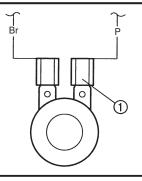

- Set the main switch to "ON".
- Measure the voltage (12 V) of black ① at the horn terminal.
- Os the voltage within specification?





Repair or replace the horn.

Replace the horn.

ELEC - +

EAS00797

- 2. A tail/brake light fails to come on.
- 1. Tail/brake light bulb and socket
- Theck the tail/brake light bulb and socket for continuity.

Refer to "CHECKING THE BULBS AND BULB SOCKETS".

Are the tail/brake light bulb and socket OK?



Replace the tail/brake light bulb, socket or both.

- Set the main switch to "ON".
- Pull in the brake lever or push down on the brake pedal.
- Measure the voltage (12 V) of yellow at the tail/brake light coupler (wire harness side).
- Os the voltage within specification?




This circuit is OK.

The wiring circuit from the main switch to the tail/brake light coupler is faulty and must be repaired.

### 2. Brake light switches


- Check the brake light switches for continuity. Refer to "CHECKING THE SWITCHES".
- Os the brake light switch OK?

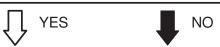

Replace the brake light switch.

### 3. Voltage

- Connect the pocket tester (DC 20 V) to the tail/brake light coupler (wire harness side) as shown.
- Tester positive probe → yellow ①
  Tester negative probe → black ②

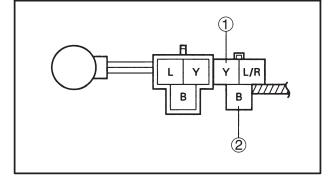


EAS00799

- 3. A turn signal light, turn signal indicator light or both fail to blink.
- 1. Turn signal light bulb and socket
- Check the turn signal light bulb and socket for continuity.

Refer to "CHECKING THE BULBS AND BULB SOCKETS".

Are the turn signal light bulb and socket OK?

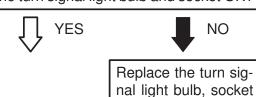

or both.

ELEC - +

### 2. Turn signal switch

Theck the turn signal for continuity.

Refer to "CHECKING THE SWITCHES".

Os the turn signal switch OK?






Replace the left handlebar switch.

### 3. Voltage

Connect the pocket tester (DC 20 V) to the flasher relay coupler (wire harness side) as shown.

Tester positive probe → brown ①
Tester negative probe → ground

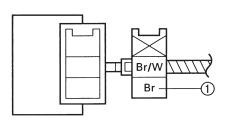

Set the main switch to "ON".

Measure the voltage (12 V) of brown ① at the flasher relay coupler (wire harness side).

Os the voltage within specification?






NO ·

The wiring circuit from the main switch to the flasher relay coupler (flasher relay side) is faulty and must be repaired.

### 4. Voltage

Connect the tester (DC 20 V) to the flasher relay coupler (wire harness side) as shown.

Tester positive probe → brown/white ①
Tester negative probe → ground

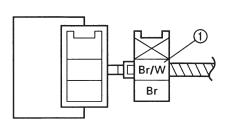

Set the main switch to "ON".

 $\bigcirc$ Set the turn signal switch to "  $\hookleftarrow$  " or "  $\hookleftarrow$  ".

Measure the voltage (12 V) or brown/white at the flasher relay coupler (wire harness side). Os the voltage within specification?





The flasher relay is faulty and must be replaced.

### 5. Voltage

Connect the pocket tester (DC 20 V) to the turn signal light connectors or the meter assembly coupler (wire harness side) as shown.

A Turn signal light


B Turn signal indicator light

### Left turn signal light

Tester positive probe → chocolate ①
Tester negative probe → ground
Right turn signal light

Tester positive probe  $\rightarrow$  dark green

**Tester negative probe** → **ground** 

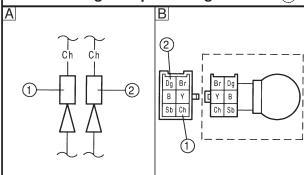

ELEC |

Set the main switch to "ON".

Set the turn signal switch to " 

" or " 

".

Measure the voltage (12 V) of chocolate ① or dark green (2) at the turn signal light connector (wire harness side).

Os the voltage within specification?





This circuit is OK.

The wiring circuit from the turn signal switch to the turn signal light connector is faulty and must repaired.

4. The neutral indicator light fails to come on.

### 1. Neutral indicator light bulb and socket

Theck the neutral indicator light bulb and socket for continuity.

Refer to "CHECKING THE BULBS AND BULB SOCKETS".

Are the neutral indicator light bulb and socket OK?



YES



NO

Replace the neutral indicator light bulb, socket or both.

### 2. Neutral switch

Check the neutral switch for continuity. Refer to "CHECKING THE SWITCHES".

Os the neutral switch OK?



YES



Replace the neutral switch.

### 3. Diode

Disconnect the starting circuit cutoff relay from the coupler.

Connect the pocket tester ( $\Omega \times 1$ ) to the starting circuit cutoff relay terminals as shown.

Measure the starting circuit cutoff relay for continuity as follows.

sky blue (2)


**Tester positive probe** → light green (1) Tester negative probe →

Continuity

Tester positive probe → sky blue (2)

No continuity

Tester negative probe → light green 1

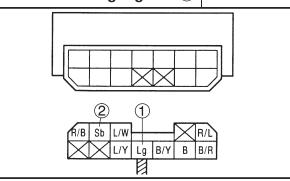

### NOTE: -

When you switch the "-" and "+" leads of the digital pocket tester the readings in the above chart will be reversed.

Are the tester readings correct?






Replace the relay unit.

### 4. Voltage

Connect the pocket tester (DC 20 V) to the meter assembly coupler (wire harness side) as shown.

Tester positive probe → brown ①
Tester negative probe → sky blue ②

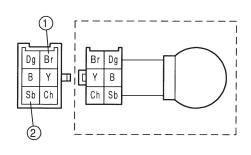

Set the main switch to "ON".

Measure the voltage (12 V) of brown ① and sky blue ② at the meter assembly coupler. Os the voltage within specification?





This circuit is OK.

The wiring circuit from the main switch to the meter light bulb coupler is faulty and must be repaired.

5. The oil level warning light fails to come on.

### 1. Oil level warning light bulb and socket

Check the oil level warnig light bulb and socket for continuity.

Refer to "CHECKING THE BULBS AND BULB SOCKETS"

Are the oil level warnig light bulb and socket OK?





Replace the oil level warning light bulb, socket or both.

### 2. Oil level switch

Drain the engine oil and remove the oil level switch from the oil pan.

Theck the oil level switch for continuity. Refer to "CHECKING THE SWITCHES".

Os the oil level switch OK?



Replace the oil level switch.


### 3. Oil level relay

Disconnect the oil level relay from the coupler.


Connect the pocket tester ( $\Omega \times 1$ ) and battery (12 V) to the oil level relay terminals as shown.

Battery positive terminal → brown ①
Battery negative terminal → black/red ②

Tester positive probe → red/blue ③
Tester negative probe → black ④

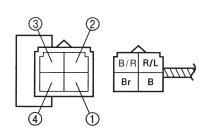

Does the oil level relay have continuity between red/blue and black?

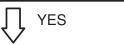




Replace the oil level relay.

ELEC - +

### 4. Starting circuit cutoff relay

Disconnect the relay unit from the coupler. Connect the pocket tester ( $\Omega \times 1$ ) to the relay unit terminals as shown.

Tester positive probe → red/blue ①
Tester negative probe → brack/red ②

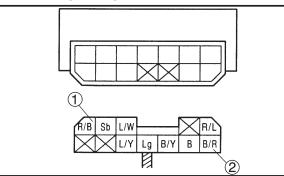

Measure the relay unit resistance.



Relay unit resistance 8.2  $\Omega$  at 20  $^{\circ}$  C

Os the relay unit OK?






Replace the starting circuit cutoff relay.

### 5. Voltage

Connect the pocket tester (DC 20 V) to the meter assembly coupler (wire harness side) as shown.

Tester positive probe → brown ①
Tester negative probe → black/red ②

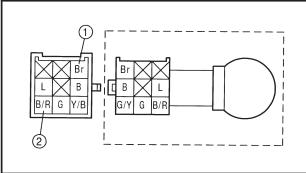

Set the main switch to "ON".

Measure the voltage (12 V) of brown ① and black/red at the meter assembly coupler. Os the voltage within specification?





This circuit is OK.

The wiring circuit from the main switch to the meter assembly coupler is faulty and must be repaired.

6. The fuel level gauge fails to operate.


### 1. Fuel sender

Disconnect the fuel sender coupler from the wire harness.

Drain the fuel from the fuel tank and remove the fuel sender from the fuel tank.

Connect the pocket tester to the fuel sender coupler as shown.

Tester positive probe  $\rightarrow$  green ① Tester negative probe  $\rightarrow$  black ②

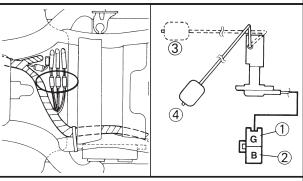

Measure the fuel sender resistance.



Fuel sender resistance (up position)  $4\sim 10~\Omega$  at  $20^{\circ}$ C Fuel sender resistance (down position)

90  $\sim$  100  $\Omega$  at 20 $^{\circ}$ C

Os the fuel sender OK?






Replace the fuel sender.

### 2. Voltage

Connect the pocket tester (DC 20 V) to the meter assembly coupler (wire harness side) as shown.

Tester positive probe → brown ①
Tester negative probe → black ②

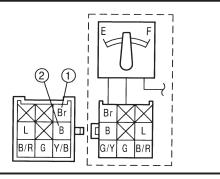

Set the main switch to "ON".

- Measure the voltage (12 V).
- Os the voltage within specification?





The wiring circuit from the main switch to the meter assembly coupler is faulty and must be repaired.

3. Fuel level gauge

Set the main switch to "ON".

Move the float up ① or down ②.

Check that the fuel level gauge needle move to "F" to "E".

NOTE: \_

Before reading the fuel level gauge, leave the float in one position (either up or down) for at least three minutes.

Does the fuel level gauge needle move appropriately?



This circuit is OK.

Replace the fuel level gauge.



EAS0083

### **SELF-DIAGNOSIS**

The XJR1300 (L) features a self-diagnosing system for the following circuit(-s):

Throttle position sensor


Ognition circuit

If any of these circuits are defective, their respective condition codes will be displayed on the tachometer when the main switch is set to "ON" (irrespective of whether the engine is running or not). The engine is not operated condition code at  $2,000 \, \text{r/min}$ .

Circuit	Defect(-s)	System response	Condition code
Throttle position sensor	Disconnected Short-circuit Locked	The ignitor unit stays set to the wide-open throttle ignition timing. The motorcycle can be ridden. The tachometer displays the condition code.	3,000 r/min
Ignition circuit	Oncorrect input signal for side stand switch and neutral switch.	No ignition The tachometer displays the condition code.	2,000 r/min


### **Tachometer display sequence**

### 1) Throttle position sensor

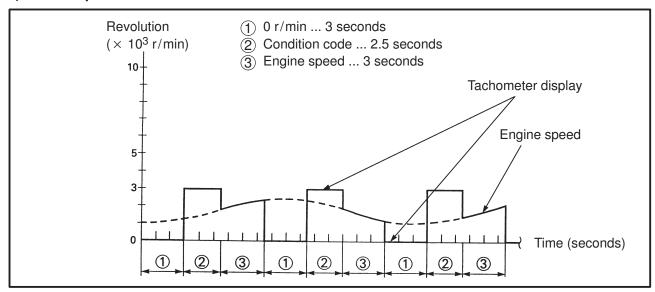

If the engine is stopped, the engine speed ③ is 0 r/min.

### 2) Ignition circuit

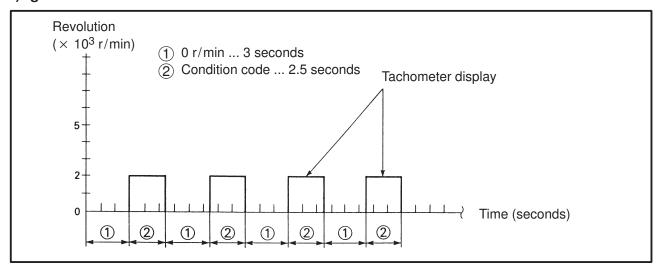



EAS00835

### **TROUBLESHOOTING**

The tachometer starts to display the self-diagnosis sequence.

### Check:

- 1. throttle position sensor
- 2. ignition circuit

### NOTE: -


- Before troubleshooting, remove the following part(-s):
- 1) rider seat
- 2) fuel tank
- 3) air filter case
- Troubleshoot with the following special tool(-s).



Pocket tester 90890-03112

EAS00836

# 1. Throttle position sensor CIRCUIT DIAGRAM

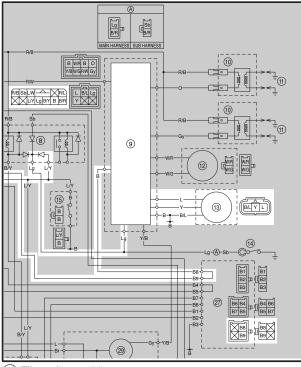

- (13) Throttle position sensor
- 9 Ignitor unit

### 1. Wire harness

Check the wire harness for continuity. Refer to "CIRCUIT DIAGRAM".

Os the wire harness OK?





Repair or replace the wire harness.

FB812401

### 2. Throttle position sensor

Theck the throttle position sensor for continuity.

Refer to "CHECKING AND ADJUSTING THE THROTTLE POSITION SENSOR" in chapter 6.

Os the throttle position sensor OK?






NO

Replace the ignitor unit.

Replace the throttle position sensor.



# **2. Ignition circuit** CIRCUIT DIAGRAM

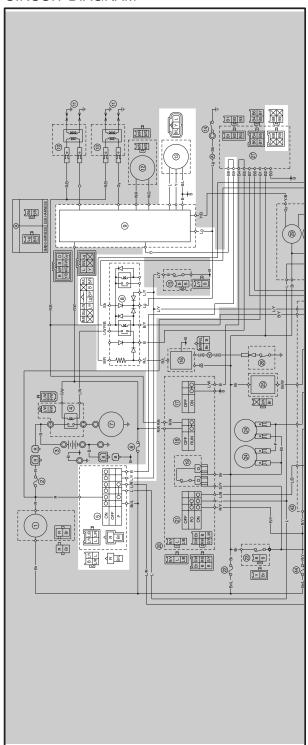

- (5) Main switch
- 8 Starting circuit cutoff relay
- (9) Ignitor unit


EAS00749

### 3. Main switch

©heck the main switch for continuity.

Refer to "CHECKING THE SWITCHES".

Os the main switch OK?

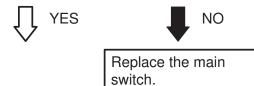


EB812400

### 4. Wire harness

Check the ire harness for continuity. Refer to "CIRCUIT DIAGRAM".


Os the wire harness OK?

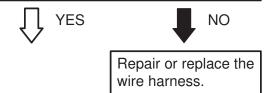

EAS0076

### 5. Starting circuit cutoff relay

- Disconnect the starting circuit cutoff relay from the coupler.
- Connect the pocket tester ( $\Omega \times 1$ ) to the starting circuit cutoff relay terminals as shown.
- Measure the starting circuit cutoff relay for continuity as follows.

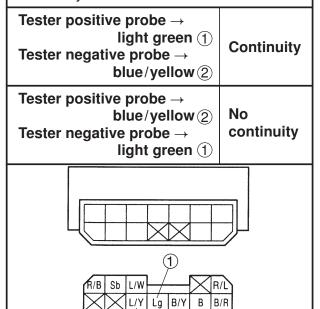

(2)



### NOTE: \_

When you switch the "-" and "+" leads of the digital pocket tester the readings in the above chart will be reversed.

Are the tester readings correct?



YES



NO

Replace the ignitor unit.

Replace the relay unit.

# TRBL SHTG



# CHAPTER 8. TROUBLESHOOTING

STARTING PROBLEMS	
ENGINE	
FUEL SYSTEM	
ELECTRICAL STOTEMS	0-1
INCORRECT ENGINE IDLING SPEED	8-2
ENGINE	
FUEL SYSTEM	8-2
ELECTRICAL SYSTEMS	8-2
POOR MEDIUM-AND-HIGH-SPEED PERFORMANCE	8-2
ENGINE	
FUEL SYSTEM	
FAULTY GEAR SHIFTING	
SHIFTING IS DIFFICULT	
SHIFT PEDAL DOES NOT MOVE	
JUMPS OUT OF GEAR	8-2
FAULTY CLUTCH	8-3
CLUTCH SLIPS	
CLUTCH DRAGS	
OVERHEATING	
ENGINE	
FUEL SYSTEM	
CHASSIS	
ELECTRICAL SYSTEMS	8-3
POOR BRAKING PERFORMANCE	8-4
FAULTY FRONT FORK LEGS	0 /
LEAKING OIL	
MALFUNCTION	
WINE ONO HOLD	
UNSTABLE HANDLING	8-4
FAULTY LIGHTING AND SIGNALING SYSTEM	0.5
HEADLIGHT DOES NOT LIGHT	
HEADLIGHT BULB BURNT OUT	
TAIL/BRAKE LIGHT DOES NOT LIGHT	
TAIL/BRAKE LIGHT BULB BURNT OUT	
TURN SIGNAL DOES NOT LIGHT	
TURN SIGNAL BUNKS SLOWLY	
TURN SIGNAL REMAINS LIT	
TURN SIGNAL BLINKS QUICKLY	
HORN DOES NOT SOUND	8-5

#### STARTING PROBLEMS

EAS00844

#### TROUBLESHOOTING

NOTE:

**ENGINE** 

The following guide for troubleshooting does not cover all the possible causes of trouble. It should be helpful, however, as a guide to basic troubleshooting. Refer to the relative procedure in this manual for checks, adjustments, and replacement of parts.

# STARTING PROBLEMS

#### Cylinders and cylinder head(-s)

Ocose spark plug

Oose cylinder head

Damaged cylinder head gasket

Worn or damaged cylinder

Oncorrect valve clearance Oncorrectly sealed valve

Oncorrect valve-to-valve-seat contact

Oncorrect valve timing Faulty valve spring

Seized valve

#### Pistons and piston rings

Oncorrectly installed piston ring

Damaged, worn or fatigued piston ring

Seized piston ring

Seized or damaged piston

#### Air filter

Oncorrectly installed air filter

Clogged air filter element

#### Crankcase and crankshaft

Oncorrectly assembled crankcase

Seized crankshaft

#### **FUEL SYSTEM**

#### Fuel tank

Empty fuel tank

Clogged fuel filter

©logged fuel tank breather hose

Deteriorated or contaminated fuel

#### Fuel cock

Clogged or damaged fuel hose/vacuum hose

#### **Carburetors**

Deteriorated or contaminated fuel

Clogged pilot jet

©logged pilot air passage

Sucked-in air

Damaged float

Worn needle valve

Oncorrectly installed needle valve seat

Oncorrect fuel level

Oncorrectly installed pilot jet

©logged starter jet

Faulty starter plunger

Oncorrectly adjusted starter cable

#### **ELECTRICAL SYSTEMS**

#### **Battery**

**Faulty** battery

Discharged battery

#### Fuses

Blown, damaged or incorrect fuse

Oncorrectly installed fuse

#### Spark plugs

Oncorrect spark plug gap

Oncorrect spark plug heat range

Fouled spark plug

Worn or damaged electrode

Worn or damaged insulator

Faulty spark plug cap

#### Ignition coils

Damaged ignition coil

Broken or shorted primary or secondary coils

Faulty spark plug lead

#### **Ignition system**

Faulty ignitor unit

Faulty pickup coil

#### Switches and wiring

Faulty main switch

Faulty engine stop switch

Broken or shorted wiring

Faulty neutral switch

Faulty start switch

Faulty sidestand switch

Faulty clutch switch

Oncorrectly grounded circuit

Coose connections

#### Starting system

Faulty starter motor

Faulty starter relay

Faulty starting circuit cutoff relay

Faulty starter clutch

#### INCORRECT ENGINE IDLING SPEED/ POOR MEDIUM AND-HIGH-SPEED PERFORMANCE/ FAULTY GEAR SHIFTING

TRBL ?

EAS00846

#### INCORRECT ENGINE IDLING SPEED

#### **ENGINE**

#### Cylinders and cylinder head

Oncorrect valve clearance

Damaged valve train components

#### Air filter

Clogged air filter element

### FUEL SYSTEM Carburetors

Faulty starter plunger

Oose or clogged pilot jet

Oose or clogged pilot air jet

Damaged or loose carburetor joint

Oncorrectly synchronized carburetors

Oncorrectly adjusted engine idling speed

(throttle stop screw)

Oncorrect throttle cable free play

Flooded carburetor

#### **ELECTRICAL SYSTEMS**

#### **Battery**

Faulty battery

Discharged battery

#### Spark plugs

Oncorrect spark plug gap

Oncorrect spark plug heat range

Fouled spark plug

Worn or damaged electrode

Worn or damaged insulator

Faulty spark plug cap

#### Ignition coils

Broken or shorted primary or secondary coils

Faulty spark plug lead

Damaged ignition coil

#### **Ignition system**

Faulty ignition unit

Faulty pickup coil

EAS00848

#### POOR MEDIUM-AND-HIGH-SPEED PERFORMANCE

Refer to "STARTING PROBLEMS".

**ENGINE** 

Air filter

Clogged air filter element

FUEL SYSTEM Carburetors

Faulty diaphragm

Oncorrect fuel level

Oose or clogged main jet

EAS00850

#### **FAULTY GEAR SHIFTING**

#### SHIFTING IS DIFFICULT

Refer to "CLUTCH DRAGS".

SHIFT PEDAL DOES NOT MOVE

#### Shift shaft

Oncorrectly adjusted shift rod

Bent shift shaft

#### Shift drum and shift forks

Foreign object in a shift drum groove

Seized shift fork

Bent shift fork guide bar

#### **Transmission**

Seized transmission gear

Foreign object between transmission gears

Oncorrectly assembled transmission

#### **JUMPS OUT OF GEAR**

#### Shift shaft

Oncorrect shift pedal position

Oncorrectly returned stopper lever

#### Shift forks

Worn shift fork

#### Shift drum

Oncorrect axial play

Worn shift drum groove

#### **Transmission**

Worn gear dog

#### **FAULTY CLUTCH/OVERHEATING**

EAS00852

#### **FAULTY CLUTCH**

#### **CLUTCH SLIPS**

#### Clutch

- Omproperly assembled clutch
- Omproperly assembled clutch master cylinder
- Omproperly assembled clutch release cylinder
- Oose or fatigued clutch spring
- Coose union bolt
- Worn friction plate
- Worn clutch plate
- Damaged clutch release cylinder

#### **Engine oil**

- Oncorrect oil level
- Oncorrect oil viscosity (low)
- Deteriorated oil

EAS00854

#### **OVERHEATING**

#### **ENGINE**

#### Cylinder head(-s) and piston(-s)

Heavy carbon buildup

#### **Engine oil**

- Oncorrect oil level
- Oncorrect oil viscosity
- Onferior oil quality

#### **FUEL SYSTEM**

#### **Carburetors**

- Oncorrect main jet setting
- Oncorrect fuel level
- Damaged or loose carburetor joint

#### Air filter

Clogged air filter element

#### **CLUTCH DRAGS**

#### Clutch

- Unevenly tensioned clutch springs
- Warped pressure plate
- Bent clutch plate
- Swollen friction plate
- Bent clutch pull rod
- Damaged clutch boss
- Burnt primary driven gear bushing
- Damaged clutch release cylinder
- Match marks not aligned

#### **Engine oil**

- Oncorrect oil level
- Oncorrect oil viscosity (high)
- Deteriorated oil

#### **CHASSIS**

#### **Brakes**

**Dragging** brake

#### **ELECTRICAL SYSTEMS**

#### Spark plugs

- Oncorrect spark plug gap
- Oncorrect spark plug heat range

#### **Ignition system**

Faulty ignitor unit

## POOR BRAKING PERFORMANCE/FAULTY FRONT FORK LEGS/UNSTABLE HANDLING

TRBL ?

EAS00857

#### POOR BRAKING PERFORMANCE

Worn brake pad

Worn brake disc

Air in hydraulic brake system

Deaking brake fluid

Faulty brake caliper piston seal

Coose union bolt

Damaged brake hose

Oil or grease on the brake disc

Oil or grease on the brake pad

Oncorrect brake fluid level

EAS00860

### FAULTY FRONT FORK LEGS LEAKING OIL

Bent, damaged or rusty inner tube

Damaged outer tube

Oncorrectly installed oil seal

Damaged oil seal lip

Oncorrect oil level (high)

Coose damper rod assembly bolt

Damaged damper rod assembly bolt copper washer

Damaged cap bolt O-ring

#### **MALFUNCTION**

Bent or damaged inner tube

Bent or damaged outer tube

Damaged fork spring

Worn or damaged outer tube busing

Bent or damaged damper rod

Oncorrect oil viscosity

Oncorrect oil level

EAS00862

#### **UNSTABLE HANDLING**

#### Handlebar

Bent or incorrectly installed right handlebar

Bent or incorrectly installed left handlebar

#### Steering head components

Oncorrectly installed upper bracket

Oncorrectly installed lower bracket

(incorrectly tightened ring nut)

Bent steering stem

Damaged ball bearing or bearing race

#### Front fork legs

Unevenoil levels (both front fork legs)

Unevenly tensioned fork spring (both front fork legs)

Damaged fork spring

Bent or damaged inner tube

Bent or damaged outer tube

#### **Swingarm**

Worn bearing or bushing

Bent or damaged swingarm

#### Rear shock absorber assembly

Faulty rear shock absorber spring

Deaking oil or gas

#### Tires

Uneven tire pressures (front and rear)

Oncorrect tire pressure

Uneven tire wear

#### Wheels

Oncorrect wheel balance

Deformed cast wheel

Damaged wheel bearing

Bent or loose wheel axle

**Excessive** wheel runout

#### **Frame**

Bent frame

Damaged steering head pipe

Oncorrectly installed bearing race

#### **FAULTY LIGHTING AND SIGNALING SYSTEMS**



EAS00866

# FAULTY LIGHTING AND SIGNALING SYSTEMS HEADLIGHT DOES NOT LIGHT

- Wrong headlight bulb
- Too many electrical accessories
- Hard charging
- **Oncorrect connection**
- Oncorrectly grounded circuit
- Poor contacts (main or light switch)
- Burnt-out headlight bulb

#### **HEADLIGHT BULB BURNT OUT**

- Wrong headlight bulb
- Faulty battery
- Faulty rectifier/regulator
- Oncorrectly grounded circuit
- Faulty main switch
- Faulty light switch
- Headlight bulb life expired

#### TAIL/BRAKE LIGHT DOES NOT LIGHT

- Wrong tail/brake light bulb
- Too may electrical accessories
- Oncorrect connection
- Burnt-out tail/brake light bulb

#### TAIL/BRAKE LIGHT BULB BURNT OUT

- Wrong tail/brake light bulb
- Faulty battery
- Oncorrectly adjusted rear brake light switch
- Tail/brake light bulb life expired

#### **TURN SIGNAL DOES NOT LIGHT**

- Faulty turn signal switch
- Faulty turn signal relay
- Burnt-out turn signal bulb
- **Oncorrect connection**
- Damaged or faulty wire harness
- Oncorrectly grounded circuit
- Faulty battery
- Blown, damaged or incorrect fuse

#### **TURN SIGNAL BLINKS SLOWLY**

- Faulty turn signal relay
- Faulty main switch
- Faulty turn signal switch
- Wrong turn signal bulb

#### **TURN SIGNAL REMAINS LIT**

- Faulty turn signal relay
- Burnt-out-turn signal bulb


#### **TURN SIGNAL BLINKS QUICKLY**

- Oncorrect turn signal bulb
- Faulty turn signal relay
- Burnt-out turn signal bulb

#### HORN DOES NOT SOUND

- Oncorrectly adjusted horn
- Damaged or faulty horn
- Faulty main switch
- Faulty horn switch
- Faulty battery
- Blown, damaged or incorrect fuse
- Faulty wire harness

#### XJR1300'99 WIRING DIAGRAM for EUR

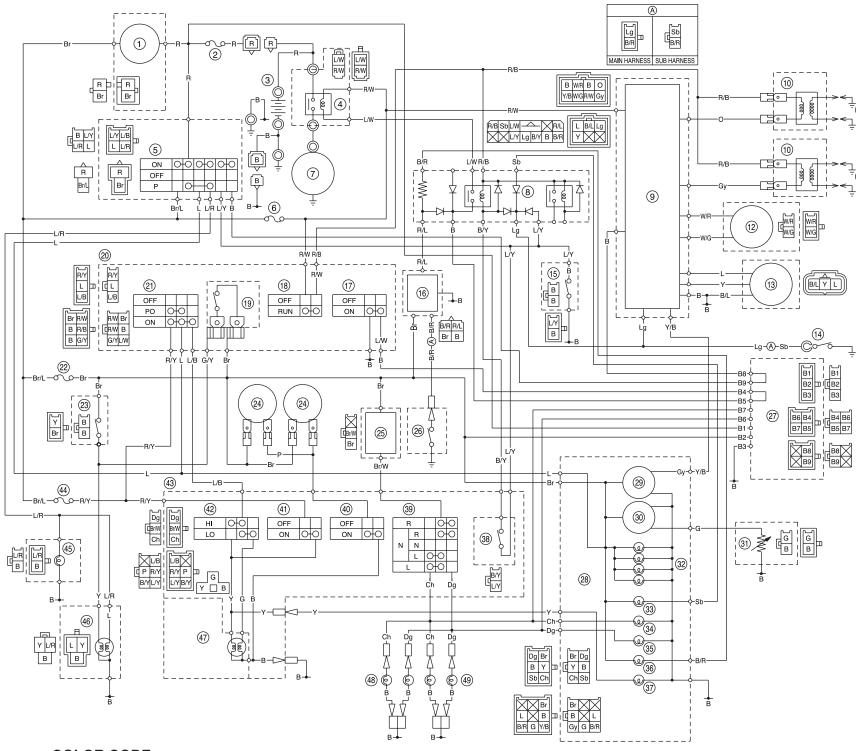

R/L... Red/Blue R/W .. Red/White


R/Y... Red/Yellow W/G.. White/Green W/R.. White/Red Y/B... Yellow/Black

#### **COLOR CODE**

B Black Br Brown Ch Chocolate Dg Dark green G Green Gy Gray I Blue	O Orange Sb Sky blue P Pink R Red Y Yellow B/L Black/Blue B/B Black/Bed	Br/L Brown/Blue Br/W . Brown/White G/Y Green/Yellow L/B Blue/Black L/R Blue/Red L/W Blue/White
L Blue Lg Light green	B/R Black/Red B/Y Black/Yellow	L/Y Blue/Yellow R/B Red/Black

- 1 AC generator 2 Fuse (main)
- 3 Battery
- 4 Starter relay
- (5) Main switch
- 6 Fuse (ignition)
- (7) Starter motor
- 8 Starting circuit cut-off relay
- (9) Ignitor unit
- 10 Ignition coil
- 11) Spark plug
- 12 Pickup coil
- 13 TPS (throttle position sensor)
- 14 Neutral switch
- 15 Sidestand switch
- 16 Oil level relay
- 17) Start switch
- 18 Engine stop switch
- 19 Front brake switch
- 20 Handlebar switches (right)
- 21) Lights switch
- 22 Fuse (signal)
- 23 Rear brake switch
- 24) Horn
- 25 Flasher relay
- 26 Oil level switch
- 27 Connector
- 28 Meter assembly
- 29 Tachometer 30 Fuel gauge
- (31) Fuel sender
- 32 Meter lights
- 3 Neutral indicator light
- 34 Turn signal indicator light (left)
- 35 Turn signal indicator light (right)
- 36 Oil warning light
- (37) High beam indicator light
- 38 Clutch switch
- 39 Turn signal switch
- 40 Horn switch
- 41) Pass switch
- 42 Dimmer switch
- 43 Handlebar switch (left)
- 44 Fuse (headlight)
- 45 Auxiliary light
- 46 Tail/brake light
- 47 Headlight
- 48 Front turn signal lights
- 49 Rear turn signal lights

#### **XJR1300L WIRING DIAGRAM for AUS**

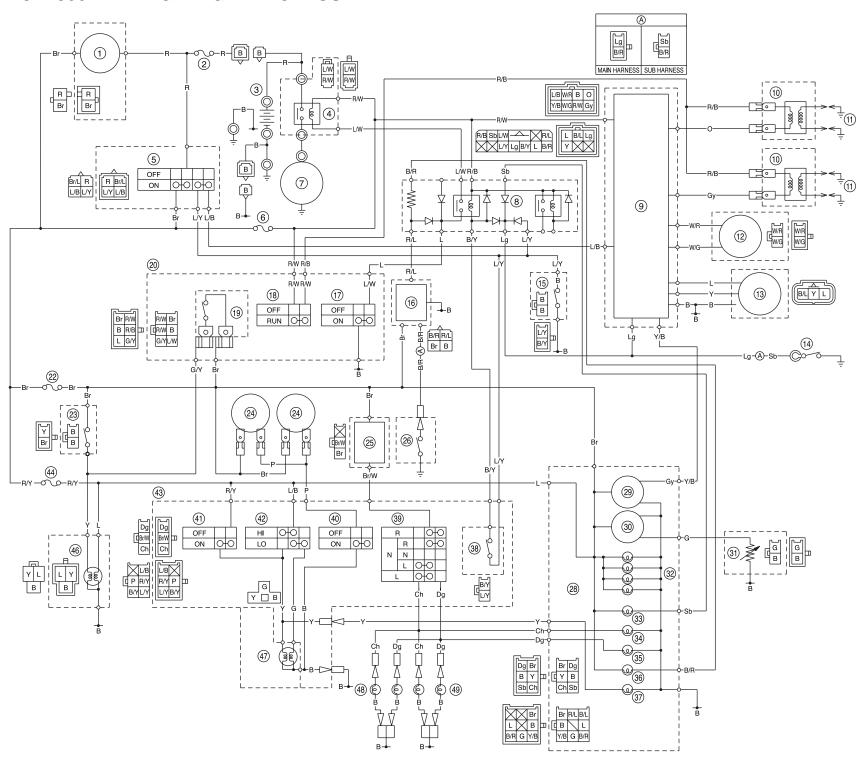

R/L... Red/Blue R/W .. Red/White

R/Y... Red/Yellow

W/G . . White/Green W/R .. White/Red Y/B... Yellow/Black

#### **COLOR CODE**

B Black	O Orange	Br/L Brown/Blue
Br Brown	Sb Sky blue	Br/W . Brown/White
Ch Chocolate	P Pink	G/Y Green/Yellow
Dg Dark green	R Red	L/B Blue/Black
G Green	Y Yellow	L/R Blue/Red
Gy Gray	B/LBlack/Blue	L/W Blue/White
L Blue	B/RBlack/Red	L/Y Blue/Yellow
Lg Light green	B/YBlack/Yellow	R/B Red/Black

- 1) AC generator
- 2 Fuse (main)
- 3 Battery
- (4) Starter relay
- (5) Main switch
- 6 Fuse (ignition)
- (7) Starter motor
- (8) Starting circuit cut-off relay
- (9) Ignitor unit
- 10 Ignition coil
- (11) Spark plug
- (12) Pickup coil
- 13 TPS (throttle position sensor)
- 14) Neutral switch
- 15 Sidestand switch16 Oil level relay
- (17) Start switch
- 18 Engine stop switch
- 19 Front brake switch
- 20 Handlebar switches (right)
- 22 Fuse (signal)
- 23 Rear brake switch
- 24 Horn
- 25 Flasher relay
- 26 Oil level switch
- 28 Meter assembly
- 29 Tachometer
- 30 Fuel gauge
- (31) Fuel sender
- 32 Meter lights
- 3 Neutral indicator light
- 34 Turn signal indicator light (left)
- 35 Turn signal indicator light (right)
- 36 Oil warning light
- 37 High beam indicator light
- 38 Clutch switch
- 39 Turn signal switch 40 Horn switch
- (41) Pass switch
- 42 Dimmer switch
- 43 Handlebar switch (left)
- 44 Fuse (headlight)
- 46 Tail/brake light
- 47 Headlight
- Front turn signal lights
- 49 Rear turn signal lights



# XJR1300SP '99 5EA6-AE1

# SUPPLEMENTARY SERVICE MANUAL

#### **FOREWORD**

This Supplementary Service Manual has been prepared to introduce new service and data for the XJR1300SP'99. For complete service information procedures it is necessary to use this Supplementary Service Manual together with the following manual.

XJR1300 (L) SERVICE MANUAL: 5EA3-AE1

XJR1300SP '99
SUPPLEMENTARY
SERVICE MANUAL
©1998 by Yamaha Motor Co., Ltd.
First Edition, December 1998
Any reproduction or unauthorized use without the written permission of Yamaha Motor Co., Ltd. is expressly prohibited.

EB001000

#### **NOTICE**

This manual was produced by the Yamaha Motor Company primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to include all the knowledge of a mechanic in one manual, so it is assumed that anyone who uses this book to perform maintenance and repairs on Yamaha motorcycles has a basic understanding of the mechanical ideas and the procedures of motorcycle repair. Repairs attempted by anyone without this knowledge are likely to render the motorcycle unsafe and unfit for use.

Yamaha Motor Company, Ltd. is continually striving to improve all its models. Modifications and significant changes in specifications or procedures will be forwarded to all authorized Yamaha dealers and will appear in future editions of this manual where applicable.

NOTE:

Designs and specifications are subject to change without notice.

#### IMPORTANT INFORMATION

Particularly important information is distinguished in this manual by the following notations.

The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR

SAFETY IS INVOLVED!

Failure to follow WARNING instructions could result in severe injury or death to

the motorcycle operator, a bystander or a person inspecting or repairing the

motorcycle.

CAUTION: A CAUTION indicates special precautions that must be taken to avoid damage

to the motorcycle.

**NOTE:** A NOTE provides key information to make procedures easier or clearer.


#### **HOW TO USE THIS MANUAL**


This manual is intended as a handy, easy-to-read reference book for the mechanic. Comprehensive explanations of all installation, removal, disassembly, assembly, repair and check procedures are laid out with the individual steps in sequential order.

1 The manual is divided into chapters. An abbreviation and symbol in the upper right corner of each page indicate the current chapter.

#### Refer to "SYMBOLS".

- ② Each chapter is divided into sections. The current section title is shown at the top of each page, except in Chapter 3 ("PERIODIC CHECKS AND ADJUSTMENTS"), where the sub-section title(-s) appears.
- 3 Sub-section titles appear in smaller print than the section title.
- ④ To help identify parts and clarify procedure steps, there are exploded diagrams at the start of each removal and disassembly section.
- ⑤ Numbers are given in the order of the jobs in the exploded diagram. A circled number indicates a disassembly step.
- 6 Symbols indicate parts to be lubricated or replaced. Refer to "SYMBOLS".
- (7) A job instruction chart accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc.
- (8) Jobs requiring more information (such as special tools and technical data) are described sequentially.

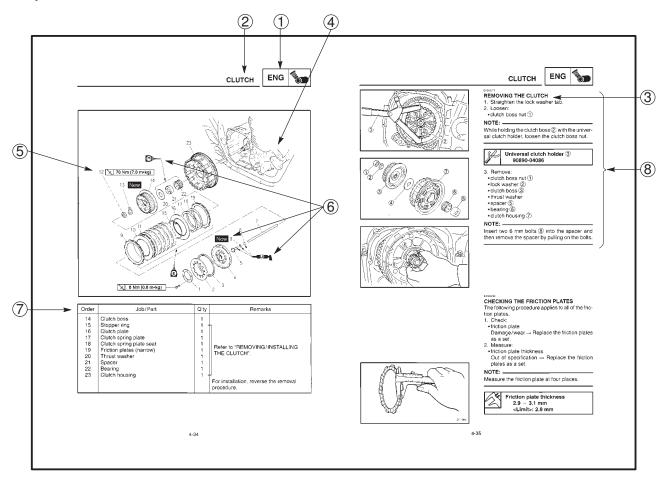

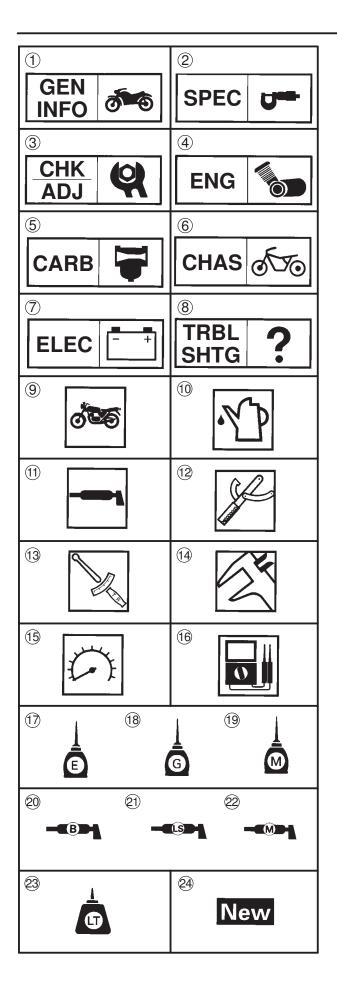

#### **SYMBOLS**

The following symbols are not relevant to every vehicle.

Symbols 1 to 8 indicate the subject of each chapter.

- (1) General information
- ② Specifications
- (3) Periodic checks and adjustments
- (4) Engine
- (5) Carburetor(-s)
- (6) Chassis
- 7 Electrical system
- (8) Troubleshooting

Symbols 9 to 6 indicate the following.

- 9 Serviceable with engine mounted
- (10) Filling fluid
- (11) Lubricant
- 12 Special tool
- 13 Tightening torque
- (14) Wear limit, clearance
- (15) Engine speed
- 16 Electrical data

Symbols  $\widehat{\mathcal{D}}$  to  $\widehat{\mathcal{Q}}$  in the exploded diagrams indicate the types of lubricants and lubrication points.

- 17 Engine oil
- (18) Gear oil
- 19 Molybdenum disulfide oil
- 20 Wheel bearing grease
- (21) Lithium soap base grease
- 22 Molybdenum disulfide grease

Symbols 23 to 24 in the exploded diagrams indicate the following:

- 23 Apply locking agent (LOCTITE®)
- 24) Replace the part

#### **CONTENTS**

#### **SPECIFICATIONS**

GENERAL SPECIFICATIONS 1
MAINTENANCE SPECIFICATIONS 1
CHASSIS 1

#### **GENERAL SPECIFICATIONS**



#### **SPECIFICATIONS**

#### **GENERAL SPECIFICATIONS**

Model	XJR1300SP
Model code:	5EA5 (SF) (G) (A) 5EA6 (GB) (D) (NL) (B) (F) (P) (I) (GR) (N) (SW) (E)

# MAINTENANCE SPECIFICATIONS CHASSIS

Item		Standard	Limit	
Rear suspensio	n:			
Shock absorbe	er travel	88 mm	•••	
Spring free len	igth	230 mm	•••	
Fitting length		212 mm	•••	
Spring rate	(K1)	17.8 N/mm (1.82 kg/mm)	•••	
	(K2)	21.6 N/mm (2.2 kg/mm)	•••	
	(K3)	23.7 N/mm (2.42 kg/mm)	•••	
Stroke	(K1)	0 ~ 32 mm	•••	
	(K2)	32 ~ 62 mm	•••	
	(K3)	62 ~ 88 mm	•••	



# 2002

# XJR1300(P) 5EA3-AE2

# SUPPLEMENTARY SERVICE MANUAL

#### **FOREWORD**

This Supplementary Service Manual has been prepared to introduce new service and data for the XJR1300 (P) 2002. For complete service information procedures it is necessary to use this Supplementary Service Manual together with the following manual.

XJR1300 (L) '99 SERVICE MANUAL: 5EA3-AE1

EAS00000

XJR1300 (P) 2002
SUPPLEMENTARY
SERVICE MANUAL
© 2001 by Yamaha Motor Co., Ltd.
1st Edition, August 2001
All rights reserved.
Any reprinting or unauthorized use without the written permission of Yamaha Motor Co., Ltd. is expressly prohibited.

#### NOTICE

This manual was produced by the Yamaha Motor Company, Ltd. primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to include all the knowledge of a mechanic in one manual. Therefore, anyone who uses this book to perform maintenance and repairs on Yamaha vehicles should have a basic understanding of mechanics and the techniques to repair these types of vehicles. Repair and maintenance work attempted by anyone without this knowledge is likely to render the vehicle unsafe and unfit for use.

This model has been designed and manufactured to perform within certain specifications in regard to performance and emissions. Proper service with the correct tools in necessary to ensure that the vehicle will operate as designed. If there is any question about a service procedure, it is imperative that you contact a Yamaha dealer for any service information changes that apply to this model. This policy is intended to provide the customer with the most satisfaction from his vehicle and to conform with federal environmental quality objectives.

Yamaha Motor Company, Ltd. is continually striving to improve all its models. Modifications and significant changes in specifications or procedures will be forwarded to all authorized Yamaha dealers and will appear in future editions of this manual where applicable.

#### NOTE: -

- This Service Manual contains information regarding periodic maintenance to the emission control system. Please read this material carefully.
- Designs and specifications are subject to change without notice.

EAS000

#### IMPORTANT INFORMATION

Particularly important information is distinguished in this manual by the following.

The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

Failure to follow WARNING instructions could result in severe injury or death to the motorcycle operator, a bystander or a person checking or repairing the mo-

torcycle.

**CAUTION:** A CAUTION indicates special precautions that must be taken to avoid damage

to the motorcycle.

**NOTE:** A NOTE provides key information to make procedures easier or clearer.


#### **HOW TO USE THIS MANUAL**


This manual is intended as a handy, easy-to-read reference book for the mechanic. Comprehensive explanations of all installation, removal, disassembly, assembly, repair and check procedures are laid out with the individual steps in sequential order.

1 The manual is divided into chapters. An abbreviation and symbol in the upper right corner of each page indicate the current chapter.

#### Refer to "SYMBOLS".

- ② Each chapter is divided into sections. The current section title is shown at the top of each page, except in Chapter 3 ("PERIODIC CHECKS AND ADJUSTMENTS"), where the sub-section title(-s) appears.
- 3 Sub-section titles appear in smaller print than the section title.
- ④ To help identify parts and clarify procedure steps, there are exploded diagrams at the start of each removal and disassembly section.
- ⑤ Numbers are given in the order of the jobs in the exploded diagram. A circled number indicates a disassembly step.
- ⑥ Symbols indicate parts to be lubricated or replaced. Refer to "SYMBOLS".
- 7 A job instruction chart accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc.
- (8) Jobs requiring more information (such as special tools and technical data) are described sequentially.

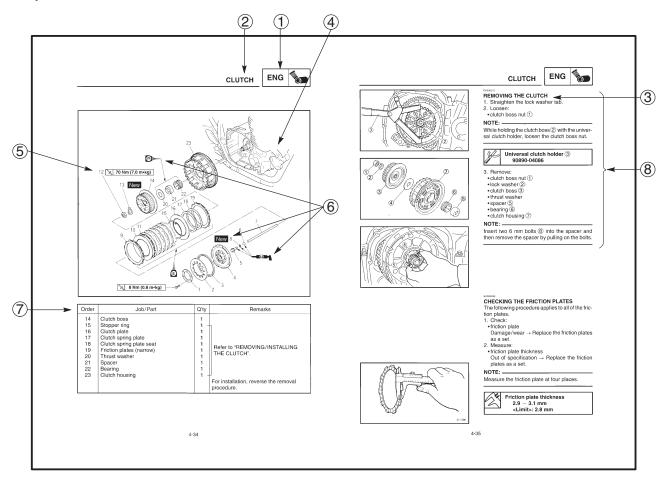

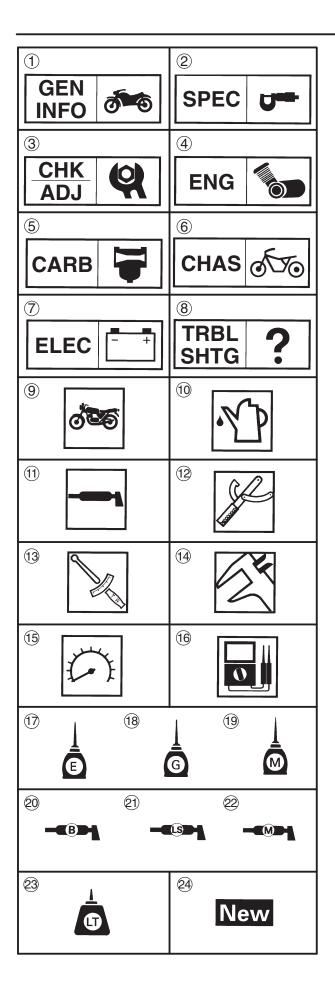

#### **SYMBOLS**

The following symbols are not relevant to every vehicle.

Symbols ① to ⑧ indicate the subject of each chapter.

- (1) General information
- (2) Specifications
- 3 Periodic checks and adjustments
- 4 Engine
- (5) Carburetor(-s)
- 6 Chassis
- (7) Electrical system
- (8) Troubleshooting

Symbols 9 to 6 indicate the following.

- (9) Serviceable with engine mounted
- 10 Filling fluid
- (11) Lubricant
- (12) Special tool
- 13 Tightening torque
- (14) Wear limit, clearance
- (15) Engine speed
- 16 Electrical data

Symbols 7 to 2 in the exploded diagrams indicate the types of lubricants and lubrication points.

- (17) Engine oil
- (18) Gear oil
- (19) Molybdenum disulfide oil
- 20 Wheel bearing grease
- 21) Lithium soap base grease
- 22 Molybdenum disulfide grease

Symbols 23 to 24 in the exploded diagrams indicate the following:

- 23 Apply locking agent (LOCTITE®)
- 24 Replace the part

## **CONTENTS**

GENERAL SPECIFICATIONS  MAINTENANCE SPECIFICATIONS  ENGINE  CHASSIS  ELECTRICAL  CABLE ROUTING	3 3 6 8
PERIODIC INSPECTION AND ADJUSTMENT	
INTRODUCTION	
PERIODIC MAINTENANCE/LUBRICATION INTERVALS ENGINE	_
ADJUSTING THE CLUTCH LEVER	
CHASSIS	
ADJUSTING THE FRONT BRAKE	23
CARBURETORS	
AIR INDUCTION SYSTEM	
AIR INJECTION	
AIR INDUCTION SYSTEM DIAGRAMS	
CHECKING THE AIR INDUCTION SYSTEM	
CHASSIS	
FRONT AND REAR BRAKES	
FRONT BRAKE MASTER CYLINDER	27
ASSEMBLING AND INSTALLING THE FRONT BRAKE MASTER CYLINDER	28
REAR BRAKE CALIPER	
CARBURETOR HEATING SYSTEM	_
XJR1300 2002 WIRING DIAGRAM (for EUR)	
X.IR1300P 2002 WIRING DIAGRAM (for AUS)	

#### **GENERAL SPECIFICATIONS**



#### **SPECIFICATIONS**

#### **GENERAL SPECIFICATIONS**

Model	XJR1300 (P)
Model code:	5EAT/5EAW (EUR) 5EAU/5EAX (for D) 5EAV/5EAY (for AUS)
Dimensions: Overall length Overall width Overall height Seat height Wheelbase Minimum ground clearance Minimum turning radius	2,175 mm 775 mm 1,115 mm 790 mm 1,510 mm 120 mm 2,800 mm
Basic weight: With oil and full fuel tank Carburetor: Type/quantity Manufacturer	247 kg BSR37/4 MIKUNI
Transmission: Primary reduction system Primary reduction ratio Secondary reduction system Secondary reduction ratio Transmission type Operation Gear ratio 1st 2nd 3rd 4th 5th	Spur gear 98/56 (1.750) Chain drive 39/18 (2.167) Constant mesh 5-speed Left foot operation 40/14 (2.857) 36/18 (2.000) 33/21 (1.571) 31/24 (1.292) 29/26 (1.115)

#### **GENERAL SPECIFICATIONS**



	Model	XJR1300 (P)
Tire:		
Туре		Tubeless
Size	front	120/70ZR17 (58W)/
		120/70ZR17 M/C (58W)
	rear	180/55ZR17 (73W)/
		180/55ZR17 M/C (73W)
Manufactu	irer front	MICHELIN/DUNLOP
	rear	MICHELIN/DUNLOP
Type	front	MACADAM90X E/D220F ST M
	rear	MACADAM90X E/D220 ST M
Tire pressui	re (cold tire):	
Maximum	load-except motorcycle	203 kg
Loading condition A *		0 ~ 90 kg
front		250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar)
rear		250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar)
Loading co	ondition B *	90 ~ 203 kg
	front	250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar)
	rear	290 kPa (2.9 kg/cm <sup>2</sup> , 2.9 bar)
High-spee		
	front	250 kPa (2.5 kg/cm <sup>2</sup> , 2.5 bar)
	rear	290 kPa (2.9 kg/cm <sup>2</sup> , 2.9 bar)

<sup>\*</sup>Load is the total weight of cargo, rider, passenger, and accessories.

SPEC U

# MAINTENANCE SPECIFICATIONS ENGINE

Model	Standard	Limit	
Cylinder head: Warp limit *	•••	0.2 mm	
Cylinder: Bore size Taper limit Out of round limit Wear limit	79.00 ~ 79.01 mm	0.05 mm 0.1 mm 79.1 mm	
Camshaft: Drive method Cam cap inside diameter Camshaft outside diameter Shaft-to-cap clearance Cam dimensions	Chain drive (Center) 25.000 ~ 25.021 mm 24.967 ~ 24.980 mm 0.020 ~ 0.054 mm	•••	
Intake "A"  "B"  Exhaust "A"  "B"  Camshaft runout limit	35.95 ~ 36.05 mm 28.058 ~ 28.158 mm 35.95 ~ 36.05 mm 28.045 ~ 28.145 mm	35.85 mm 27.958 mm 35.85 mm 27.945 mm 0.03 mm	



Model		Standard	Limit
Piston:			
Piston to cylinder clearar	ice	0.015 ~ 0.040 mm	0.15 mm
Piston size "D"		78.970 ~ 78.985 mm	•••
	Н		
Measuring point "H"		5 mm	
Piston off-set		1 mm	•••
Piston off-set direction		IN side	•••
Piston pin bore inside dia	meter	18.004 ~ 18.015 mm	18.045 mm
Piston pin outside diame		17.991 ~ 18.000 mm	17.971 mm
Carburetor:			
I.D. mark		5EAT 30	•••
Main jet	(M.J)	#107.5	•••
Main air jet	(M.A.J)	#80	•••
Jet needle	(J.N) ´	5D118-53-3	•••
Needle jet	(N.J)	P-0M	•••
Pilot jet	(P.A.J.1)	#140	•••
Pilot outlet	(P.O)	ø1.0	•••
Pilot jet	(P.J)	#15	•••
Bypass 1	(B.P.1)	0.9	•••
Bypass 2	(B.P.2)	0.9	•••
Bypass 3	(B.P.3)	0.8	•••
Pilot screw	(P.S)	2	•••
Valve seat size	(V.S)	2.3	•••
Starter jet	(G.S.1)	#52.5	•••
Starter jet	(G.S.2)	0.8	•••
Throttle valve size	(Th.V)	#115	•••
Float height	(F.H)	33 ~ 34 mm	•••
Fuel level (using special	tool)	3 ~ 4 mm	•••
Engine idle speed		950 ~ 1,150 r/min	•••
Intake vacuum		31.3 kPa (235 mmHg)	•••

SPEC U

#### Tightening torques

Part to be tightened	Part name	Thread size	1 (.) TV 1	Tightening torque		Remarks
		SIZE		Nm	m•kg	
Carburetor joint and carburetor	Band	M4 × 0.7	4	2.7	0.27	
Carburetor and air filter joint	Clamp	$M4 \times 0.7$	4	2.7	0.27	
Air induction system pipe joint	_	_	4	3.7	0.37	
Air induction system	Bolt	$M6 \times 1.0$	2	10	1.0	



#### CHASSIS

Model	Standard	Limit
Front suspension: Front fork travel Fork spring free length Fitting length Collar length Spring rate (K1) (K2) Stroke (K1) (K2) Optional spring Oil capacity Oil level Oil grade	130 mm 308.3 mm 287.3 mm 245 mm 6.4 N/mm (0.65 kg/mm) 10.8 N/mm (1.1 kg/mm) 0 ~ 85 mm 85 ~ 130 mm No 568 cm <sup>3</sup> 118 mm Fork oil 10W or equivalent	300 mm
Rear suspension: Shock absorber travel Spring free length Fitting length Spring rate (K1) (K2) (K3) (K4) Stroke (K1) (K2) (K3)	93 mm 230 mm 209 mm 19.4 N/mm (1.98 kg/mm) 21.4 N/mm (2.18 kg/mm) 26.3 N/mm (2.68 kg/mm) 28.2 N/mm (2.88 kg/mm) 0 ~ 13 mm 13 ~ 50 mm 50 ~ 67.5 mm 67.5 ~ 93.0 mm	225 mm
Front wheel: Type Rim size  Rim material Rim runout limit radial lateral	Cast wheel 17 × MT3.50 or 17 M/C × MT3.50 Aluminum •••	••• ••• 1 mm 0.5 mm
Rear wheel: Type Rim size Rim material Rim runout limit radial lateral	Cast wheel 17 × MT3.50 or 17 M/C × MT3.50 Aluminum •••	••• ••• 1 mm 0.5 mm
Drive chain: Type/manufacturer No. of links Chain free play	50VA8/DAIDO 112 20 ~ 30 mm	•••
Brake lever & brake pedal: Brake pedal position	40 mm	•••

SPEC U

#### Tightening torques

Part to be tightened	Part name	art name Thread size Q		ame Thread size Q'ty torque		٠ ١	Remarks
				Nm	m•kg		
Throttle cable and carburetor Ignition coil	Nut Nut	M6 × 1.0 M6 × 1.0	2 2	4 6.5	0.4 0.65		



#### **ELECTRICAL**


Model	Standard	Limit
T.C.I.: Pickup coil resistance/color T.C.I. unit model/manufacturer	248 ~ 372 Ω/W/R-W/G TNDF63/DENSO (except for D) TNDF64/DENSO (for D)	•••
Charging system: Type Model/manufacturer Normal output Rotor coil resistance Stator coil resistance Brush overall length Spring force	A.C. generator B3G/DENSO 13.5 V 28 A/5,000 r/min 2.8 $\sim$ 3.0 $\Omega$ 0.19 $\sim$ 0.21 $\Omega$ 13.7 mm 5.10 $\sim$ 5.69 N (0.52 $\sim$ 0.58 kg)	4.7 mm
Voltage regulator: Type Model/manufacturer No load regulated voltage	Semi-conductor, field control type B3G/DENSO 14.2 ~ 14.8 V	•••
Electric starter system: Type Starter motor: Model/manufacturer Output Brush overall length Spring force Commutator diameter Mica undercut Starter relay: Model/manufacturer Amperage rating Coil winding resistance Starting circuit cut-off relay:	Constant mesh type  SM-13/MITSUBA 0.65 kW 10 mm 8.82 N (899 kg) 28 mm 0.7 mm  MS5E-491/JIDECO 180 A 4.2 ~ 4.6 Ω	••• 5 mm ••• 27 mm •••
Model/manufacturer Coil winding resistance Diode	G8R-30Y-P/OMRON 162 $\sim$ 198 $\Omega$ Yes	•••
Circuit breaker: Type Amperage for individual circuit × Q'ty MAIN HEAD LIGHT SIGNAL IGNITION TURN Reserve	Fuse  40 A × 1 15 A × 1 40 A × 1 15 A × 1	•••

#### **CABLE ROUTING**

- 1) Starter motor cable
- 2 Battery negative (–) lead wire
- 3 Carburetor heater plug
- 4 A.C. generator coupler
- (5) Rear stop switch coupler
- 6 Neutral lead wire
- 7 Pickup lead wire
- 8 Side stand switch lead wire
- 9 T.P.S.
- 10 Tank fitting
- 11) #1 and #4 ignition coil lead wires
- 12 Horn lead wire


- 13 #3 high-tension cord
- 14 #4 high-tension cord
- 15 Engine frame ground lead wire
- 16 Rear stop switch
- (17) Relay assy
- 18 Guide wire
- 19 Fuel tank drain hose
- 20 Fuel tank breather hose

A Pass the starter motor cable and the negative (–) lead wire of the battery through the inside of the seat rail.

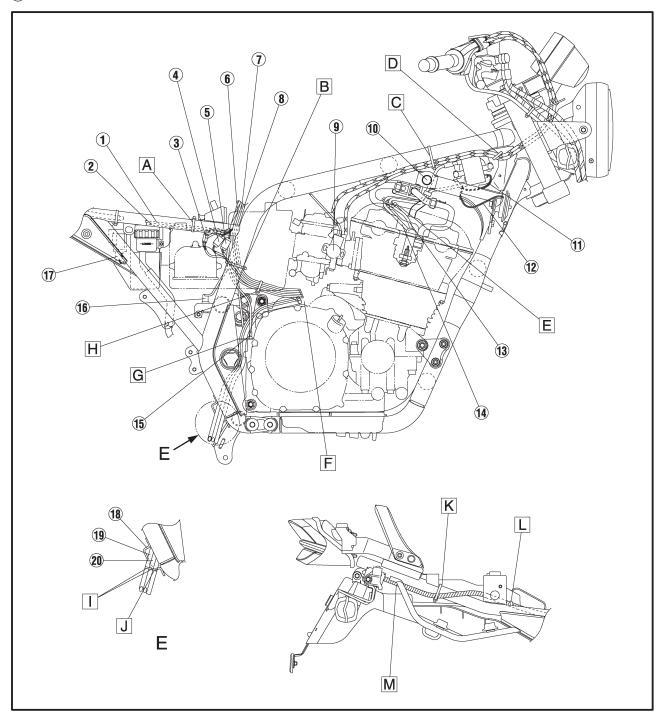




- B Secure the carburetor heater C Clamp the throttle cables to the E Bundle the #3 and #4 high-tenlead wire, the starter motor cable, the negative (-) lead wire of the battery, the A.C. generator lead wire, the neutral lead wire, the side stand switch lead wire, the pickup lead wire, and the rear stop switch lead wire (total 8 wires), to the fuel tank rail, near the air cleaner intake port mounting screw, by use of this band. The front end of the band must be directed towards the front of the vehicle.
  - fuel tank rail, on the tank fitting by use of this band. The front end of the band must be directed downward.
  - D Thread this clamp through the upper hole in the gusset and secure the two throttle cables. The front end of the clamp must be directed towards the inside of the vehicle.
- sion cords, on the head cover mounting bolt at the #3 cord, by use of this band.
- F Do not entangle the lead wires and the hosing.
  - Pass the bundle of lead wires and that of hosing orderly as shown.
- G Pass the air cleaner drain hose, the fuel tank drain hose, and the fuel tank breather hose (total 3 hoses) through the guide wire of the engine.

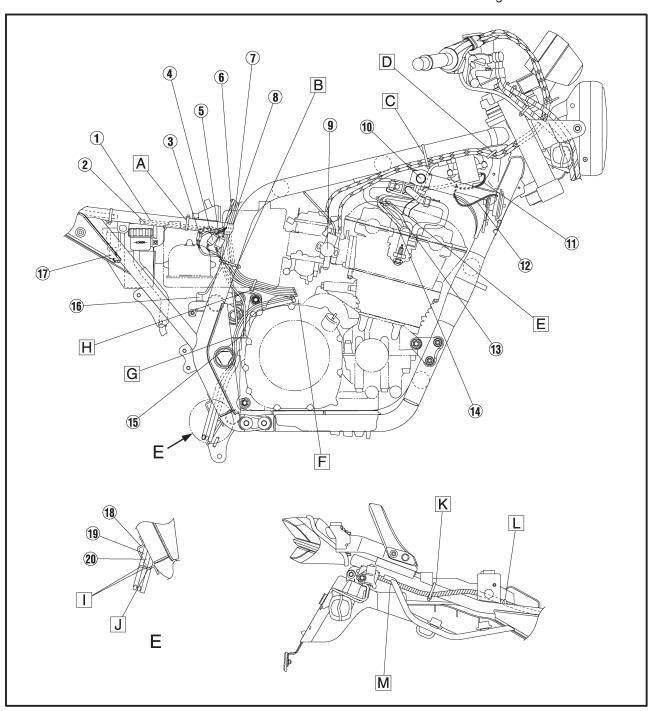



- H Bundle the A.C. generator lead K Clamp the wire harness to the wire, the pickup lead wire, the side stand switch lead wire, the starter motor cable, and the carburetor heater lead wire (total 5 wires), by use of this clamp.
- ☐ Match the marks of the fuel tank ☐ Pass the wire harness between drain hose and fuel tank breather hose, and arrange the two types of hose properly.
- J Match the paint mark of the air cleaner drain hose to the lower end of the guide wire.
- seat rail, at the front end of the bracket. The front end of the clamp must be directed downward.
- L Clamp the wire harness.
- the handle standing lug member and the rear fender.

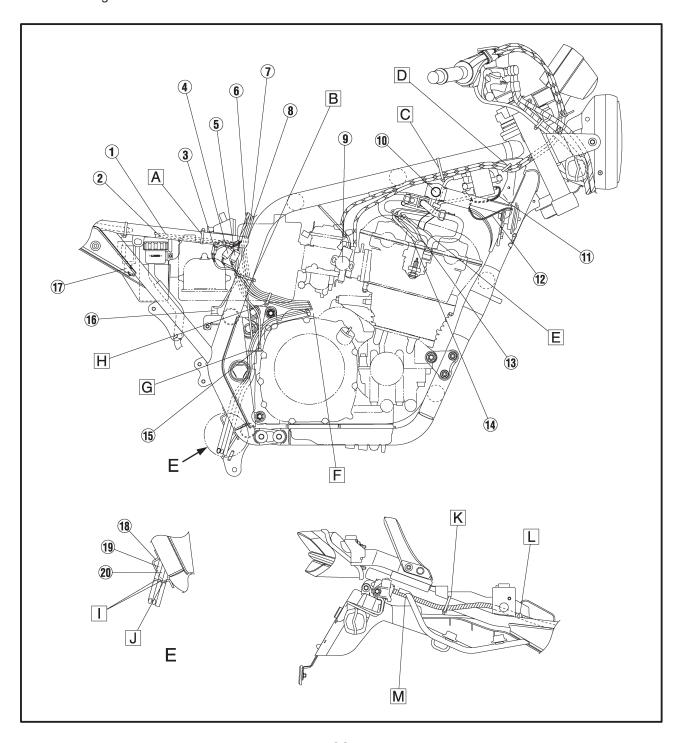



- (1) Gusset
- 2 Tension pipe 1
- (3) #2 high-tension cord
- 4 #1 high-tension cord
- (5) Wire starter
- 6 A.C. generator
- 7 Oil filter cover
- 8 Side stand switch
- (9) Side stand switch lead wire
- 10 Horn lead wire
- (11) #2 and #3 ignition coil lead wires
- (12) Frame ground lead wire


- 13 Flasher relay coupler
- (14) Oil lamp relay coupler
- 15 Igniter unit coupler
- A Pass the wire harness and the starter cable through the holder wire of the gusset.
  - Pass the starter cable under the wire harness.
- B Secure the lead wire branch of the main harness to tension pipe 1, at the immediate rear of the

gusset, by use of this band.

The front end of the band must be directed downward.

© Bundle the four high-tension cords, the #1 and #2 cords up and the #3 and #4 cords down, by use of this band.


Position the leading ends of the cords near, but not below, the lower front end of the air induction system assy.

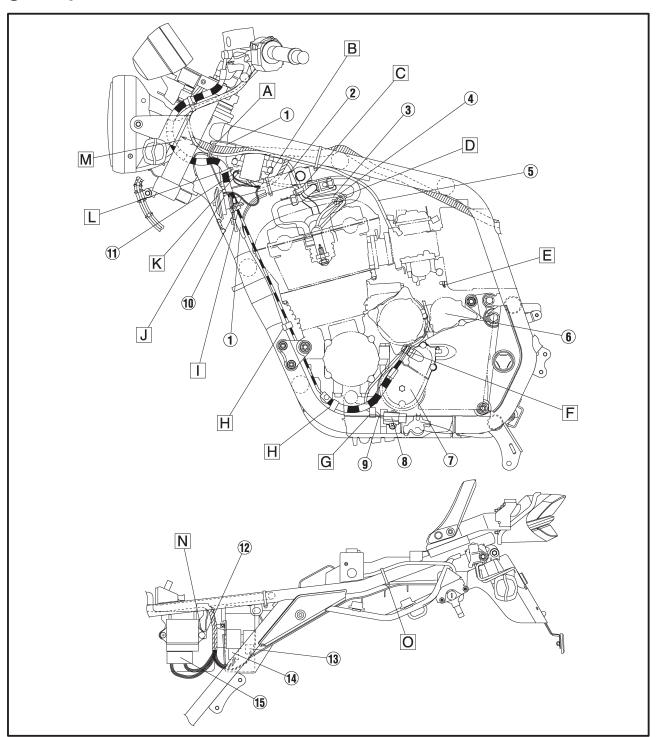

SPEC

- D Bundle the #1 and #2 high-ten- G After securing the side stand I Secure the grommet of the sion cords using this clamp. Clamp these cords above the #2 head cover mounting bolt.
- E Route the air cleaner drain hose through the right side of the vehicle with a clearance above the starter motor.
- F Mount the square fixture of the clutch hose in parallel with the H Clamp the clutch hose. cover.
- switch lead wire using this clamp, first route the lead wire between the pickup cover, the oil filter cover, the A.C. generator, and the starter motor. Next, as with the engine lead wire, route the lead wire through the right side of the vehicle.


- clutch hose by use of this holder wire of the gusset.
- J Pass the horn lead wire between the clutch hose and the frame, then pull the lead wire out to the front, and connect the lead wire to the horn.
- K Connect the black-couplerequipped lead wire to the #1 and #4 ignition coils.

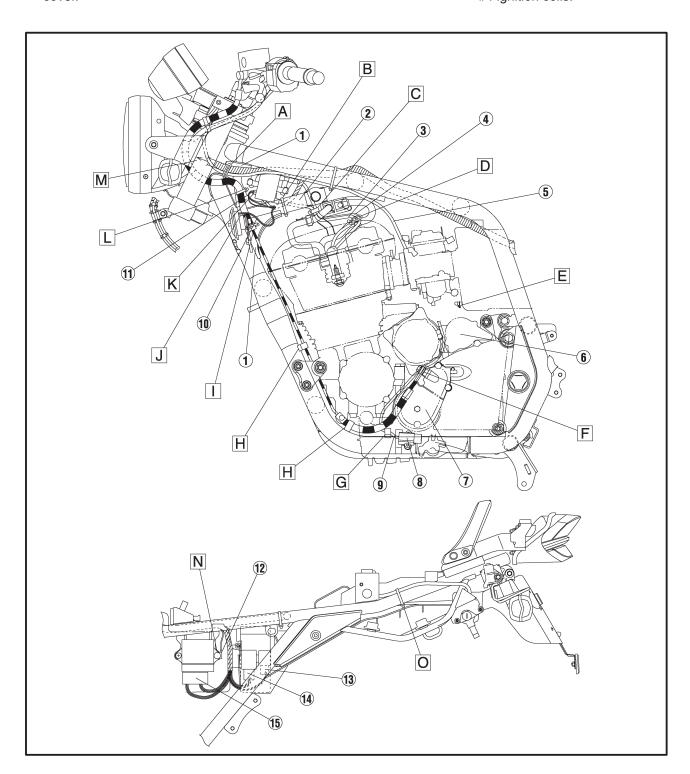

SPEC

- er hole of the gusset and secure the clutch hose.
  - be directed towards the inside of the vehicle.
- M Pass the main harness through the inside of the clutch hose and insert the harness into the left of the headlight lower hole.
- wire together with the igniter unit mounting screw.
  - The front end of the clamp must O Clamp the seat lock wire to the seat rail.

The front end of the clamp must be directed downward.

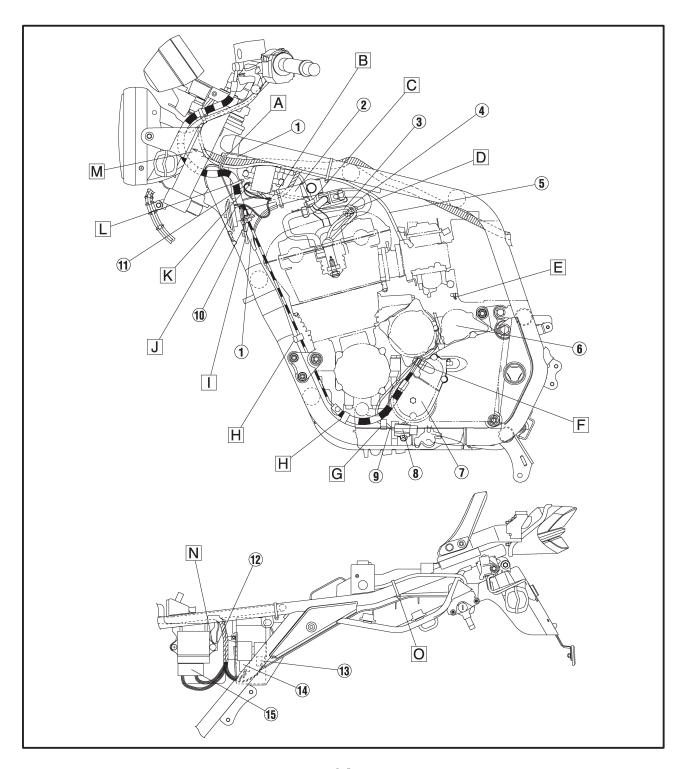




- 1) Throttle cable
- 2) #1 and #4 ignition coils
- (3) T.P.S.
- (4) Neutral switch coupler
- 5 Pickup coupler
- 6 Side stand switch coupler
- 7 Fuel sender coupler
- 8 Igniter unit
- 9 Starter cable
- 10 #2 and #3 ignition coils
- (11) Stoppers
- (12) Negative (-) lead wire of the batterv
- 13 Relay assy

- (14) Starter motor cable
- 15 Thermoswitch
- 16 Starter relay
- (17) Rib of the rear fender
- 18 Seat lock wire
- 19 Positive (+) lead wire of the battery
- 20 Starter relay coupler
- 21) Fuse box
- 2 Negative (-) lead wire coupler of D To fuel sender the battery
- 23 Flasher relay
- 24) Oil lamp relay
- 25 Battery band


- A Right horn.
  - Install the HI tone source (with Hmarked label) at the right of the vehicle.
- B Connect the #1-#4 high-tension cords in order of the cord num-
- C Pass the T.P.S. lead wire through the clamp of the #4 carburetor.

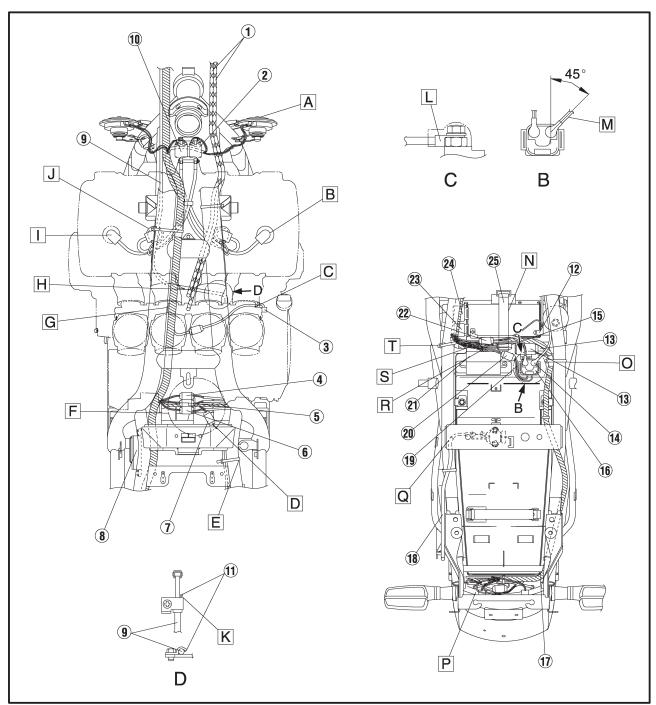



- E Clamp the starter motor cable H Pass the starter cable through K Connect the starter cable to face and the negative (-) lead wire of the battery to the seat rail, between the air cleaner mounting bracket and the tank mounting J Secure the wire harness and the bracket.
- F Connect the fuel sender coupler, neutral switch coupler, pickup coupler, and side stand switch coupler wires above the air cleaner.
- G Thread the wire harness insertion clamp onto the T-stud of the frame.

- the front of the throttle cable.
- Trom left: #1, #2, #3, and #4 high-tension cords.
  - starter cable, on the harness positioning tape, by use of this band. The front end of the band must be directed downward. The harness must not deflect between the T-stud and the clamp.
- at right angles to the vehicle body with contact with the stoppers.
- L Direct the crimping side of the battery positive (+) lead wire downward and connect the lead wire.
- M Connect the starter motor cable to face outward at an angle of about 45 degrees.

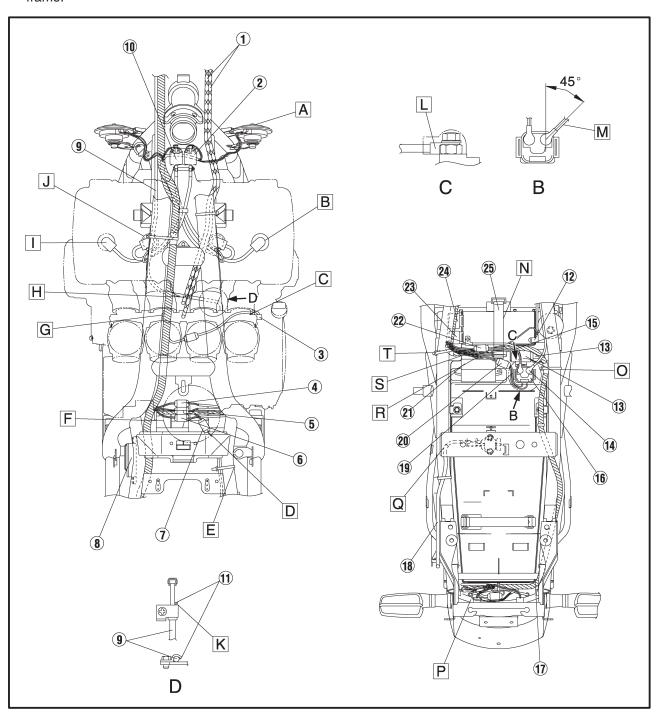




- N Secure the two positive (+) lead P Store the wire harness, the tail- S After connecting the lead wire of wires of the battery, the negative(-) lead wire coupler of the battery, and the wire harness by use of this battery band.
- O Clamp the wire harness to the seat rail, on the wire harness positioning tape and at the immediate rear of the side cover

The front end of the clamp must face downward and be positioned inside the back stay.

- light lead wire, and the rear left and right flasher lead wires, into the space between the taillight bracket and the rib of the rear T fender.
- Q The seat lock wire must not extend to the outside of the brack-
- mounting bracket on the seat R Pass the lead wire leading to the fuse box under the wire harness.
- the thermoswitch, store the lead wire into the space under the wire harness.
- Clamp the wire harness to the seat rail, on the wire harness positioning tape and at the immediate rear of the side cover mounting bracket on the seat

The front end of the clamp must face downward and be positioned inside the back stay.

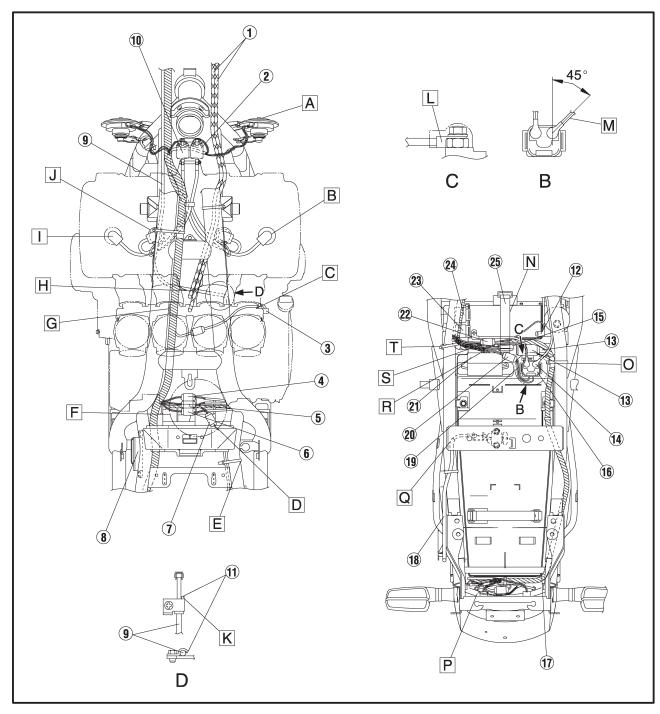



- 1 Meter lead wire
- (2) Main switch lead wire
- (3) Crown handle
- (4) Starter cable
- (5) Left handle switch lead wire
- (6) Clutch hose
- 7) Front left flasher lead wire
- (8) Front right flasher lead wire
- (9) Brake hose 2
- 10 Brake hose 1
- (11) Right handle switch lead wire
- (12) Wire harness
- 13 Taillight lead wires
- (14) Taillight bracket
- (15) Rib of the rear fender


- 16 Rear fender
- (17) Rear left flasher lead wire
- (18) Rear right flasher lead wire
- 19 Wire harness
- A Pass the throttle cable through the guide wire of the stay headlight.
- B Insert the meter lead wire and upper hole of the headlight.
- C Bundle the handle switch lead wire, the clutch hose, and the starter cable, under the crown handle, by use of this band.

The handle switch lead wire must be passed outside the clutch hose.

The starter cable must be passed inside the clutch hose.


the main switch lead wire into the D Pass the front left and right flasher lead wires through the front of the stay headlight.

Securely mount the cap to face upward.

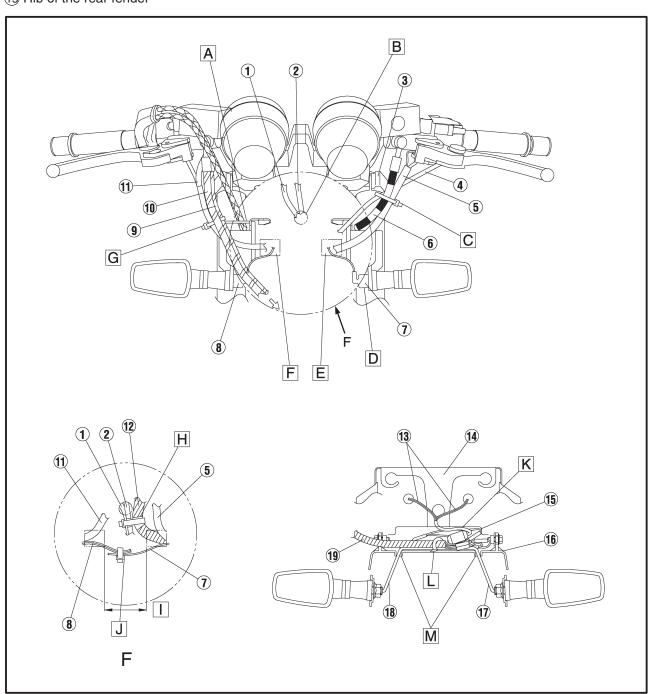

**SPEC** 

- handle switch and the left lead wire of the front flasher into the left of the headlight lower hole.
- F Insert the right lead wire of the handle switch and the right lead wire of the front flasher into the right of the headlight lower hole.
- G Bundle the handle switch lead guide wire of the stay headlight by use of this band.
- main switch lead wire, and the meter lead wire, to the wire harness and main switch lead wire positioning tapes, and bundle the harness and the lead wires by use of the band.
- The lead wires must be clamped in this area.
- wire and brake hose 2, near the J Bundle the front left and right
- E Insert the left lead wire of the H Match the wire harness, the K The wire harness, the taillight lead wires, and the rear left and right flasher lead wires must be arranged below the rib of the rear fender.
  - L Clamp the wire harness and the rear left and right flasher lead
    - The front end of the clamp must be directed forward.
  - flasher lead wires by use of the M Pass the rear left and right flasher lead wires through the respective holes in the rear fender.

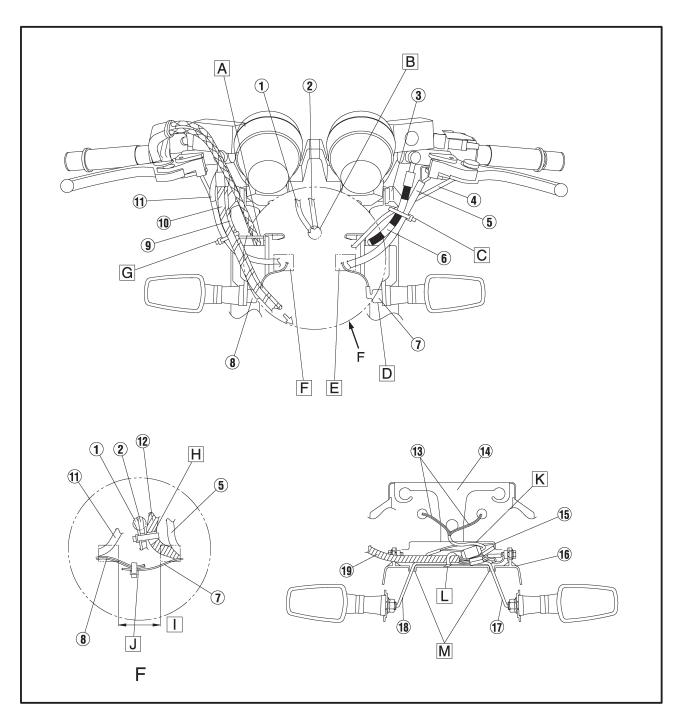

# INTRODUCTION/ PERIODIC MAINTENANCE/LUBRICATION INTERVALS



### PERIODIC INSPECTION AND ADJUSTMENT

#### INTRODUCTION

This chapter includes all information necessary to perform recommended inspections and adjustments. These preventive maintenance procedures, if followed, will ensure more reliable vehicle operation and a longer service life. The need for costly overhaul work will be greatly reduced. This information applies to vehicles already in service as well as new vehicles that are being prepared for sale. All service technicians should be familiar with this entire chapter.

#### PERIODIC MAINTENANCE/LUBRICATION INTERVALS

#### NOTE: -

- The annual checks must be performed every year, except if a kilometer-based maintenance is performed instead.
- From 50,000 km, repeat the maintenance intervals starting from 10,000 km.
- Items marked with an asterisk should be performed by Yamaha dealer as they require special tools, data and technical skills.

			011507 05 14411155141105 105	ODO	/IETER F	READING	G (× 1,0	00 km)	ANNUAL	
NC	).	ITEM	CHECK OR MAINTENANCE JOB	1	10	20	30	40	CHECK	
1	*	Fuel line	Check fuel hoses and vacuum hose for cracks or damage.		<b>√</b>	<b>V</b>	<b>V</b>	1	√	
2	*	Fuel filter	Check condition.			√		√		
3		Spark plugs	Check condition.     Clean and regap.		√		<b>√</b>			
			Replace.			√		√		
4	*	Valves	Check valve clearance.     Adjust			Every	20,000	km		
_		A lo dila or a la ora and	Clean.		√		√			
5		Air filter element	Replace.			√		√		
6	*	Clutch	Check operation, fluid level and vehicle for fluid leakage. (See NOTE.)	<b>√</b>	<b>√</b>	<b>V</b>	<b>V</b>	1		
7	*	Front brake	Check operation, fluid level and vehicle for fluid leakage. (See NOTE.)	<b>V</b>	1	<b>V</b>	1	1	V	
			Replace brake pads.	Whenever worn to the lin				the limit	iit	
8	*	Rear brake	Check operation, fluid level and vehicle for fluid leakage. (See NOTE.)	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	√	
			Replace brake pads.	Whenever worn to the limit					•	
_	_	Buston bassas	Check for cracks or damage.		√	√	√	√	√	
9		Brake hoses	Replace. (See NOTE.)			Eve	ry 4 year	'S		
10	*	Wheels	Check runout and for damage.		√	√	√	V		
11	*	Tires	<ul> <li>Check tread depth and for damage.</li> <li>Replace if necessary.</li> <li>Check air pressure.</li> <li>Correct if necessary.</li> </ul>	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \		<b>V</b>				
12	*	Wheel bearings	Check bearing for looseness or damage.		√	√	√	√		
10	*	Continue and arms	Check operation and for excessive play.		√	√	√	√		
13		Swingarm	Lubricate with lithium-soap-based grease.	Every 50,000 km				-		
14 Drive chain		Drive chain	Check chain slack.     Make sure that the rear wheel is properly aligned.     Clean and lubricate.	Every 1,000 km and after with the motorcycle or riding in						

# PERIODIC MAINTENANCE/LUBRICATION INTERVALS






NO.				ODON	IETER R	EADING	i (× 1,0	00 km)	ANNUAL
NC	).	ITEM	CHECK OR MAINTENANCE JOB	1	10	20	30	40	CHECK
15 *		Steering bearings	Check bearing play and steering for roughness.	1	<b>V</b>	√	√	√	
			Lubricate with lithium-soap-based grease.			Every	20,000	km	•
16	*	Chassis fasteners	Make sure that all nuts, bolts and screws are properly tightened.		√	√	√	√	√
17		Sidestand, centeratand	Check operation.     Lubricate.		1	√	√	√	<b>√</b>
18	*	Sidestand switch	Check operation.	√	√	√	√	√	√
19	*	Front fork	Check operation and for oil leakage.		√	√	√	√	
20	*	Shock absorber assemblies	Check operation and shock absorbers for oil leakage.		√	√	√	√	
21	*	Carburetors	Check starter (choke) operation.     Adjust engine idling speed and synchronization.	<b>V</b>	<b>√</b>	<b>V</b>	V	<b>V</b>	√
22		Engine oil	Change.     Check oil level and vehicle for oil leakage.	<b>V</b>	<b>√</b>	√	√	√	<b>√</b>
23		Engine oil filter element	Replace.	1		√		√	
24	*	Front and rear brake switches	Check operation.	<b>V</b>	<b>V</b>	√	√	√	<b>√</b>
25		Moving parts and cables	Lubricate.		<b>V</b>	√	√	√	<b>√</b>
26	*	Lights, signals and switches	Check operation.     Adjust headlight beam.	<b>V</b>	√	√	<b>V</b>	√	<b>V</b>

#### NOTE

- The air filter needs more frequent service if you are riding in unusually wet or dusty areas.
- Hydraulic brake and clutch service.
  - Regularly check and, if necessary, correct the brake and clutch fluid levels.
  - Every two years replace the internal components of the brake master cylinders and calipers as well as clutch master and release cylinders, and change the brake and clutch fluids.
  - Replace the brake and clutch hoses every four years and if cracked or damaged.

## **ADJUSTING THE CLUTCH LEVER**



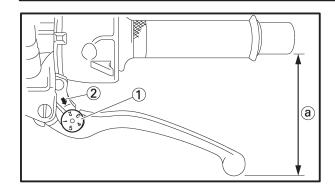

#### **ENGINE**

### **ADJUSTING THE CLUTCH LEVER**

- 1. Adjust:
  - clutch lever position (distance ⓐ from the handlebar grip to the clutch lever)

a. While pushing the clutch lever forward, turn


NOTE: —	
the desired position.	
the adjusting dial $\textcircled{1}$ until the clutch le	ver is in

Be sure to align the setting on the adjusting dial with the arrow mark ② on the clutch lever holder.

Position #1	Distance (a) is the largest
Position #5	Distance (a) is the smallest

## **ADJUSTING THE FRONT BRAKE**



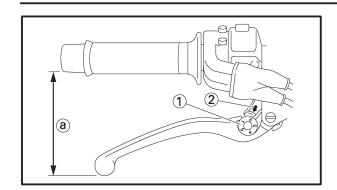

EAS00107

#### **CHASSIS**

#### **ADJUSTING THE FRONT BRAKE**

- 1. Adjust:
  - brake lever position (distance (a) from the throttle grip to the brake lever)

a. While pushing the brake lever forward, turn the adjusting dial ① until the brake lever is in the desired position.

#### NOTE: -

Be sure to align the setting on the adjusting dial with the arrow mark ② on the brake lever holder.

Position #1	Distance (a) is the larg-
1 osition #1	est.
Position #5	Distance (a) is the small-
F OSITION #5	est.




#### **CARBURETOR**

EAS00507

# AIR INDUCTION SYSTEM AIR INJECTION

The air induction system burns unburned exhaust gases by injecting fresh air (secondary air) into the exhaust port, reducing the emission of hydrocarbons.

When there is negative pressure at the exhaust port, the reed valve opens, allowing secondary air to flow into the exhaust port. The required temperature for burning the unburned exhaust gases is approximately 600 to 700°C.

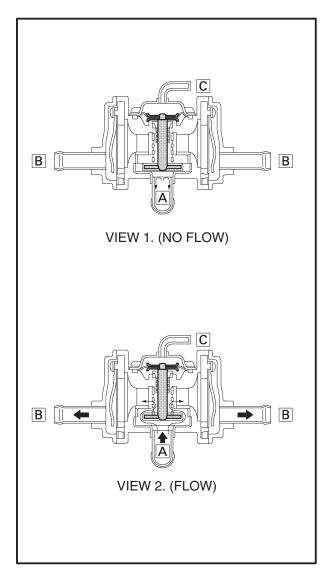

EAS00508

#### **AIR CUTOFF VALVE**

The air cutoff valve is operated by the intake gas pressure through the piston valve diaphragm. Normally, the air cutoff valve is open to allow fresh air to flow into the exhaust port. During sudden deceleration (the throttle valve suddenly closes), negative pressure is generated and the air cutoff valve is closed in order to prevent after-burning.

Additionally, at high engine speeds and when the pressure decreases, the air cutoff valve automatically closes to guard against a loss of performance due to self-EGR.

VIEW 1. (NO FLOW)

When decelerating (the throttle closes), the valve will close.

VIEW 2. (FLOW)

During normal operation the valve is open.


- A From the air cleaner
- B To the cylinder
- C To the carburetor joint

# AIR INDUCTION SYSTEM



EAS00509

#### **AIR INDUCTION SYSTEM DIAGRAMS**

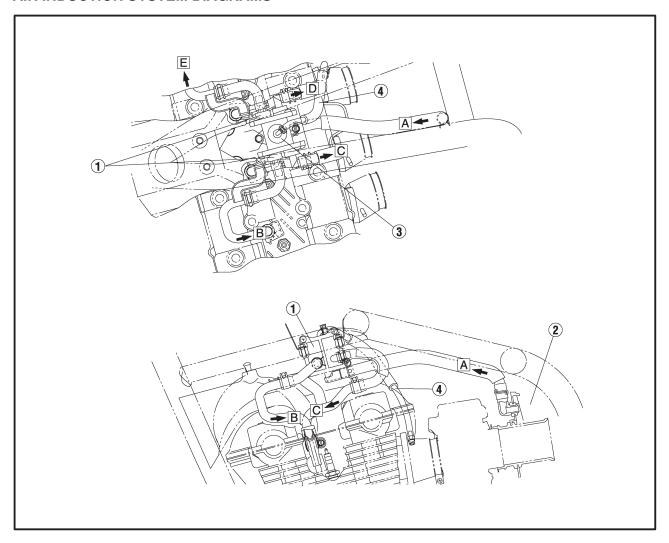

- 1 Reed valve
- (2) Air cleaner
- 3 Air cutoff valve
- 4 Vacuum hose (cylinder #3)
- A To the air cutoff valve
- B To cylinder #1
- C To cylinder #2
  D To cylinder #3
- E To cylinder #4

#### **AIR INDUCTION SYSTEM**




EAS00510

#### **CHECKING THE AIR INDUCTION SYSTEM**

- 1. Check:
  - hoses


Loose connection → Connect properly. Cracks/damage → Replace.

 pipes Cracks/damage → Replace.

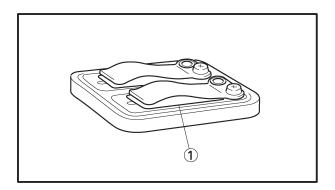

#### 2. Check:

- fibre reed (1)
- fibre reed stopper
- reed valve seat
   Cracks/damage → Replace the reed valve.

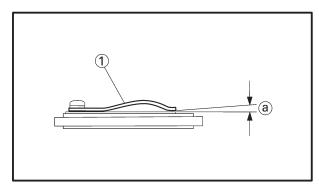


#### 3. Measure:

• fibre reed bending limit ⓐ
Out of specification → Replace the reed valve.




# Fibre reed bending limit 0.2 mm

1 Surface plate

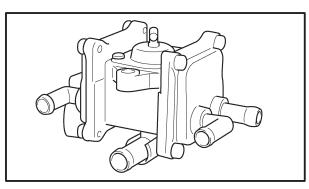

#### 4. Check:

• air cutoff valve Cracks/damage → Replace.

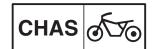


# **CHASSIS**

## **FRONT AND REAR BRAKES**

EAS00586

#### FRONT BRAKE MASTER CYLINDER

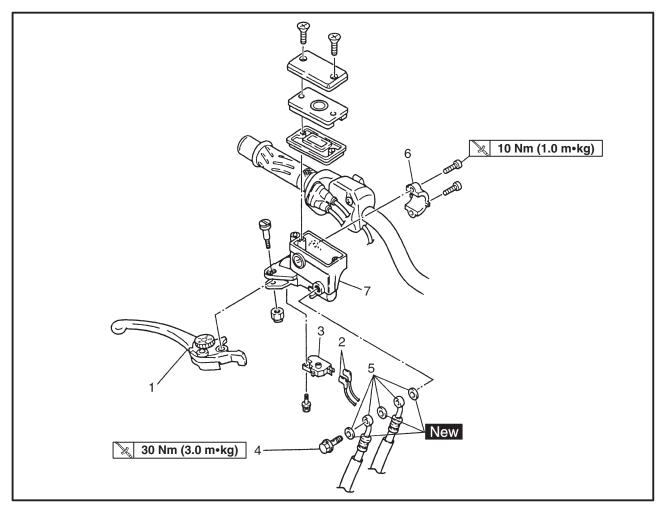

Order	Job/Part	Q'ty	Remarks
1 2 3 4 5 6 7	Removing the front brake master cylinder Brake fluid  Brake lever Brake switch lead Front brake switch Union bolt Copper washers/Brake hose Master cylinder bracket Master cylinder	1 2 1 1 - 3/2 1 1 -	Remove the parts in the order listed. Drain  Refer to "DISASSEMBLING/ASSEMBLING AND INSTALLING THE REAR BRAKE MASTER CYLINDER" in chapter 6. (Manual No.: 5EA3-AE1) For installation, reverse the removal procedure.



EAS00598

ASSEMBLING AND INSTALLING THE FRONT BRAKE MASTER CYLINDER

#### A WARNING

- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components.



# Recommended brake fluid DOT 4

- 1. Install:
- brake master cylinder (1)

#### NOTE: -

- Install the brake master cylinder holder with the "UP" mark facing up.
- Align the end of the brake master cylinder holder with the punch mark (a) on the handlebar.
- First, tighten the upper bolt, then the lower bolt.



# Brake master cylinder bolt 10 Nm (1.0 m•kg)

- 2. Install:
  - copper washers (New) 1
  - brake hose 1 (2)
  - brake hose 2 (3)
  - union bolt (4)



Union bolt 30 Nm (3.0 m•kg)

# **WARNING**


Proper brake hose routing is essential to insure safe motorcycle operation. Refer to "CABLE ROUTING".


#### CAUTION:


- When installing the brake hose 1 ② onto the brake master cylinder, make sure that the brake pipe touches the projection ⓐ as shown. And install the paint mark ⓑ toward the brake master cylinder side.
- Install the brake hose 2 ③ at the same angle as the brake hose 1 ②.

#### NOTE: -

Turn the handlebar to the left and to the right to make sure that the brake hose does not touch other parts (e.g., wire harness, cables, leads). Correct if necessary.

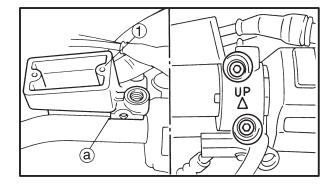

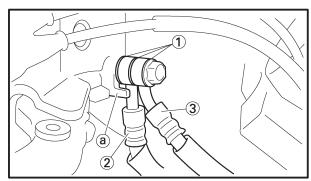

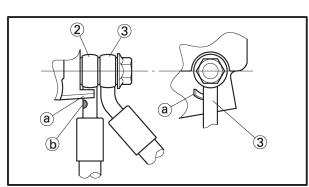



- 3. Fill:
  - brake master cylinder reservoir (with the specified amount of the recommended brake fluid)



Recommended brake fluid DOT 4

### **A** WARNING


- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

#### **CAUTION:**

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

- 4. Bleed:
  - brake system
     Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3. (Manual No.: 5EA3-AE1)
- 5. Check:
  - brake fluid level
    Below the minimum level mark (a) → Add the
    recommended brake fluid to the proper level.
    Refer to "CHECKING THE BRAKE FLUID
    LEVEL" in chapter 3. (Manual No.:
    5EA3-AE1)
- 6. Check:
  - brake lever operation
     Soft or spongy feeling → Bleed the brake system.
     Befor to "BLEEDING THE HYDBALLIC."


Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3. (Manual No.: 5EA3-AE1)

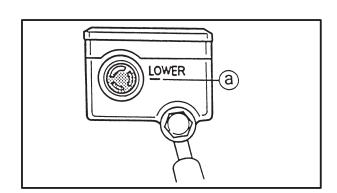




EAS00616

#### **REAR BRAKE CALIPER**

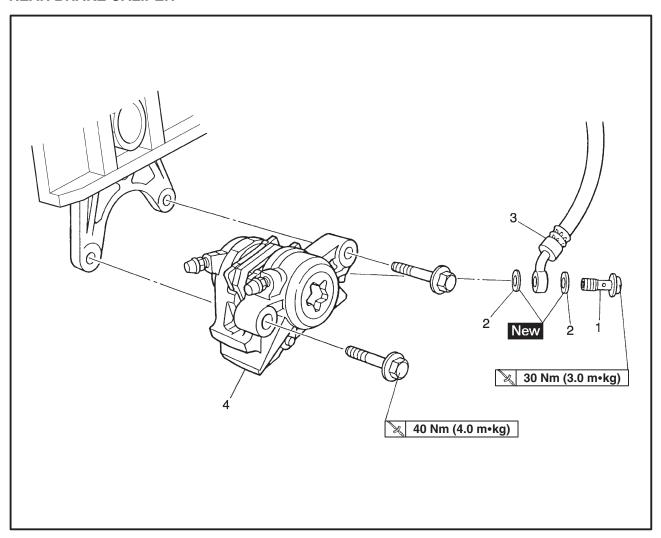

Order	Job/Part	Q'ty	Remarks
1 2 3 4	Removing the rear brake caliper Brake fluid Union bolt Copper washer Brake hose Brake caliper	1 2 1 1	Remove the parts in the order listed. Drain.  For installation, reverse the removal procedure.

EAS00617

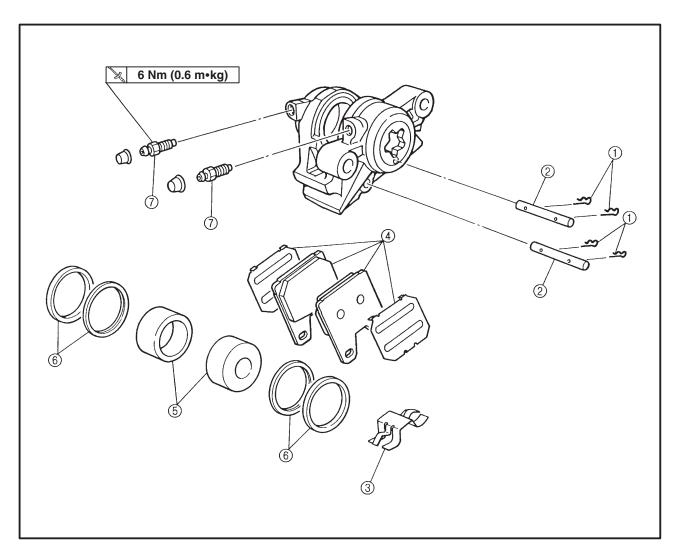


Order	Job/Part	Q'ty	Remarks
① ② ③ ④ ⑤ ⑦	Disassembling the rear brake caliper Brake pad clip Brake pad pin Brake pad spring Brake pad Brake caliper piston Brake caliper piston seal Bleed screw	4 2 1 2 2 4 2	Disassemble the parts in the order listed.  For assembly, reverse the disassembly procedure.

### **CARBURETOR HEATING SYSTEM**



# **ELECTRICAL**

#### **CARBURETOR HEATING SYSTEM**

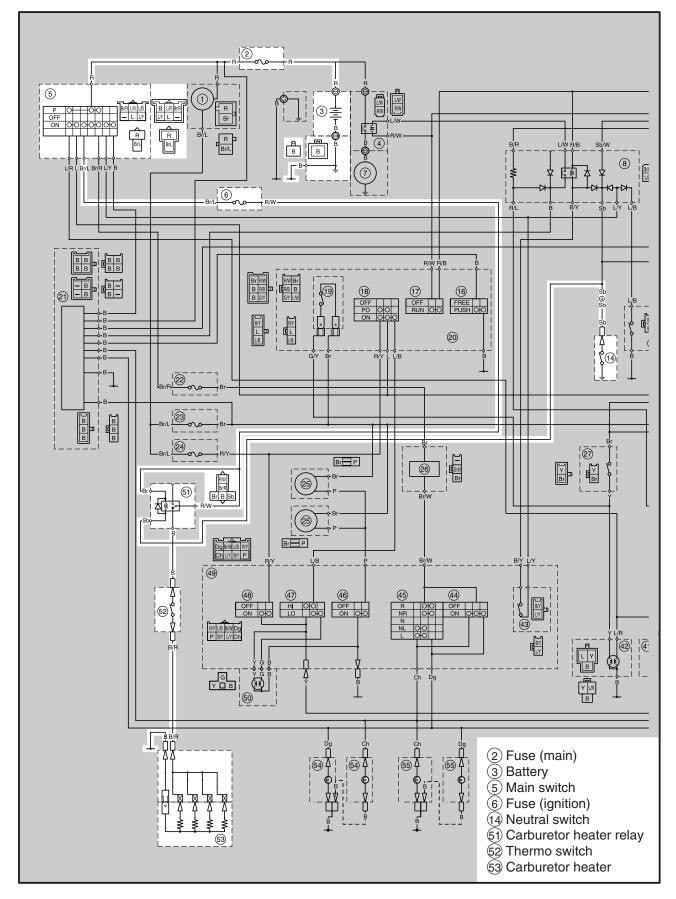

#### CARBURETOR HEATING SYSTEM

**ELEC** 

#### **TROUBLESHOOTING**

The carburetor heating system fails to operate.

#### Check:

- 1. Main and ignition fuses
- 2. Battery
- 3. Main switch
- 4. Neutral switch
- 5. Carburetor heater relay
- 6. Thermo switch
- 7. Carburetor heater
- 8. Wiring connections (of the entire carburetor heating system)

Before troubleshooting, remove the following part(-s):

1) Rider and passenger seats Troubleshoot with the following special tool(-s).



#### Pocket tester 90890-03112

- 1. Main, and ignition fuses
- · Check the main and ignition fuses for continuity.

Refer to "CHECKING THE FUSES" in chapter 3. (Manual No.: 5EA3-AE1)

Are the main and ignition fuses OK?





Replace the fuse(-s).

- 2. Battery
- Check the condition of the battery. Refer to "CHECKING THE BATTERY" in chapter 3. (Manual No.: 5EA3-AE1)



Open-circuit voltage 12.8 V or more at 20°C

Is the battery OK?





- Clean the battery terminals.
- Recharge or replace the battery.

- 3. Main switch
- Check the main switch for continuity. Refer to "CHECKING THE SWITCHES" in chapter 8. (Manual No.: 5EA3-AE1)
- Is the main switch OK?





NO

Replace the main switch.

- 4. Neutral switch
- Check the neutral switch for continuity. Refer to "CHECKING THE SWITCHES" in chapter 8. (Manual No.: 5EA3-AE1)
- Is the neutral switch OK?







NO

Replace the neutral switch.

- 5. Carburetor heater relay
- Disconnect the carburetor heater relay coupler from the wire harness.
- Connect the pocket tester ( $\Omega \times 1$ ) to the carburetor heater relay coupler as shown.

Tester positive probe → red/white (1) Tester negative probe → black ②

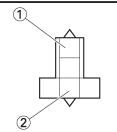

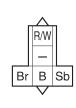

- · Check the carburetor heater relay for no continuity.
- Is the carburetor heater relay OK?





NO

Replace the carburetor heater relay.


#### **CARBURETOR HEATING SYSTEM**




#### 6. Thermo switch

- Remove the thermo switch from the thermo switch plate.
- Connect the pocket tester to the ( $\Omega \times 1$ ) to the thermo switch as shown.

Tester positive probe → black ①
Tester negative probe → black/red ②

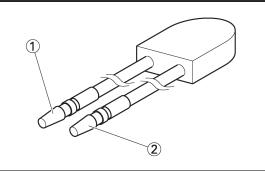

 Check the thermo switch for continuity at the temperatures indicated below.

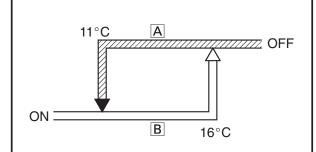



A COOL DOWN

**B HEAT UP** 

Does the thermo switch operated properly?





Replace the thermo switch.

EAS00825

The following procedure applies to all of the carburetor heating elements.

#### 7. Carburetor heater


- Remove the carburetor heating element from the carburetor.
- Connect the pocket tester to the carburetor heating element as shown.

**Tester positive probe** →

heating element (1)

Tester negative probe →

heating element body (2)

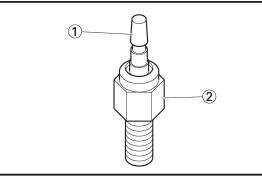

Measure the carburetor heater resistance.



Carburetor heating element resistance

12 V 15 W: 4  $\sim$  11  $\Omega$  at 20°C 12 V 20 W: 4  $\sim$  11  $\Omega$  at 20°C

• Is the carburetor heating element OK?





Replace the carburetor heating element.

EAS00826

#### 8. Wiring

• Check the entire carburetor heating system's wiring.

Refer to "CIRCUIT DIAGRAM".


• Is the carburetor heating system's wiring properly connected and without defects?



NO

Properly connect or repair the carburetor heating system's wiring.

# XJR1300 2002 WIRING DIAGRAM (for EUR)

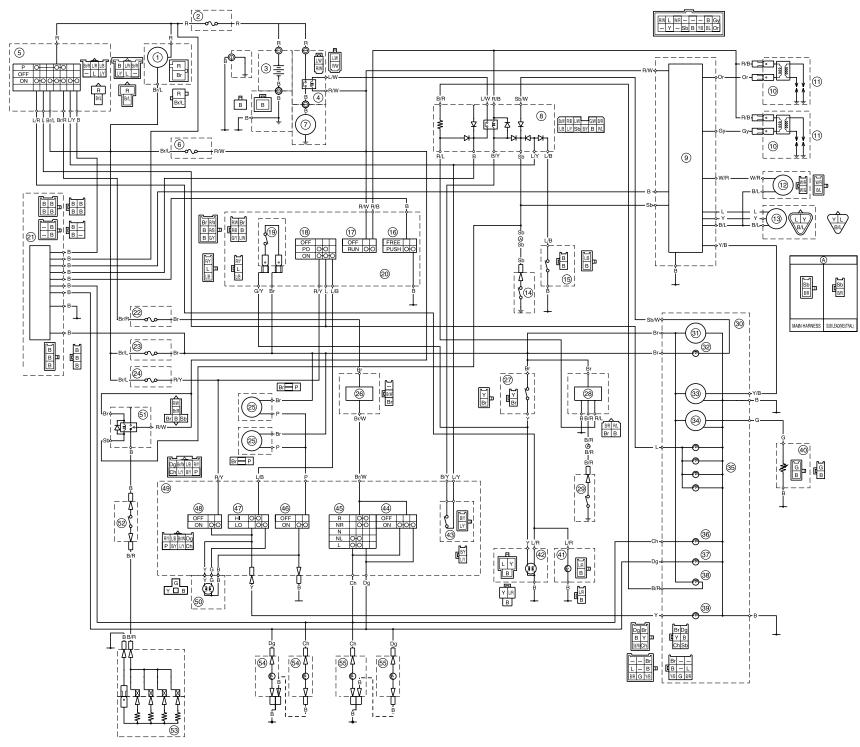


#### **COLOR CODE**

В	Black	0	Orange	Br/L	Brown/Blue	R/L	Red/Blue
Br	Brown	Sb	Sky blue	Br/W .	Brown/White	R/W	Red/White
Ch	Chocolate	Ρ	Pink	G/Y	Green/Yellow	R/Y	Red/Yellow
Dg	Dark green	R	Red	L/B	Blue/Black	W/G	White/Green
G	Green	Υ	Yellow	L/R	Blue/Red	W/R	White/Red
Gy	Gray	B/L	Black/Blue	L/W	Blue/White	Y/B	Yellow/Black
L	Blue	B/R	Black/Red	L/Y	Blue/Yellow		
Lg	Light green	B/Y	Black/Yellow	R/B	Red/Black		

- AC generator
   Fuse (main)
- 3 Battery
- (4) Starter relay
- (5) Main switch
- 6 Fuse (ignition)
- 7 Starter motor
- 8 Starting circuit cut-off relay
- 9 Ignitor unit
- (10) Ignition coil
- (11) Spark plug
- 12 Pickup coil
- 13 TPS (throttle position sensor)
- 14) Neutral switch
- 15 Sidestand switch
- 16 Start switch
- (17) Engine stop switch
- 18 Lights switch
- (19) Front brake switch
- Handlebar switches (right)
- 21) Alarm
- 22 Fuse (turn)
- 23 Fuse (signal)
- 24) Fuse (headlight)
- 25 Horn
- 26 Flasher relay
- 27 Rear brake switch
- 28 Oil level relay
- 29 Oil level switch
- 30 Meter assembly
- 31) Speedometer
- 32 Neutral indicator light
- 33 Tachometer 34 Fuel gauge
- 35 Meter lights
- 36 Turn signal indicator light (left)
- (37) Turn signal indicator light (right)
- 38 Oil warning light
- 39 High beam indicator light
- 40 Fuel sender
- 41) Auxiliary light
- 42 Tail/brake light
- 43 Clutch switch
- 44 Hazard switch
- 45) Turn signal switch
- 46 Horn switch
- 47 Dimmer switch
- 48 Pass switch
- 49 Handlebar switch (left)
- 60 Headlight
- (51) Carburetor heater relay
- 52 Thermo switch
- 53 Carburetor heater
- (54) Rear turn signal lights
- (55) Front turn signal lights

# XJR1300P 2002 WIRING DIAGRAM (for AUS)

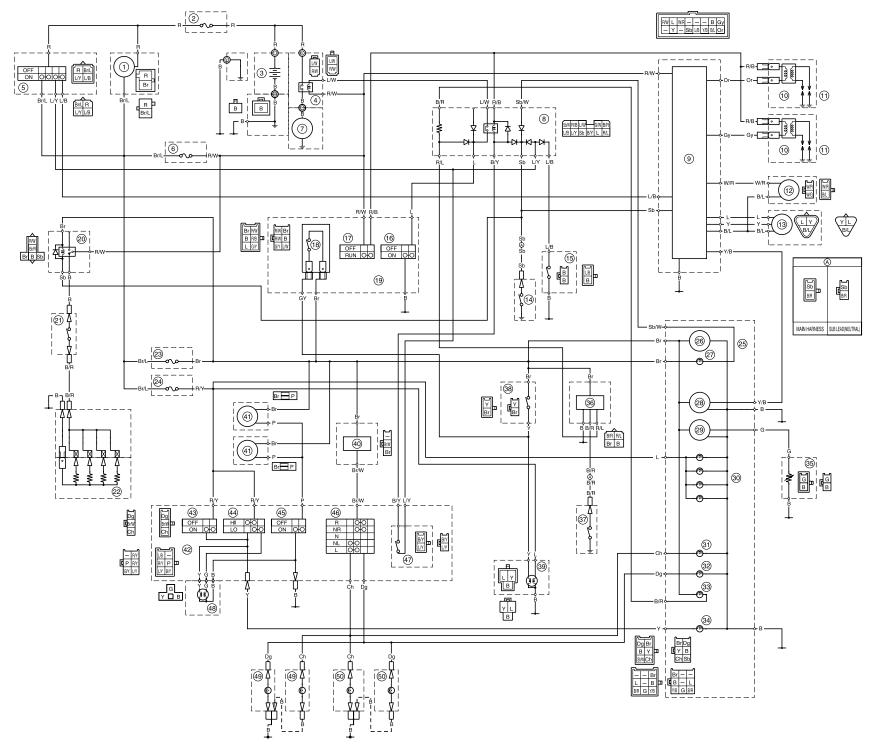

R/L .. Red/Blue R/W .. Red/White R/Y .. Red/Yellow W/G.. White/Green W/R .. White/Red Y/B .. Yellow/Black

#### **COLOR CODE**

OOLO.	I OODL				
В	Black	0	Orange	Br/L	Brown/Blue
Br	Brown	Sb	Sky blue	Br/W .	Brown/White
Ch	Chocolate	Ρ	Pink	G/Y	Green/Yellow
Dg	Dark green	$R \ldots \ldots$	Red	L/B	Blue/Black
G	Green	Υ	Yellow	L/R	Blue/Red
Gy	Gray	B/L	Black/Blue	L/W	Blue/White
L	Blue	B/R	Black/Red	L/Y	Blue/Yellow
Lg	Light green	B/Y	Black/Yellow	R/B	Red/Black

- 1 AC generator
- 2 Fuse (main)
- (3) Battery
- (4) Starter relay
- (5) Main switch
- (6) Fuse (ignition)
- (7) Starter motor
- 8 Starting circuit cut-off relay
- 9 Ignitor unit
- 10 Ignition coil
- (11) Spark plug
- (12) Pickup coil
- 13 TPS (throttle position sensor)
- (14) Neutral switch
- 15 Sidestand switch
- 16 Start switch
- 17 Engine stop switch
- (18) Front brake switch
- 19 Handlebar switches (right)
- 20 Carburetor heater relay
- (21) Thermo switch
- 22 Carburetor heater
- 23 Fuse (signal)
- 24) Fuse (headlight)
- 25 Meter assembly
- 26 Speedometer
- Neutral indicator light
- 28 Tachometer
- 29 Fuel gauge
- 30 Meter lights
- 31 Turn signal indicator light (left)
  32 Turn signal indicator light (right)
- 33 Oil warning light
- 34 High beam indicator light
- 35 Fuel sender
- 36 Oil level relay
- 37 Oil level switch
- 38 Rear brake switch
- 39 Tail/brake light
- 40 Flasher relay
- 41) Horn
- 42 Handlebar switch (left)
- 43 Pass switch
- (44) Dimmer switch
- 45) Horn switch
- 46 Turn signal switch
- 47) Clutch switch
- 48 Headlight
- 49 Rear turn signal lights
- 50 Front turn signal lights